

8. Level 3 Repair

8-1. Components Layout

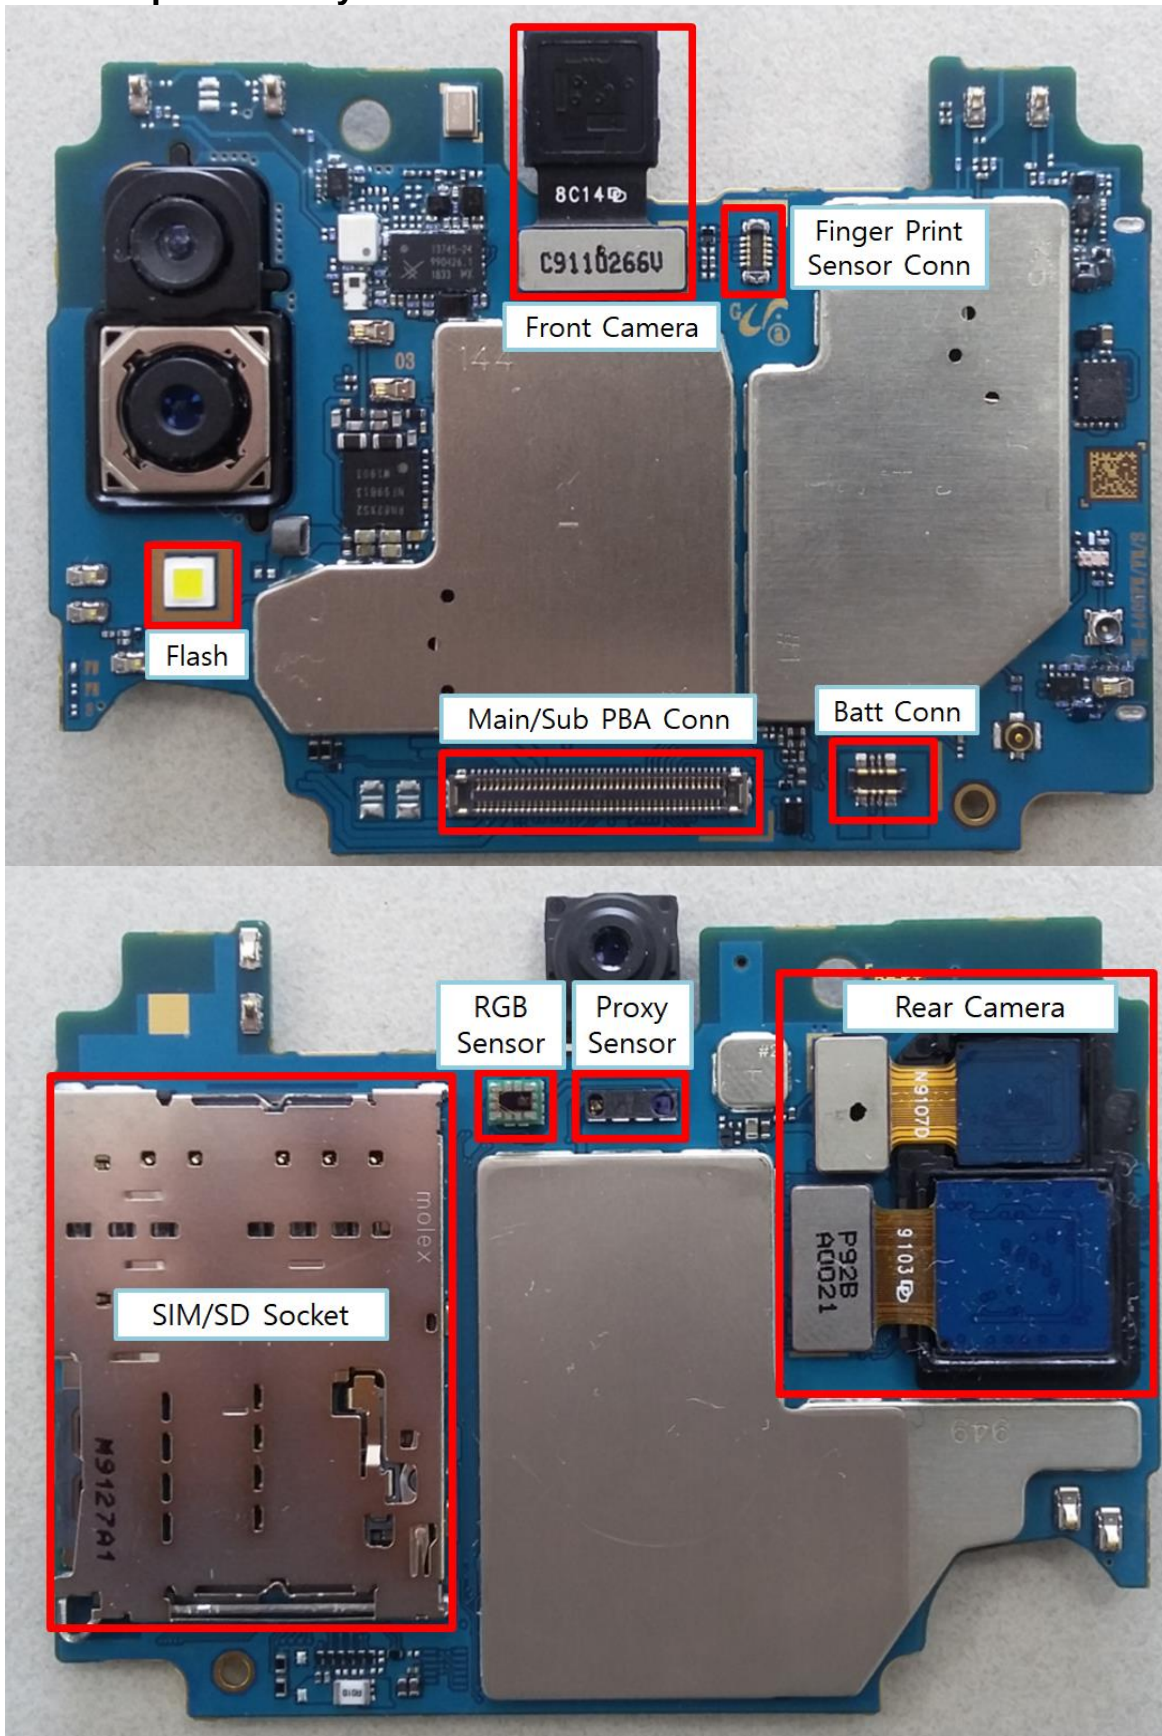


Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


SM-A405FN Block Diagram

Confidential

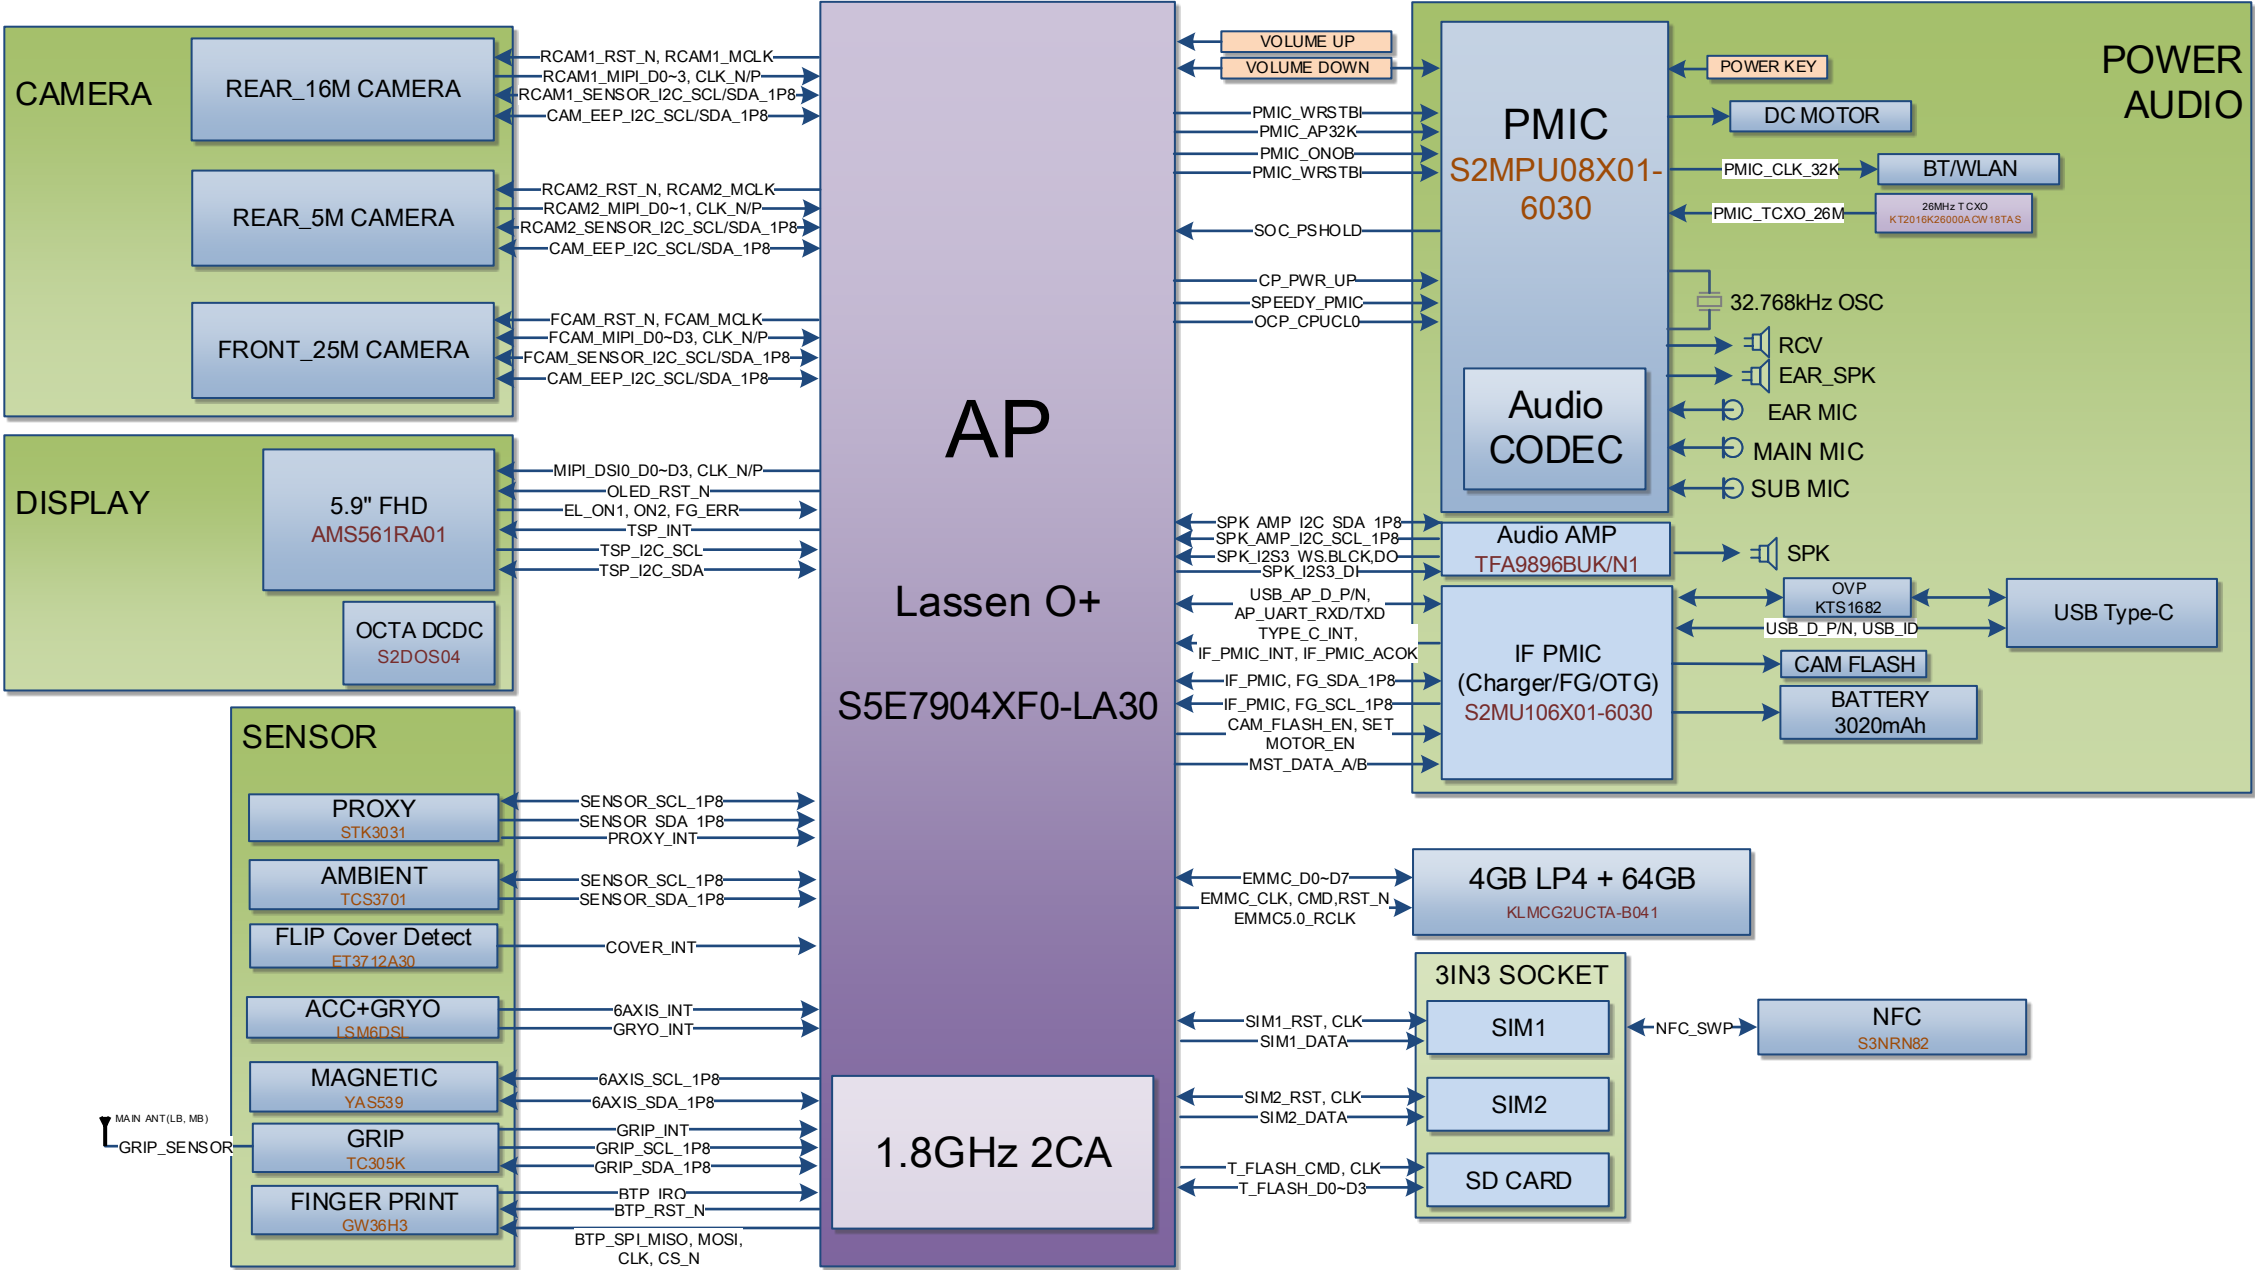




SM-A405FN Block Diagram

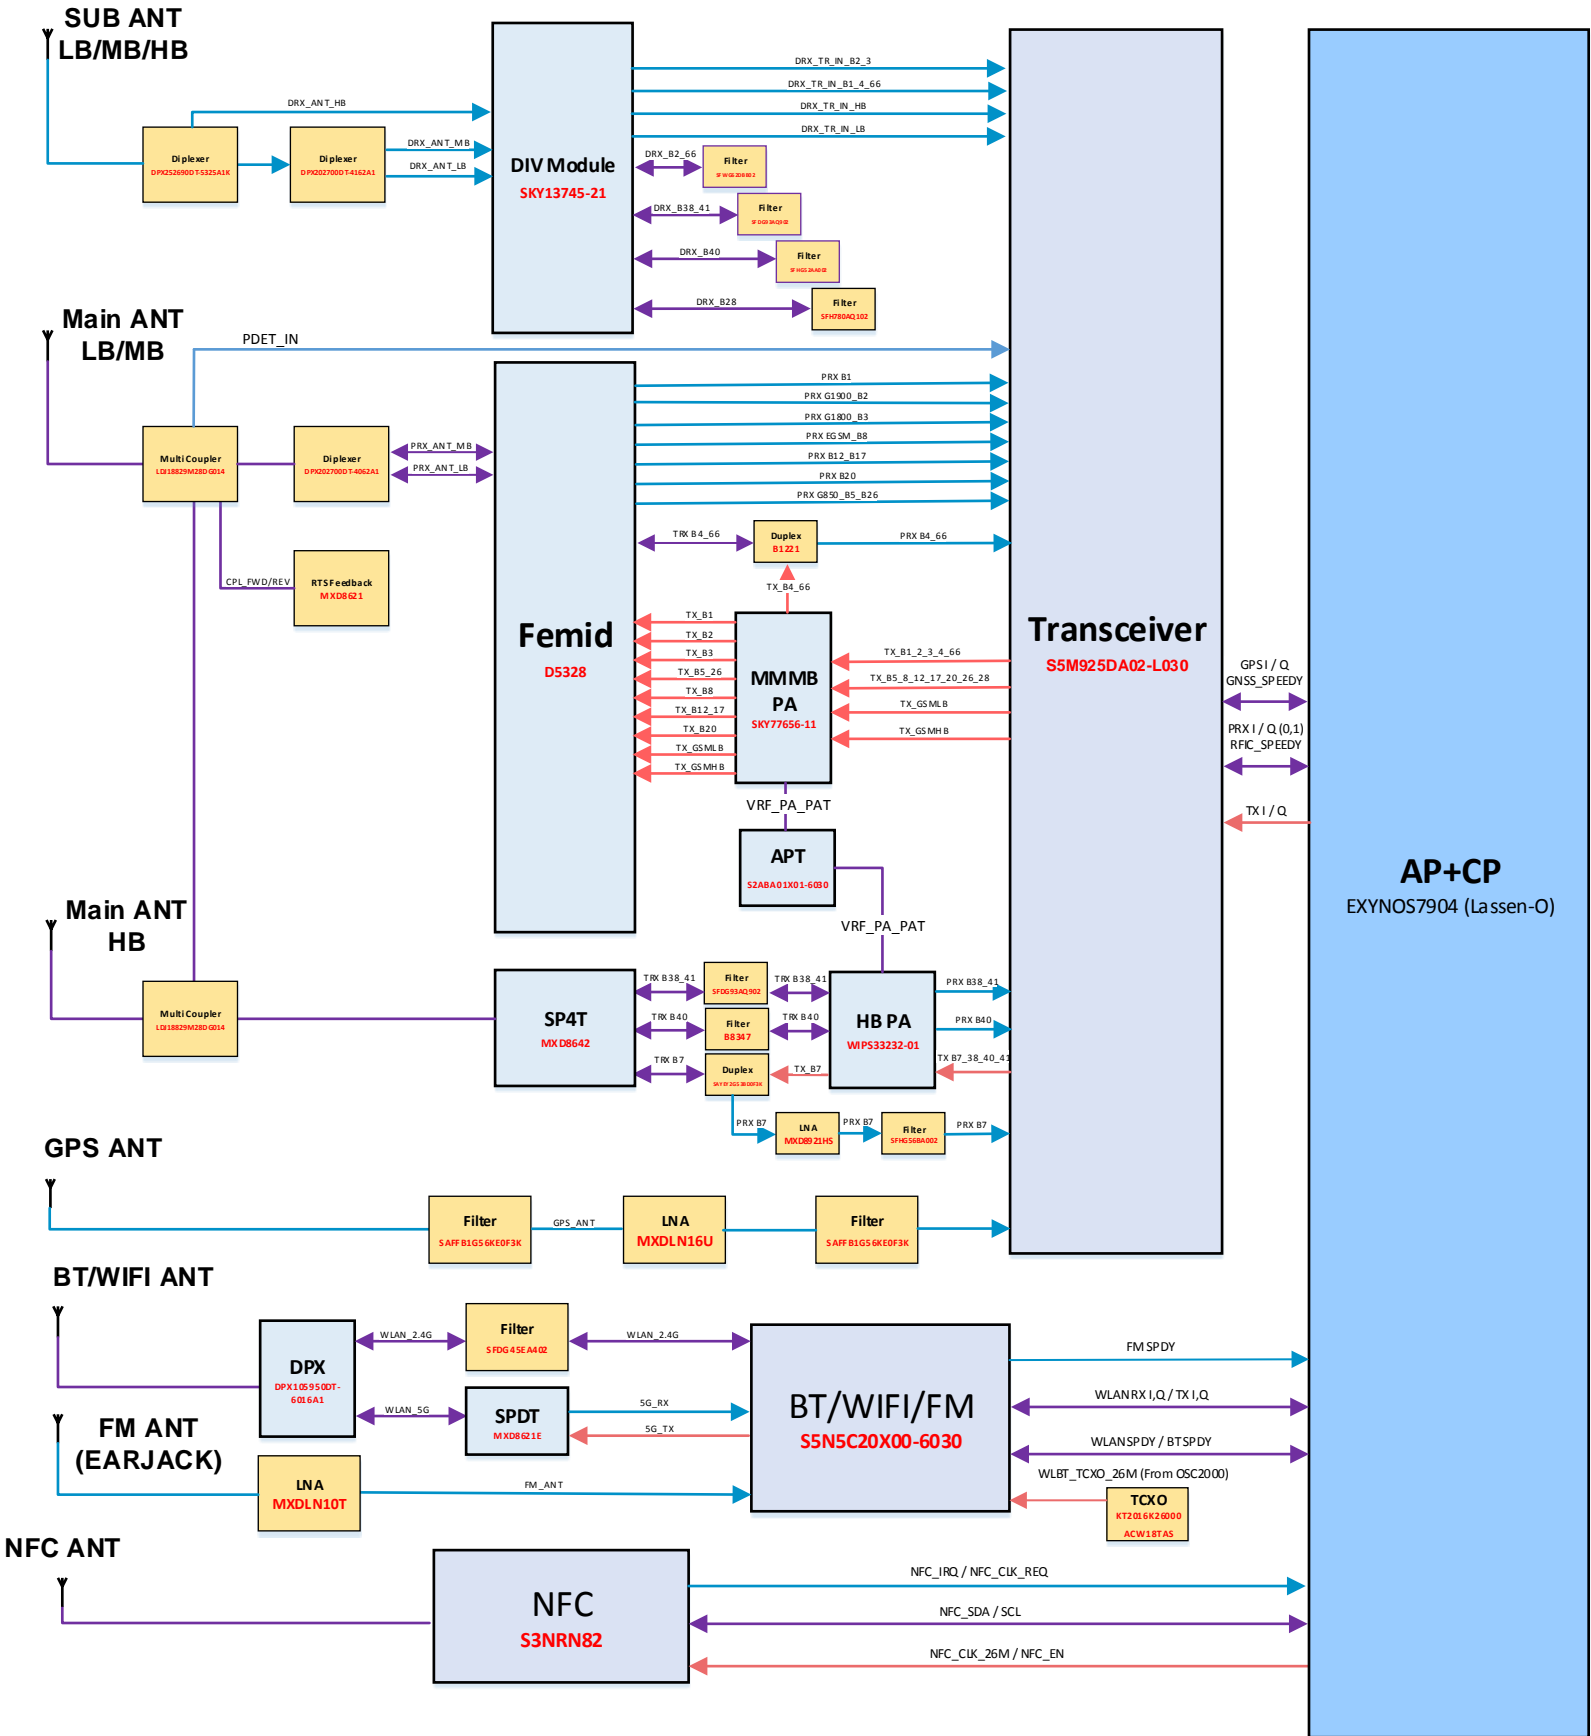


SM-A405FN Block Diagram

Confidential

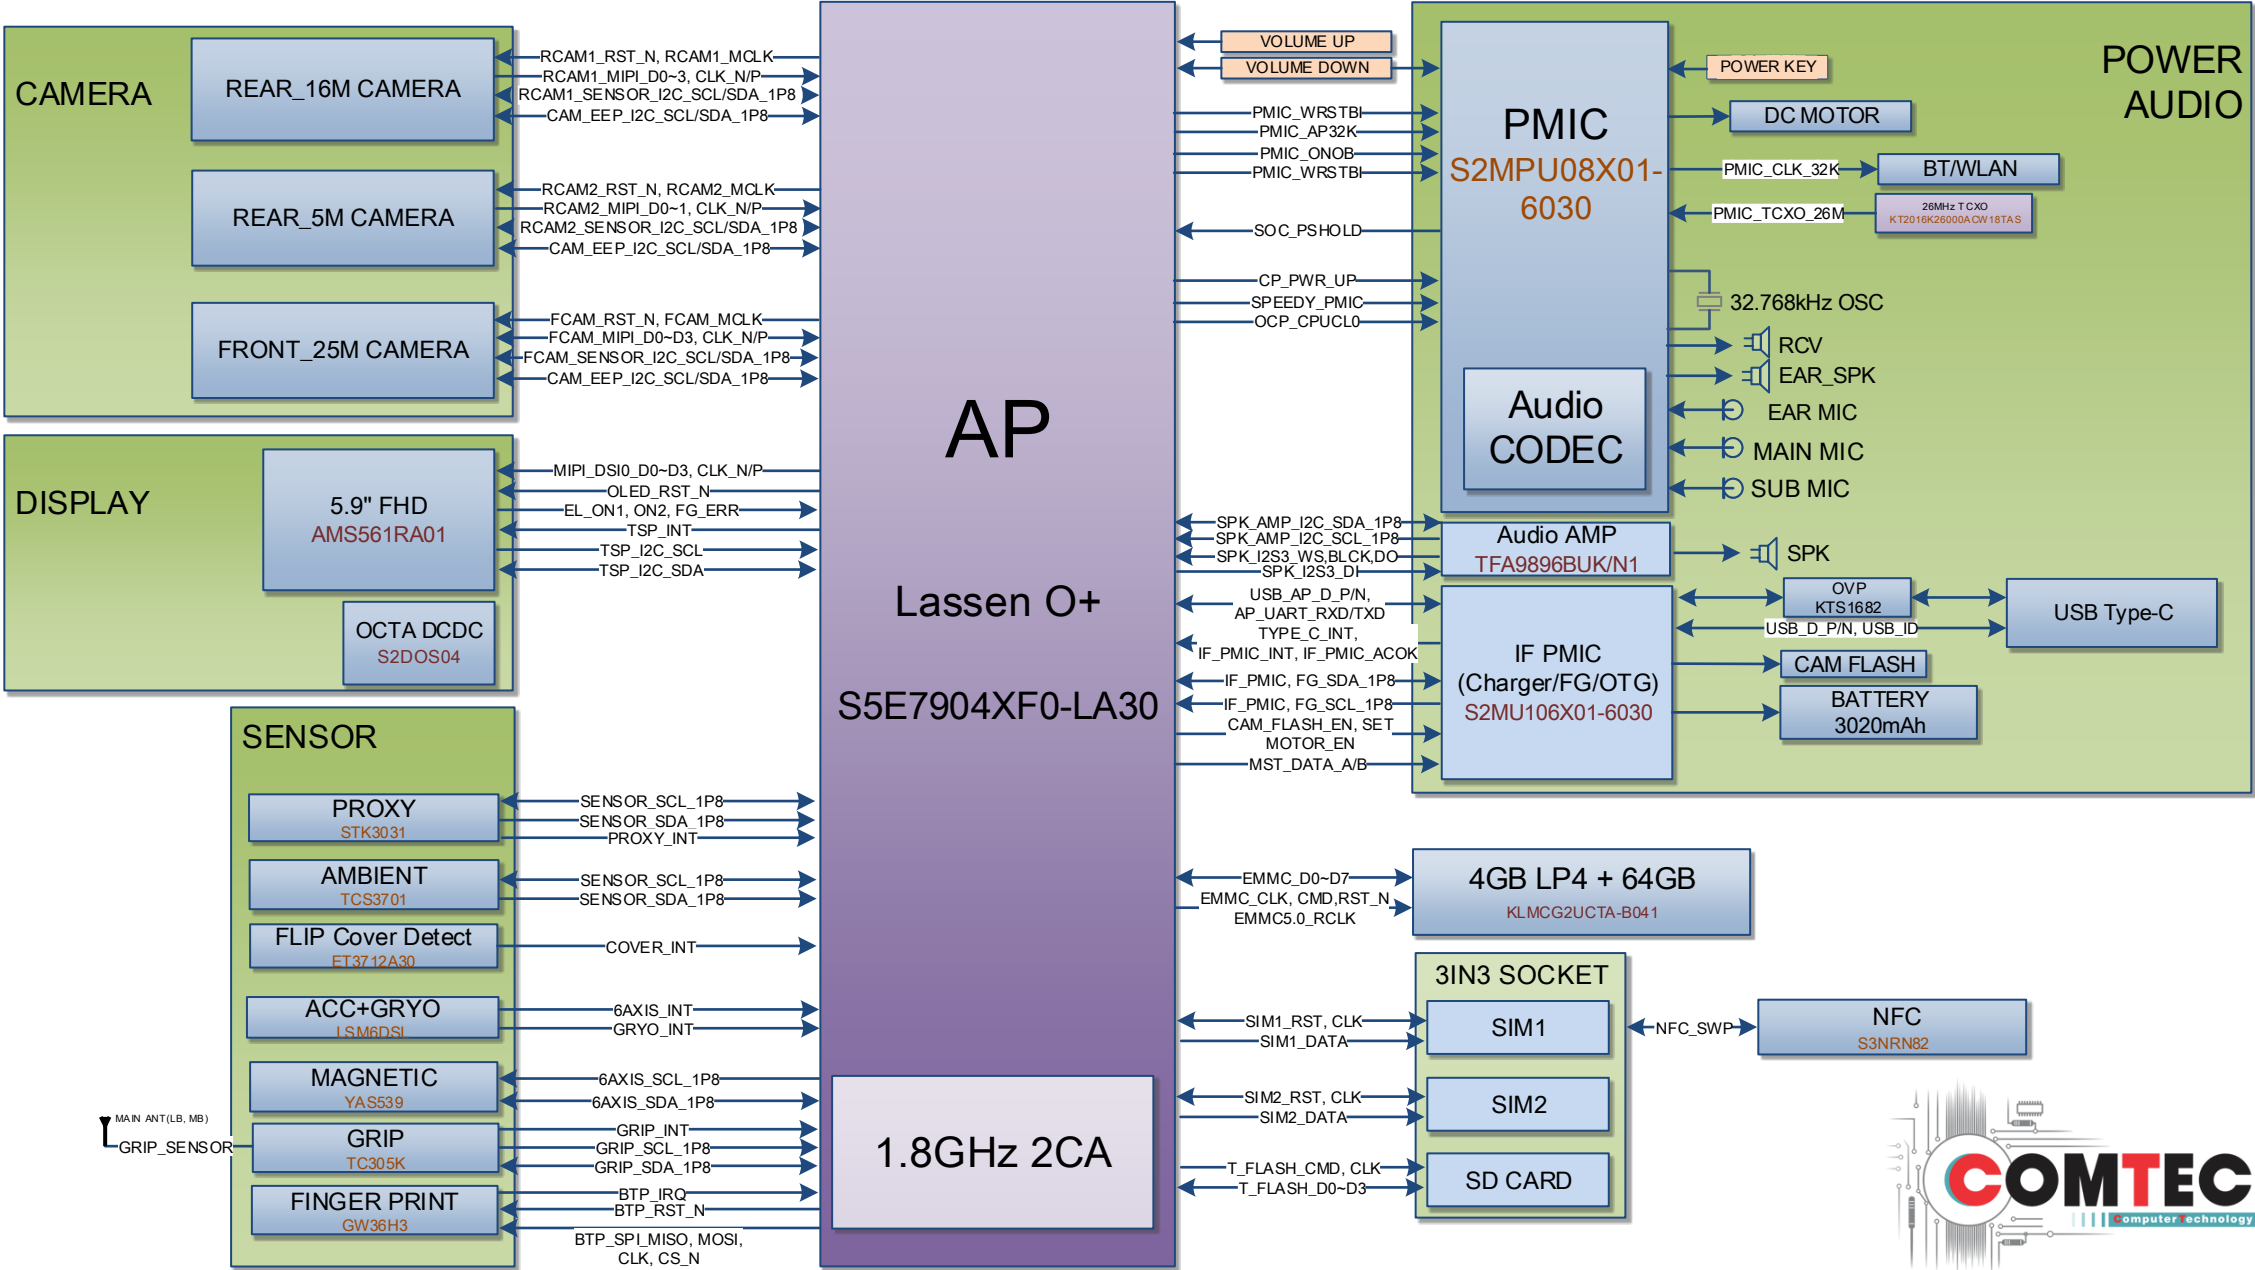




SM-A405FM Block Diagram

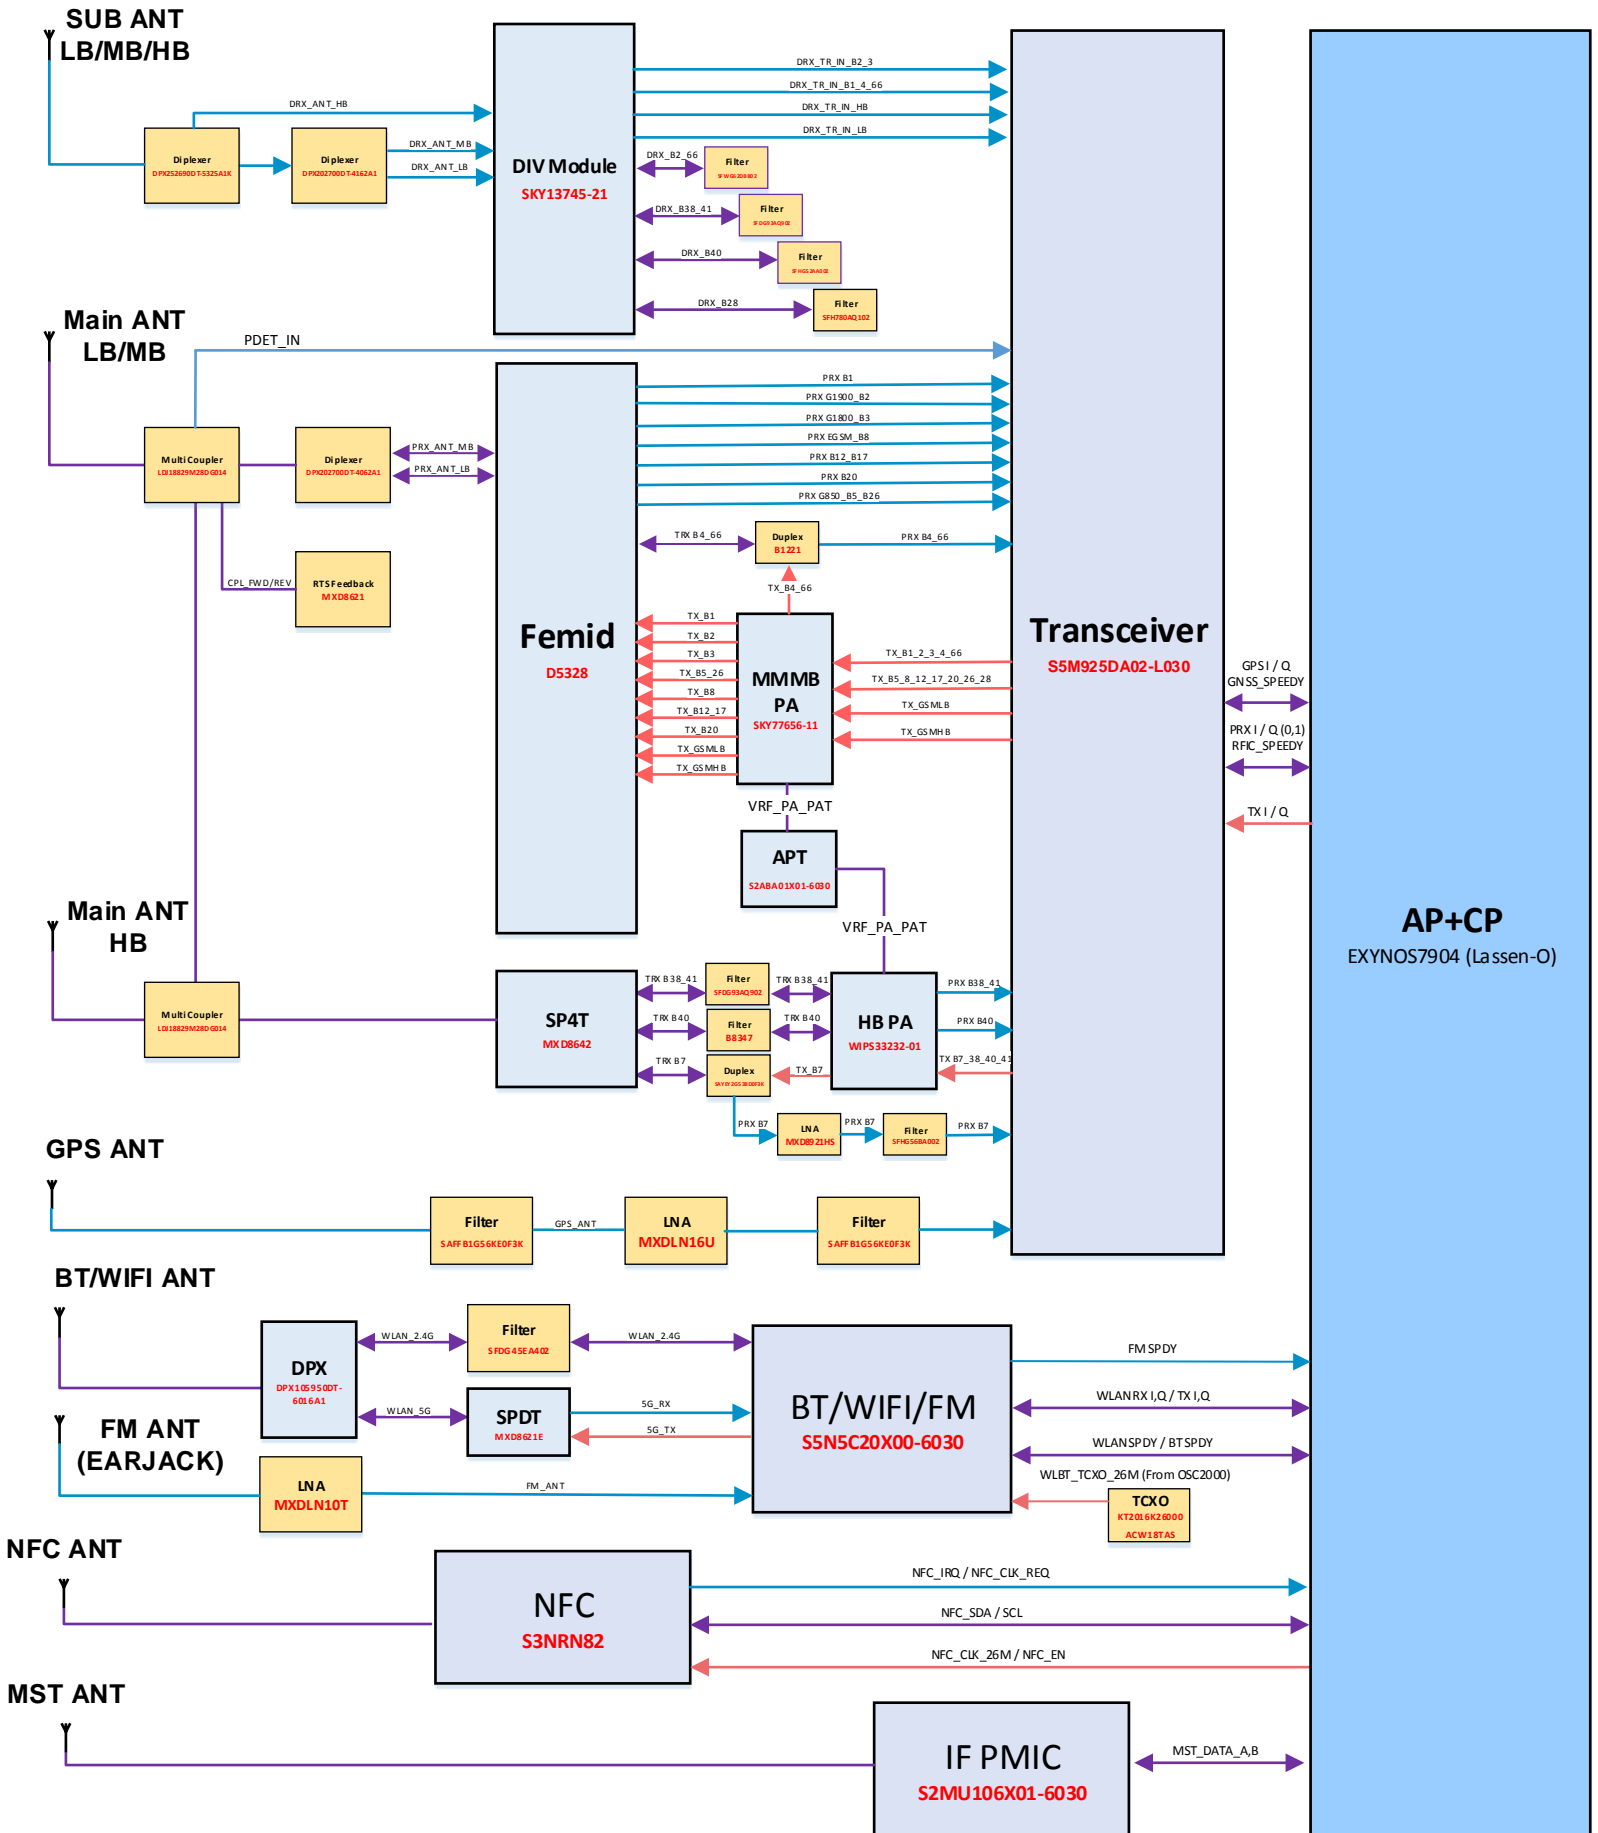

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

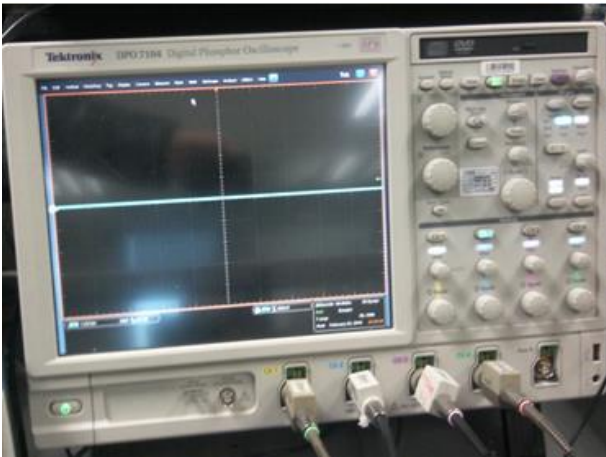

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

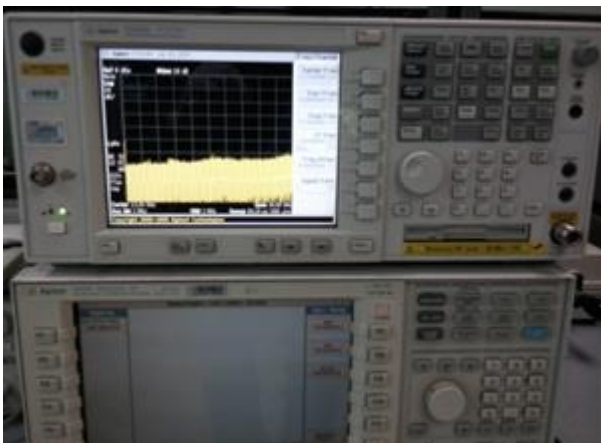


8960 & Spectrum Analyzer



Soldering iron

8. Level 3 Repair


8-4-1. Power On

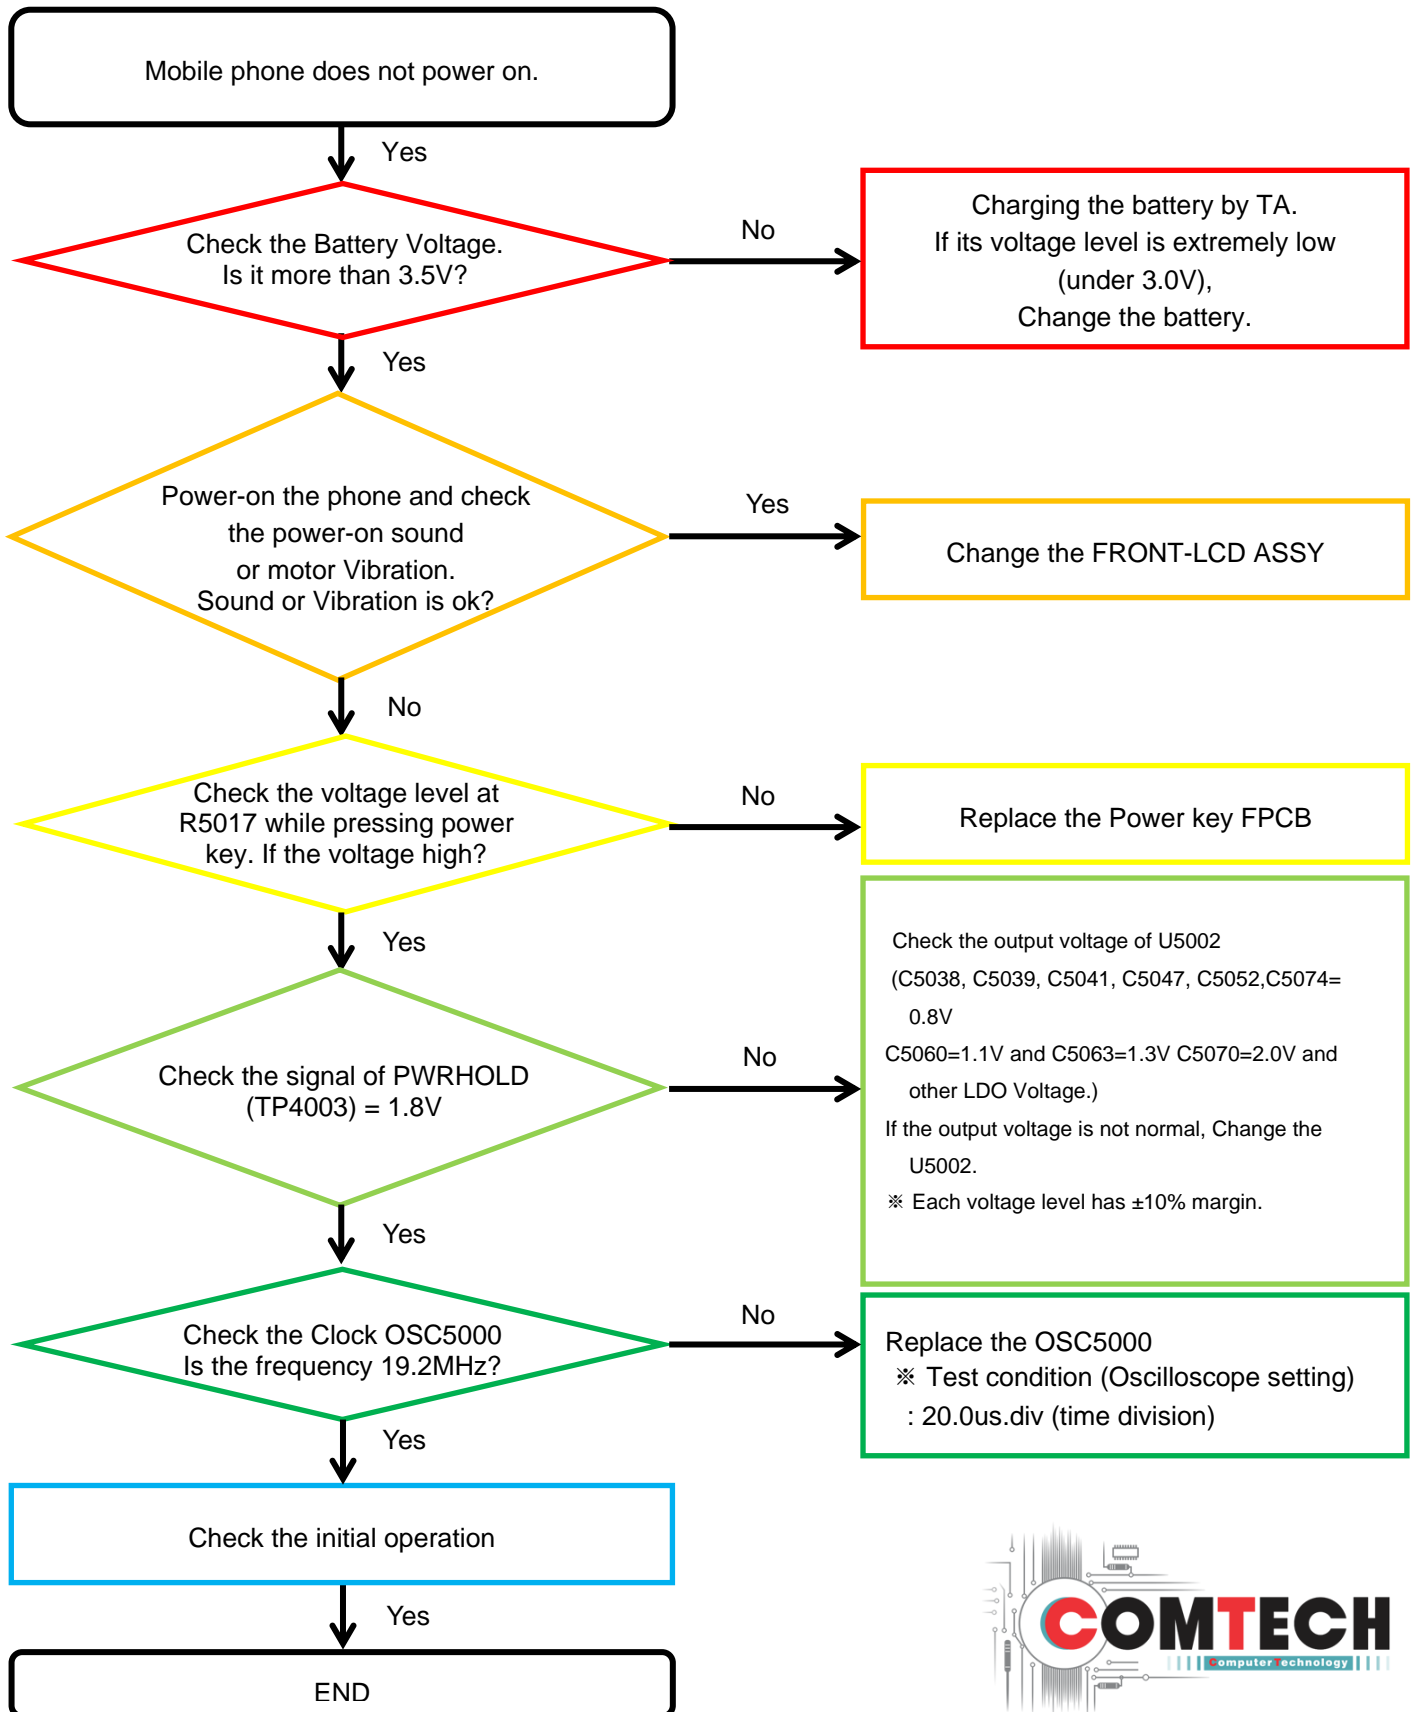

tamiraat.com منبع مقاله


8. Level 3 Repair

8-4-2. Initial

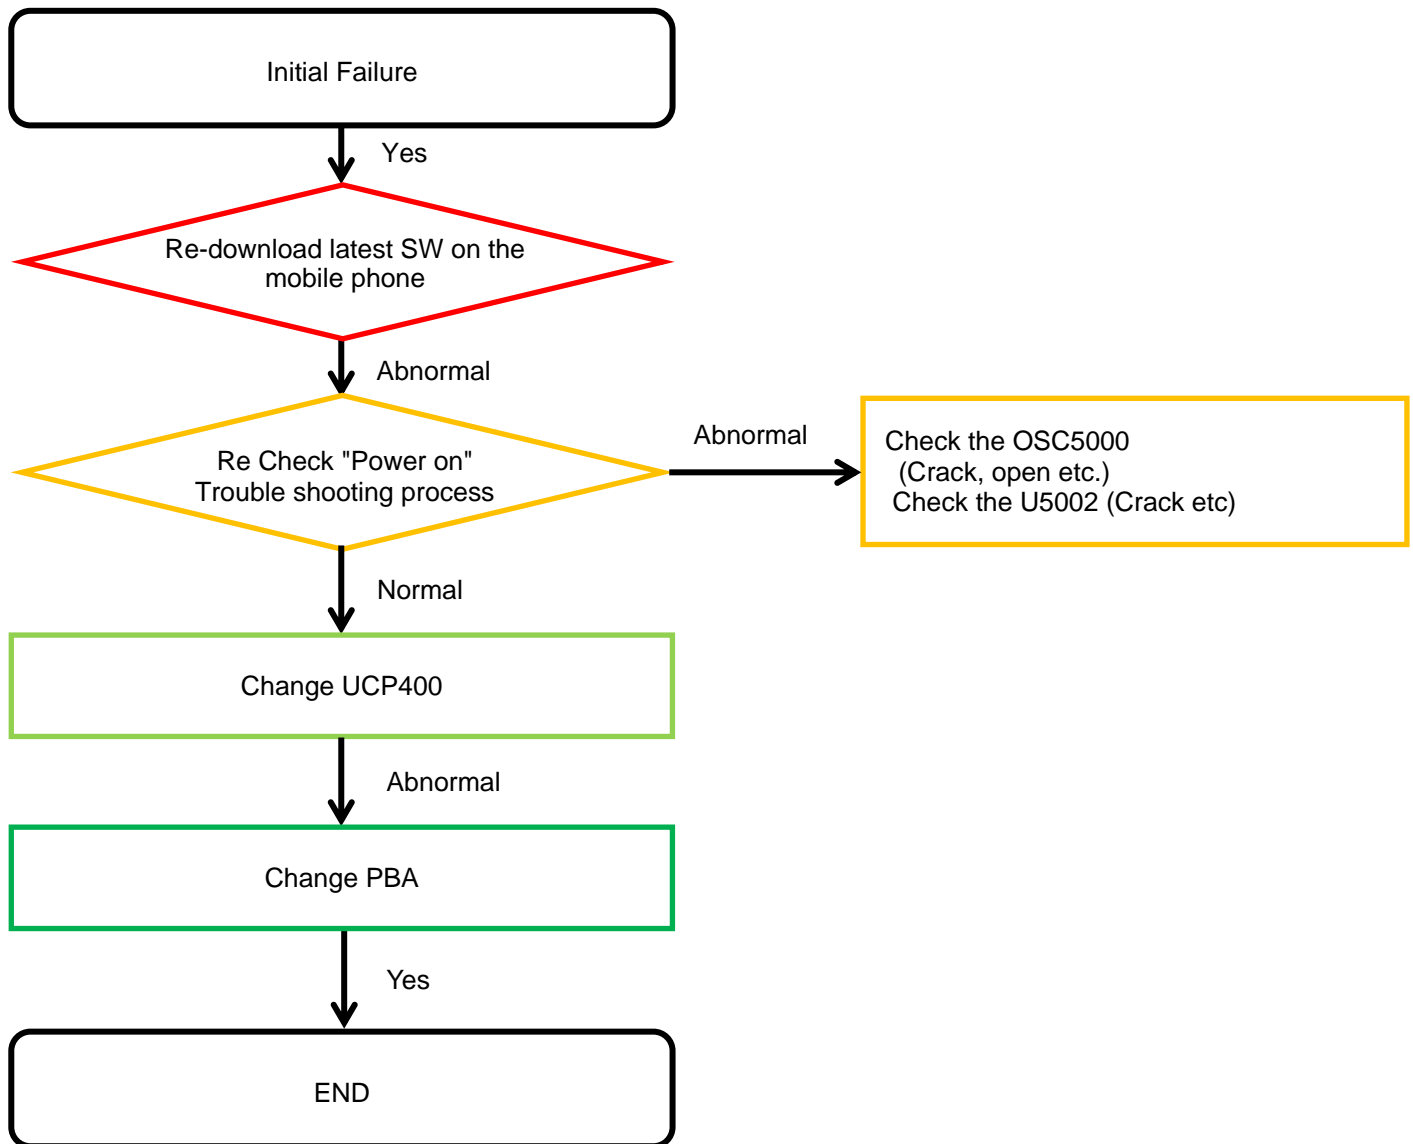


8. Level 3 Repair

8-4-3. No Service

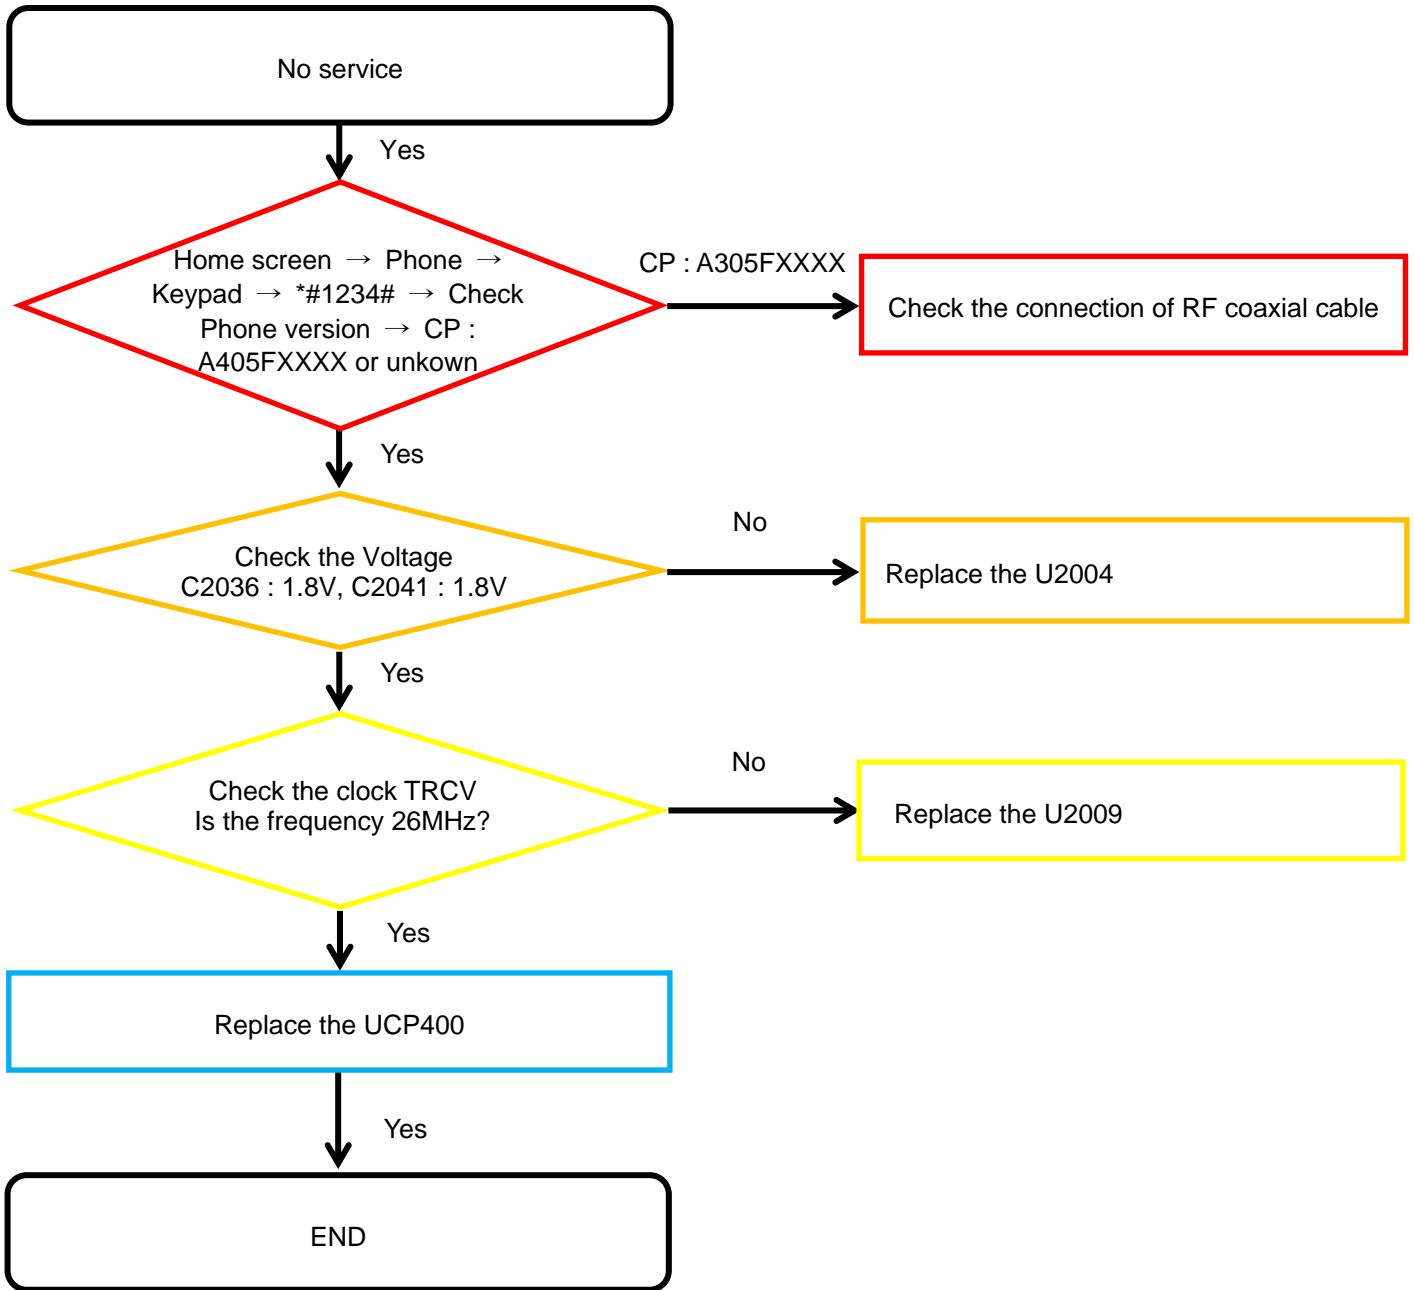


8. Level 3 Repair

8-4-4. SIM Part

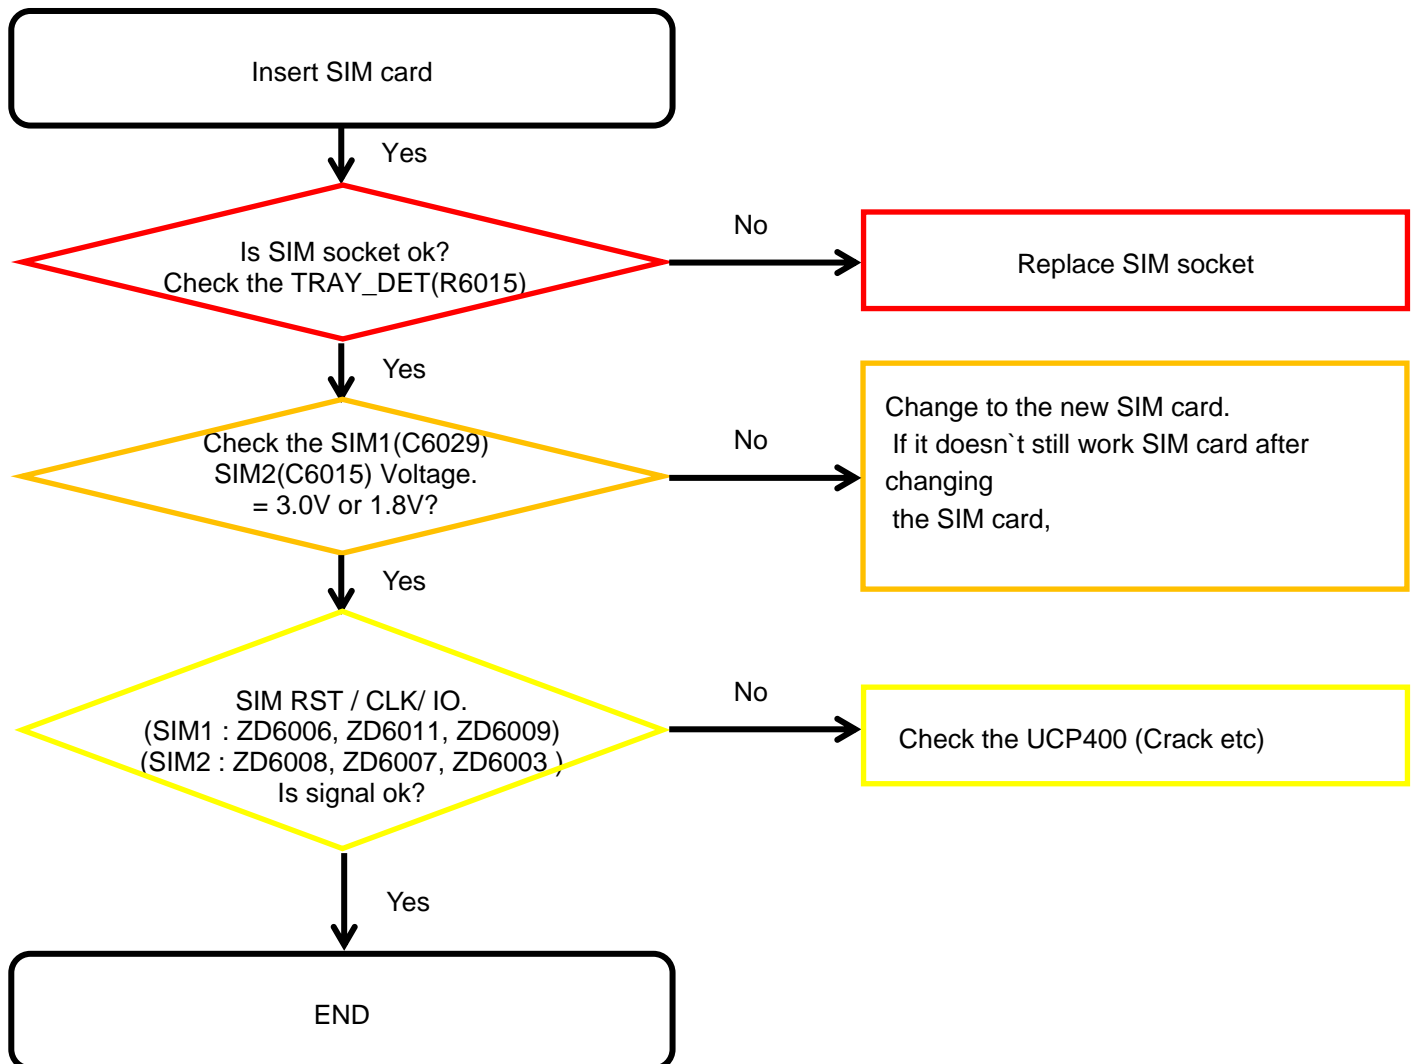


8. Level 3 Repair

8-4-5. T-Flash Part

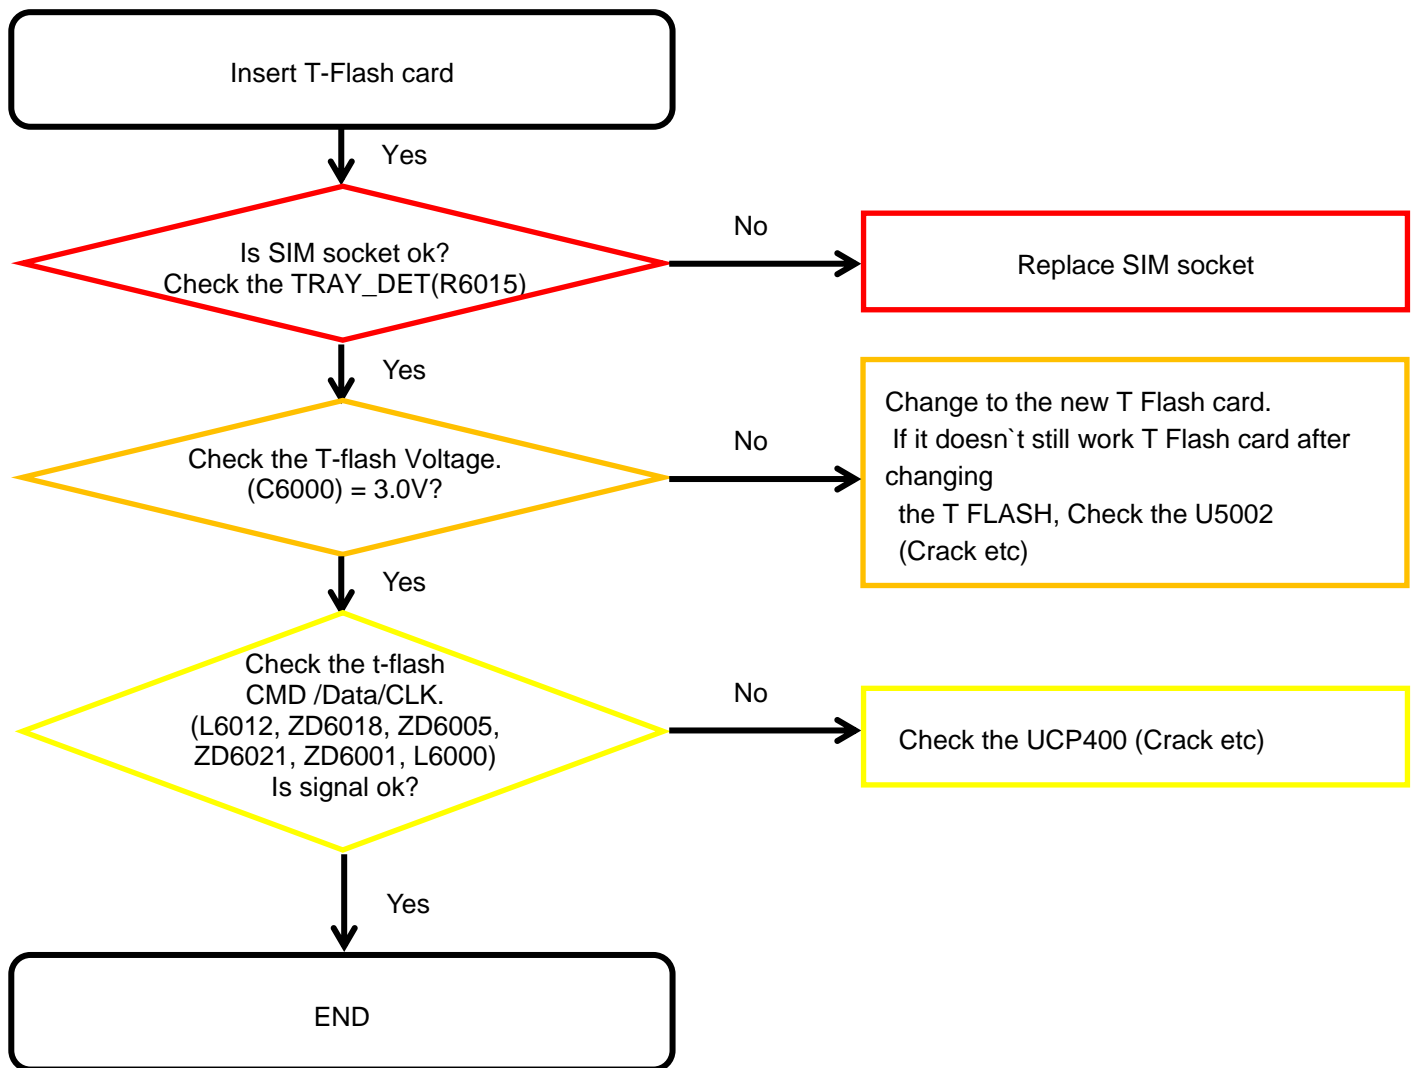


8. Level 3 Repair

8-4-6. Cable Charging Part

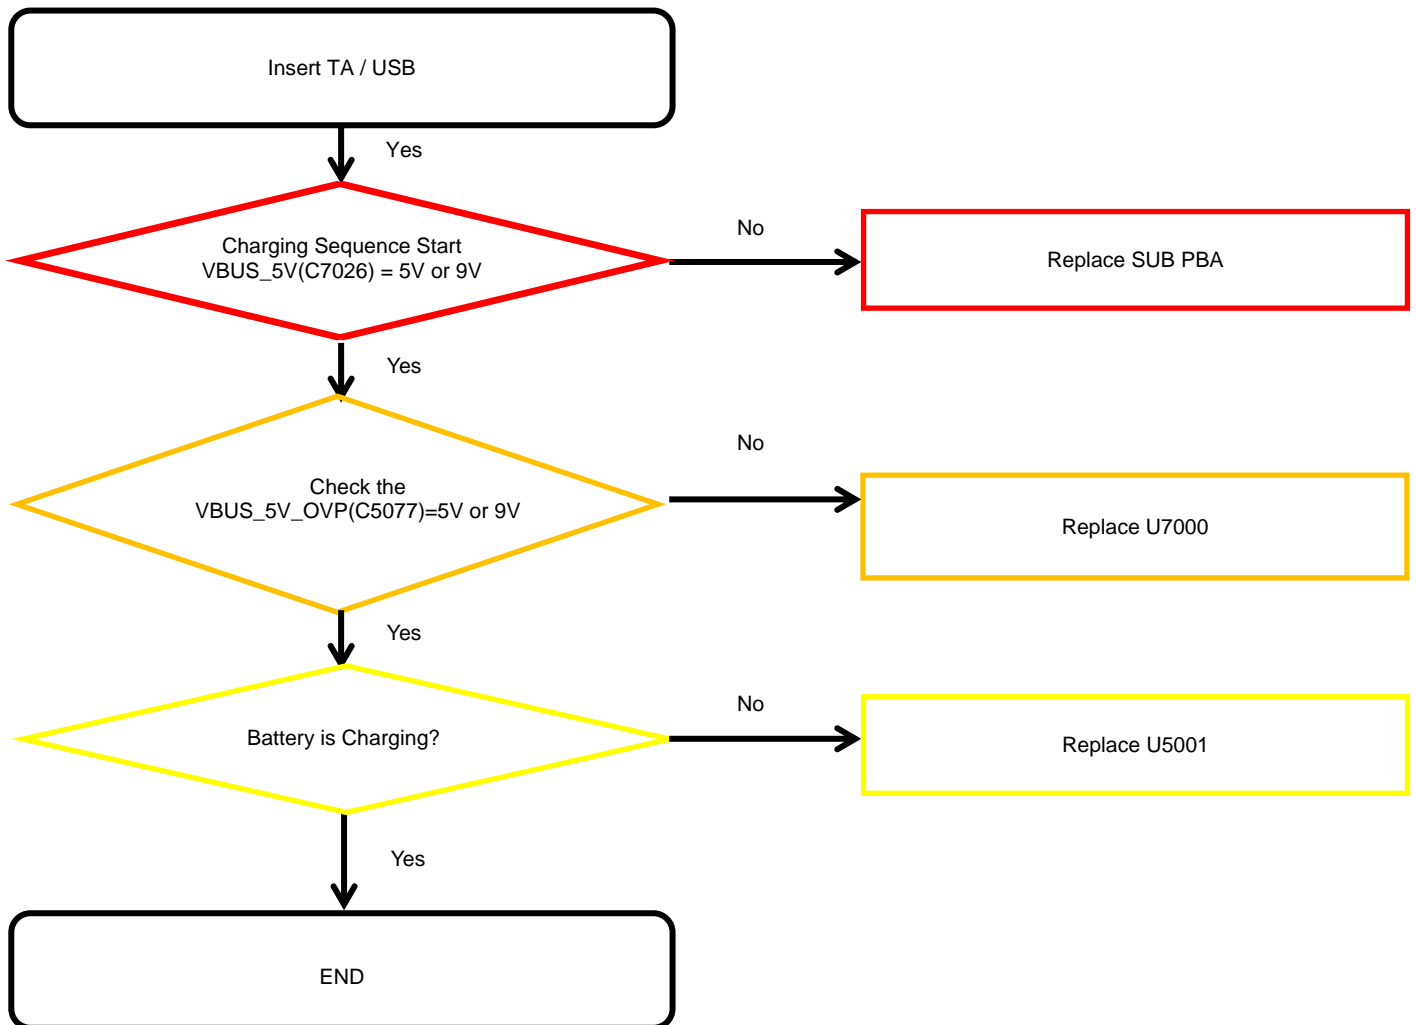


8. Level 3 Repair

8-4-7-1. 6AXIS (Accelerator+Gyro) Sensor

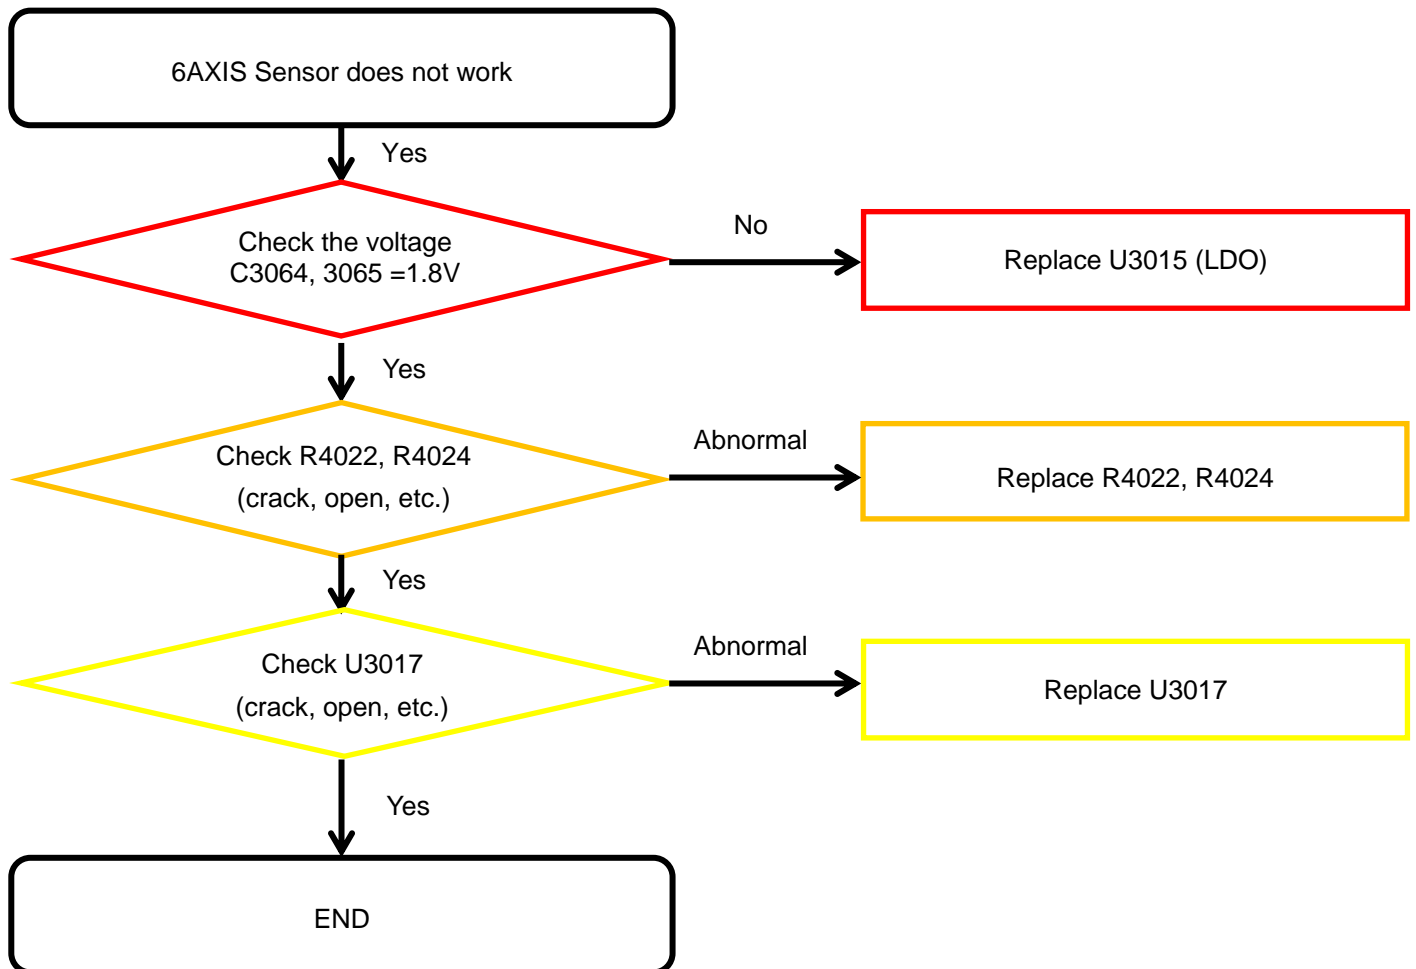


8. Level 3 Repair

8-4-7-2. Proximity sensor

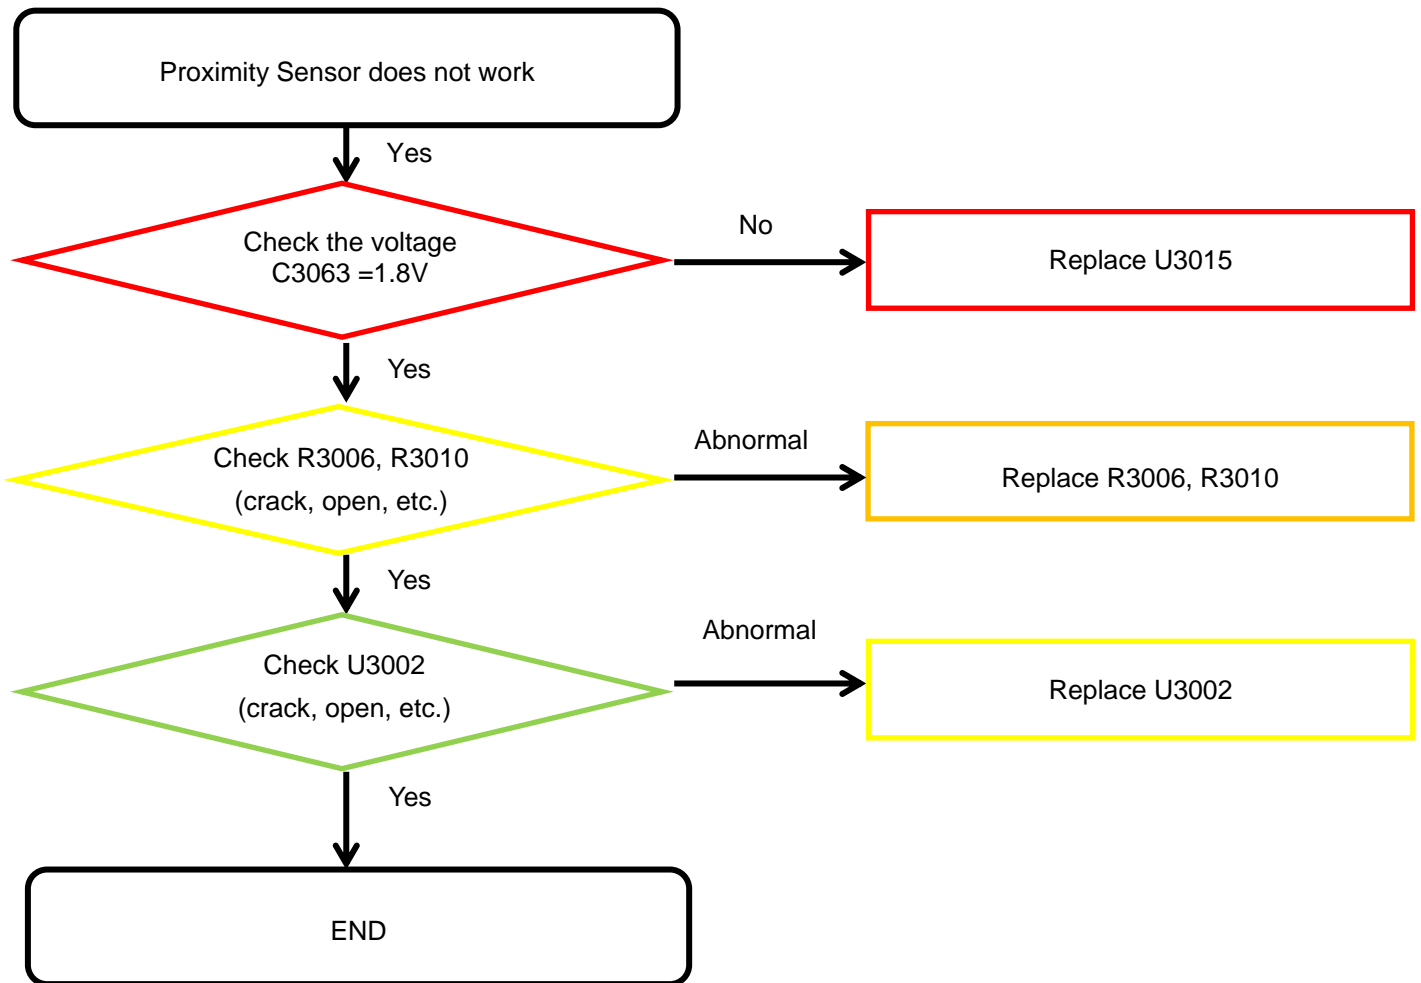


8. Level 3 Repair

8-4-7-3. Magnetic sensor

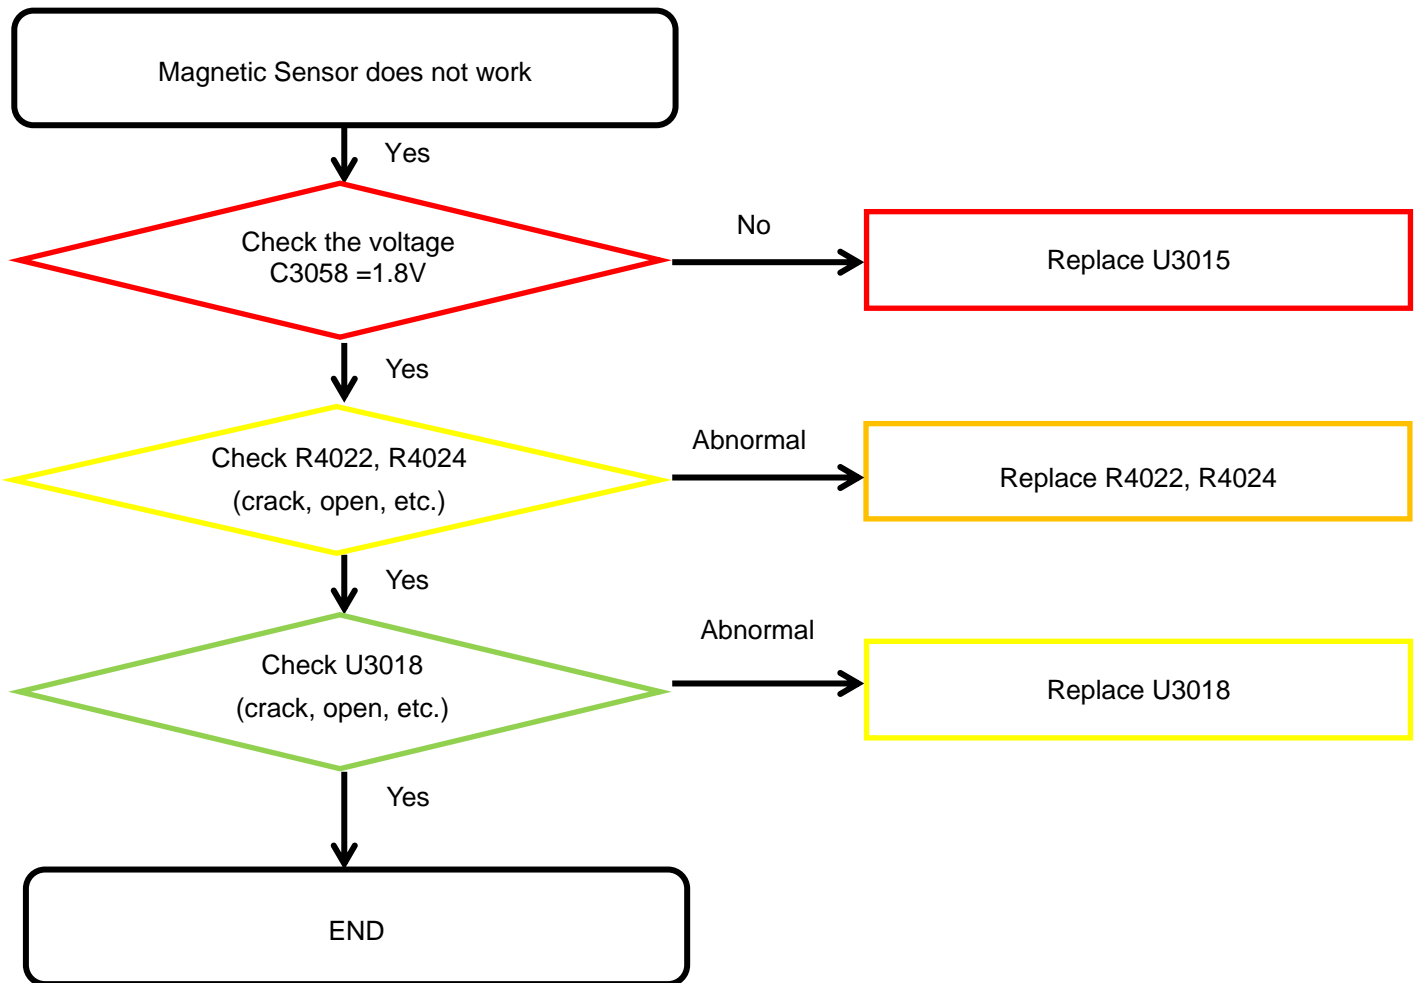


8. Level 3 Repair

8-4-7-4. Ambient sensor(RGB sensor)

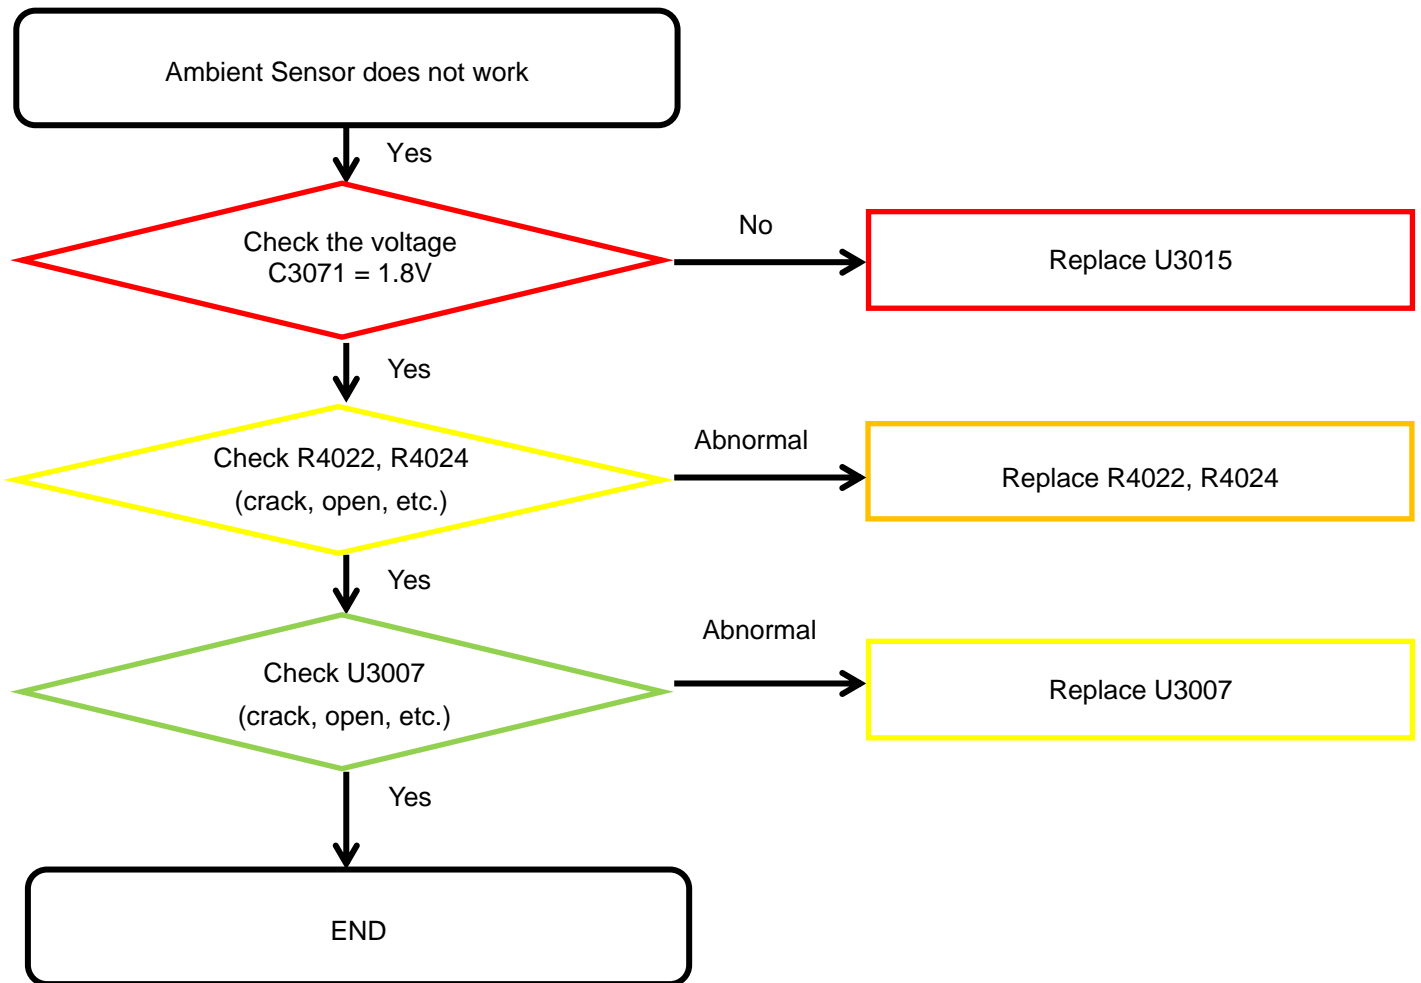


8. Level 3 Repair

8-4-7-5. Finger Print sensor

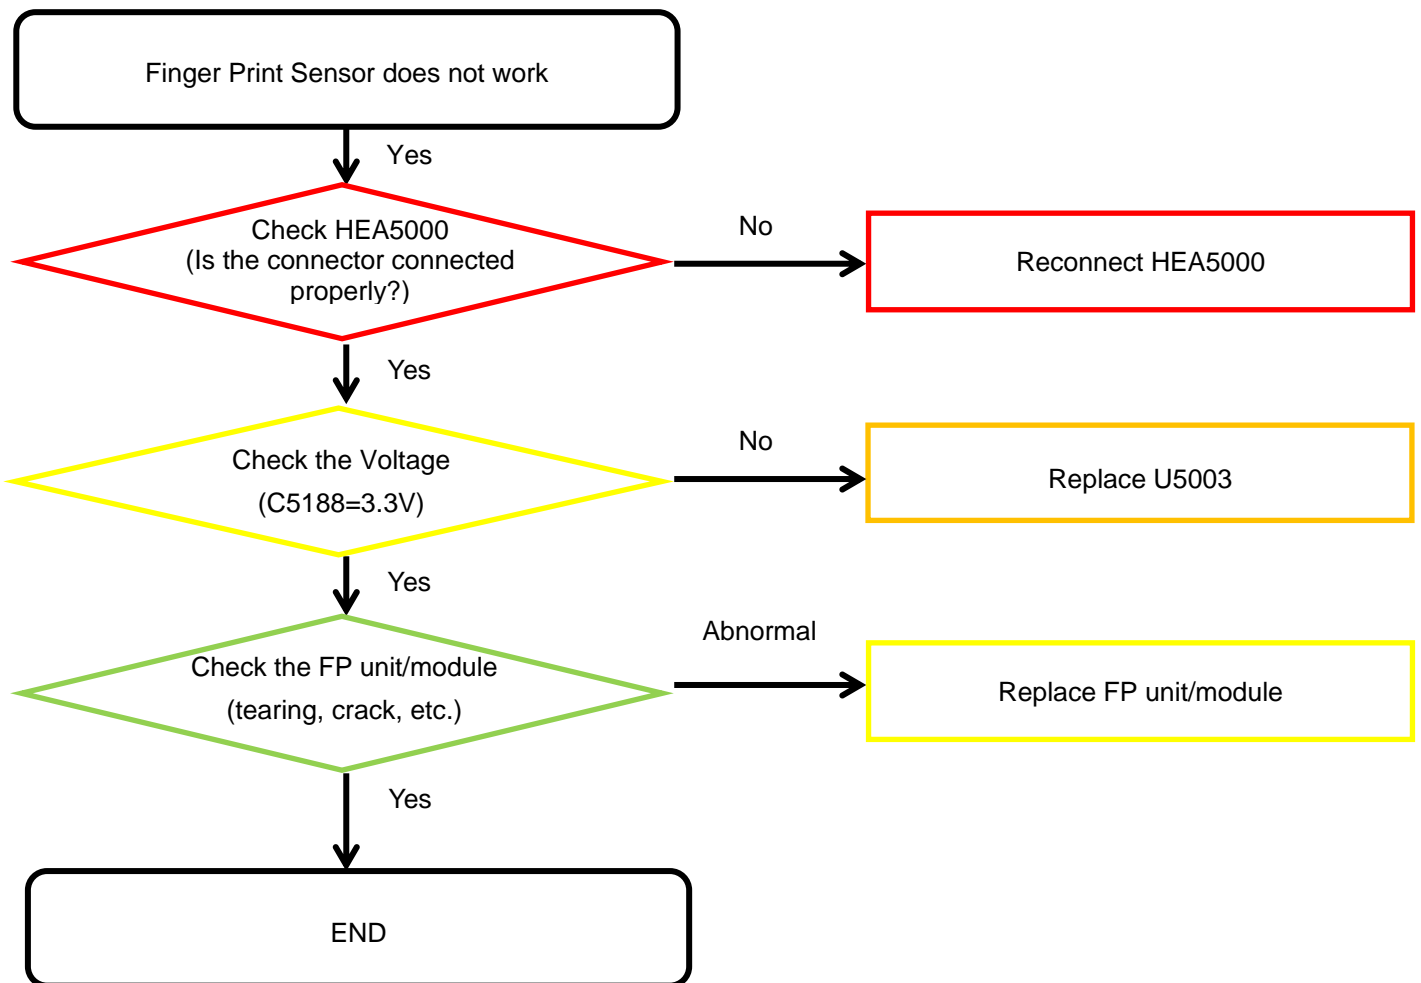


8. Level 3 Repair

8-4-8-1. Microphone Part - Main MIC

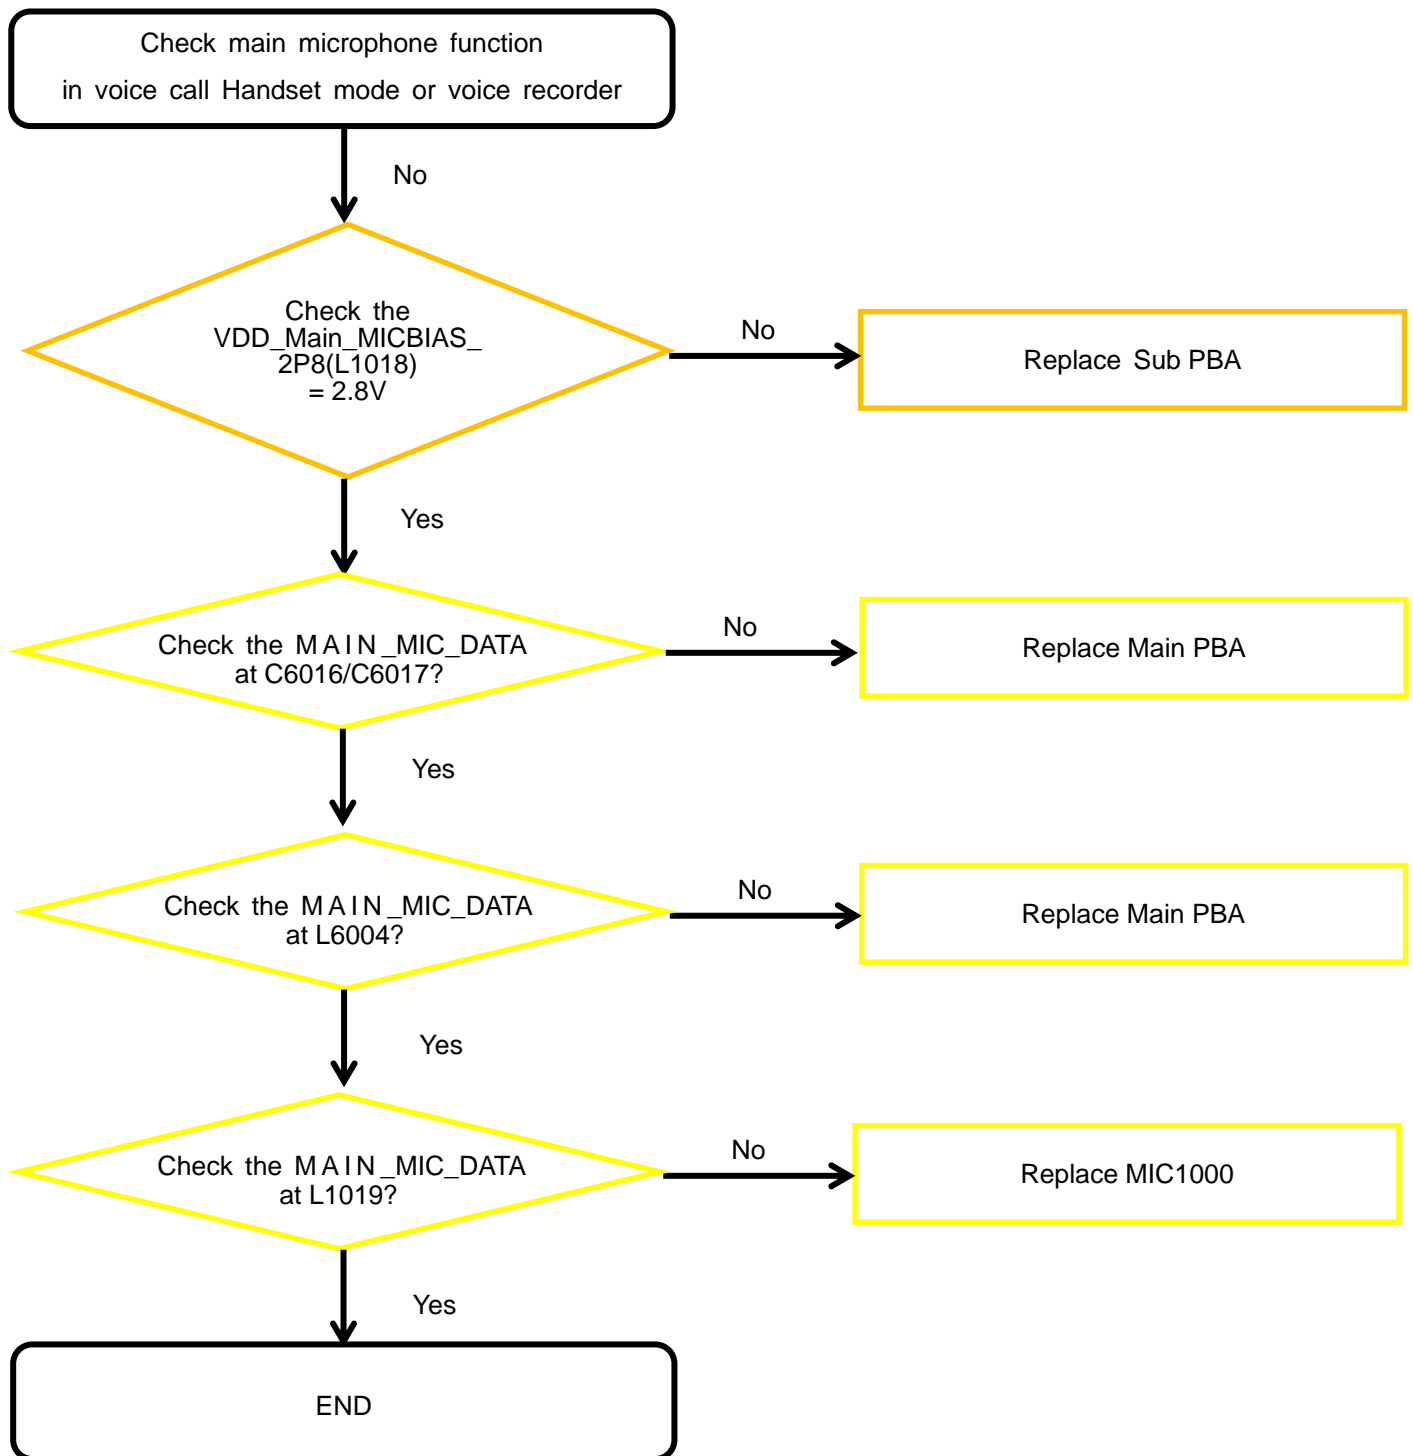


8. Level 3 Repair

8-4-8-2. Microphone Part - Sub MIC

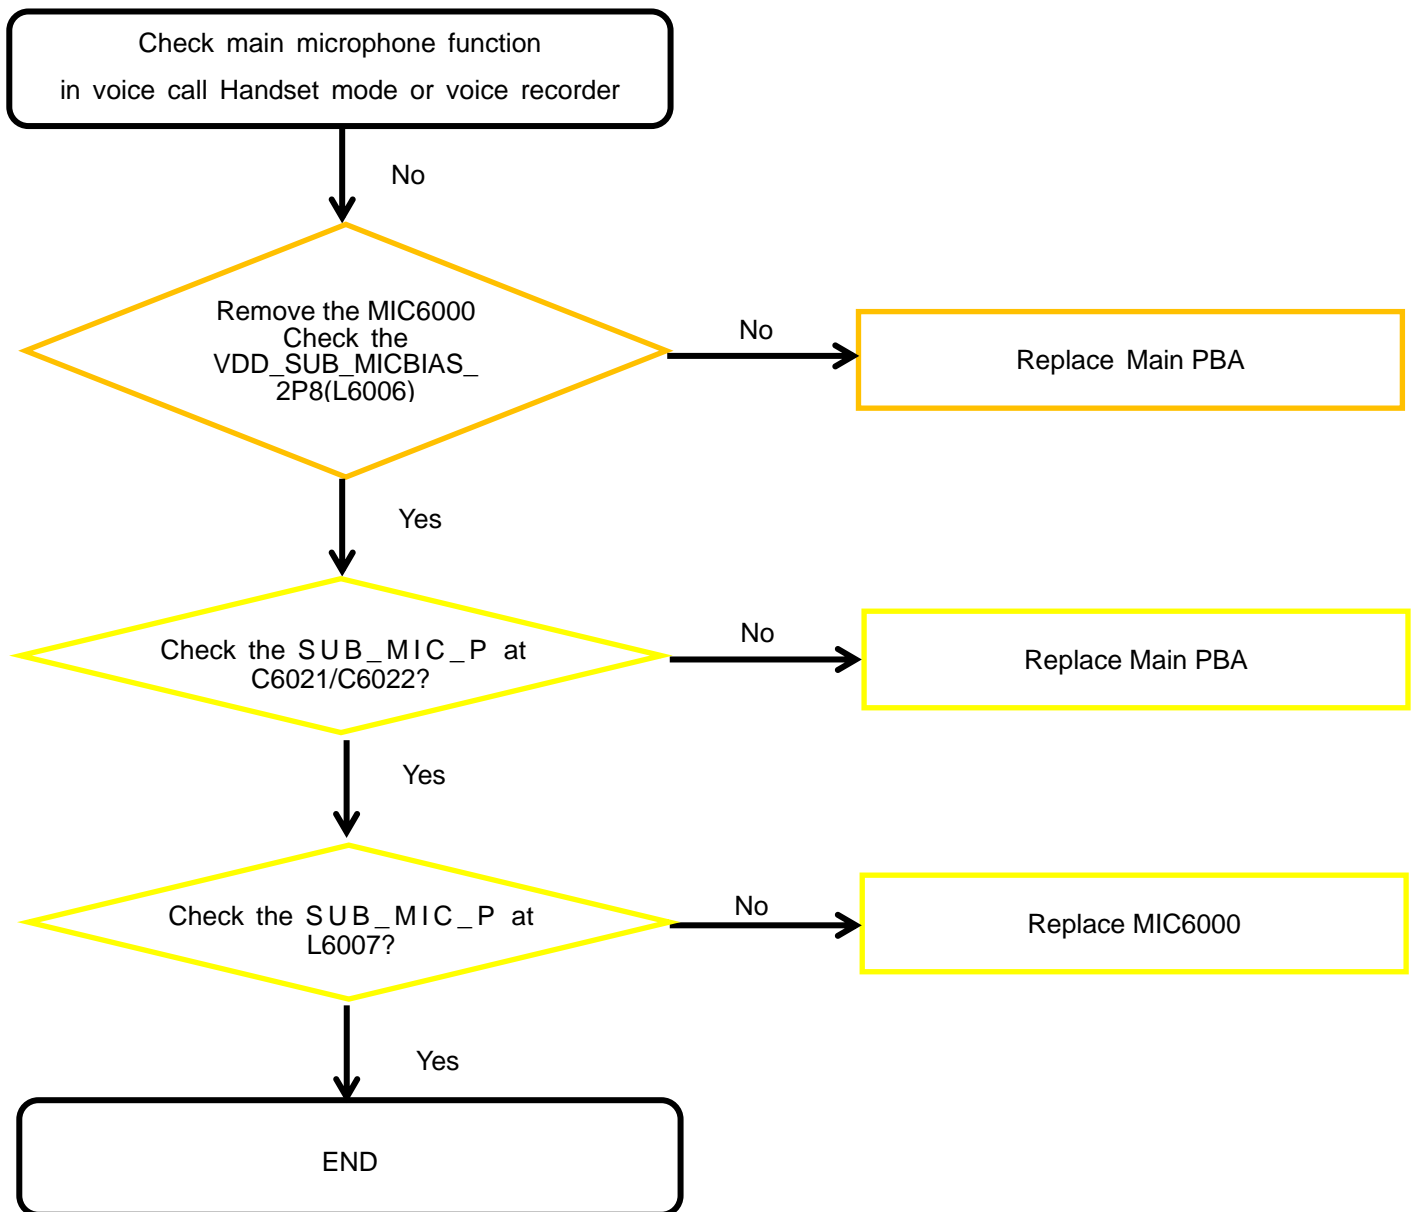


8. Level 3 Repair

8-4-9. Speaker Part

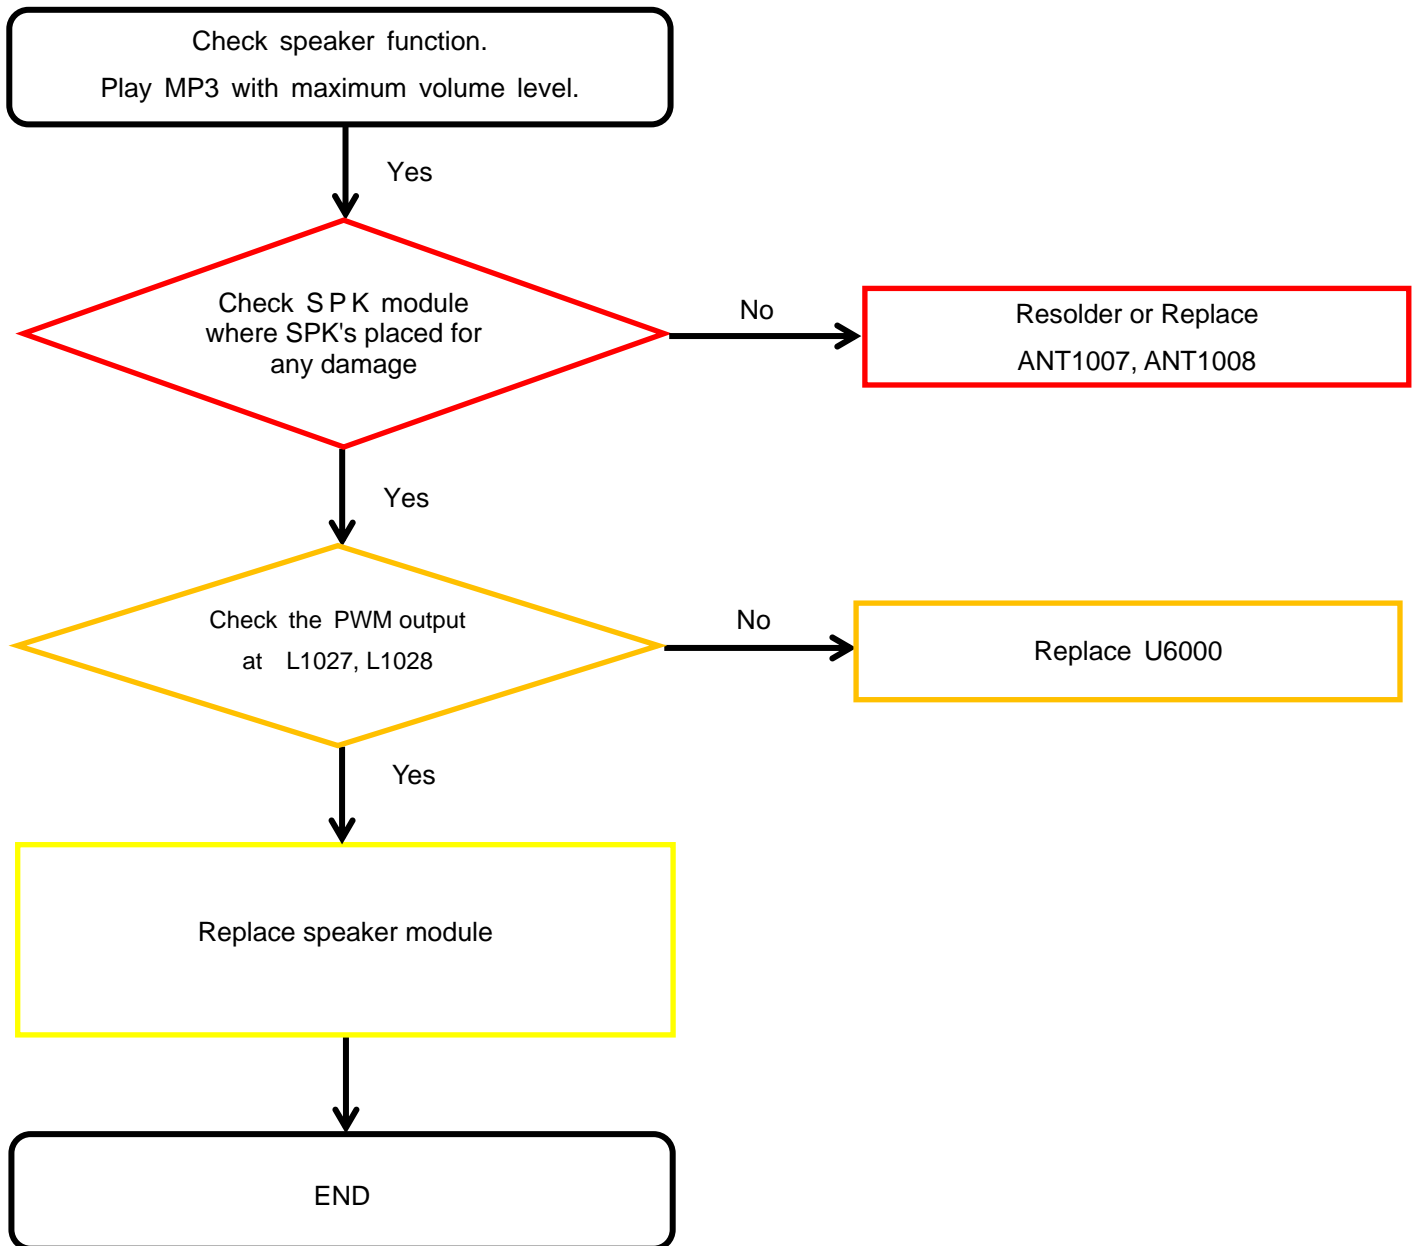


8. Level 3 Repair

8-4-10. Receiver Part

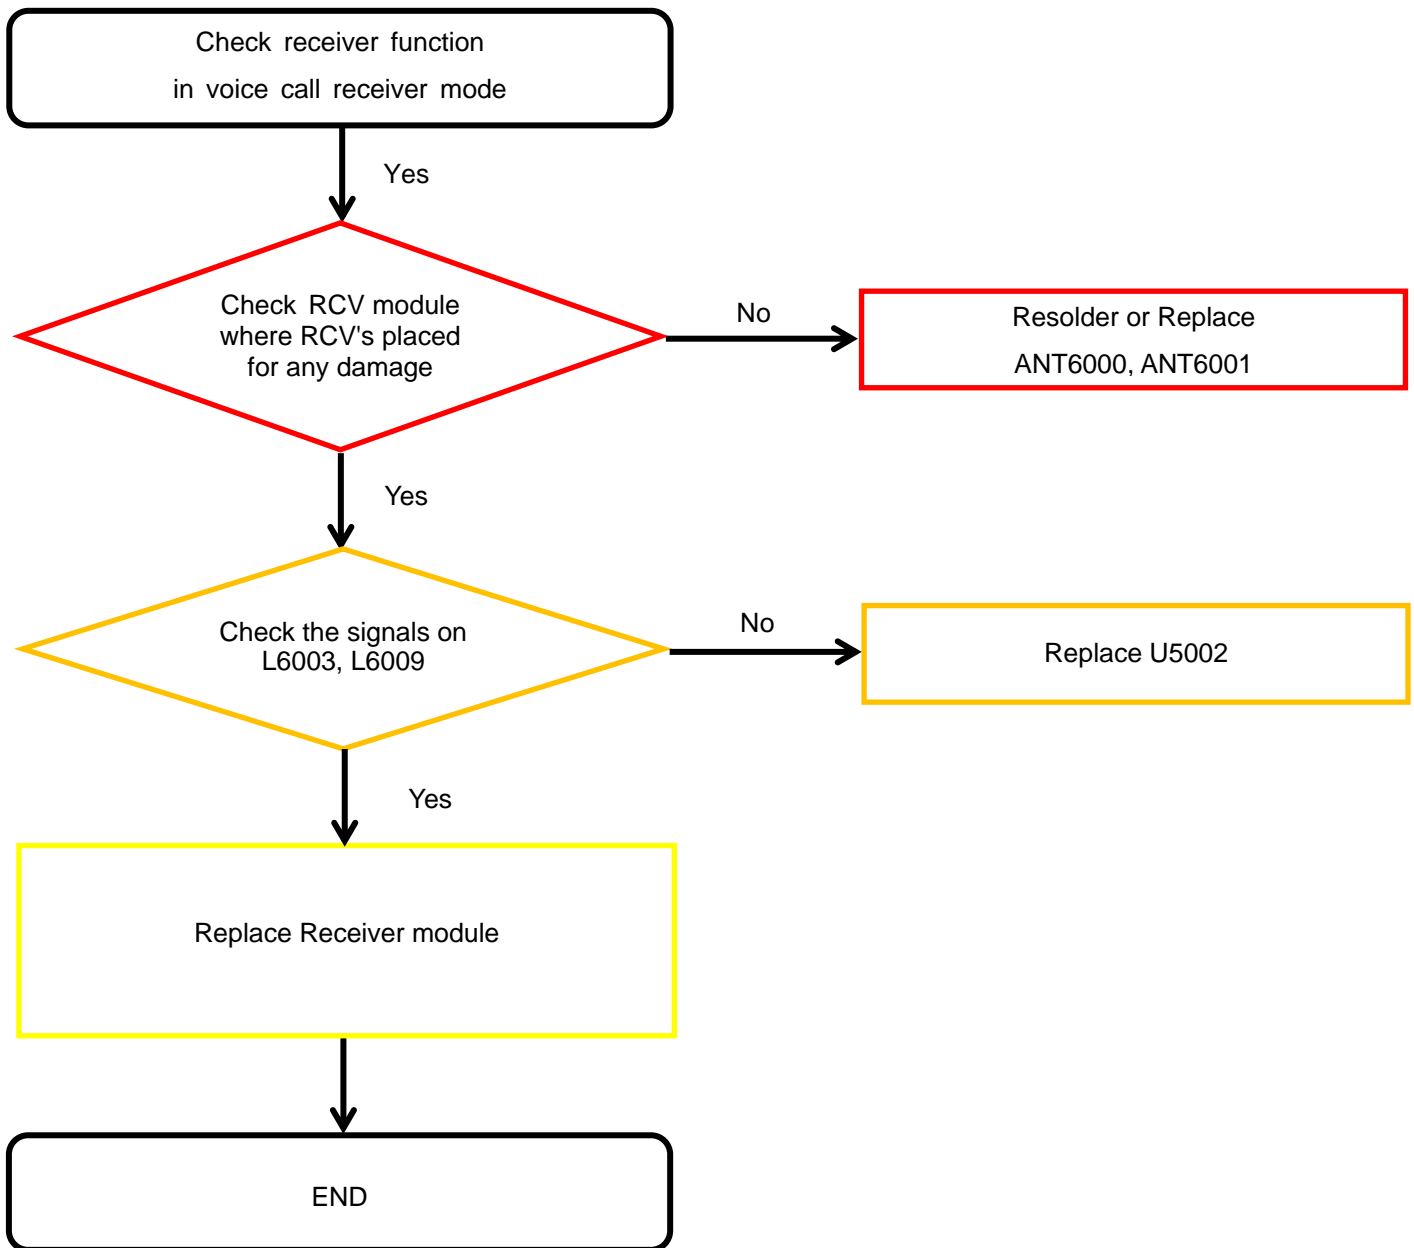


8. Level 3 Repair

8-4-11. Display

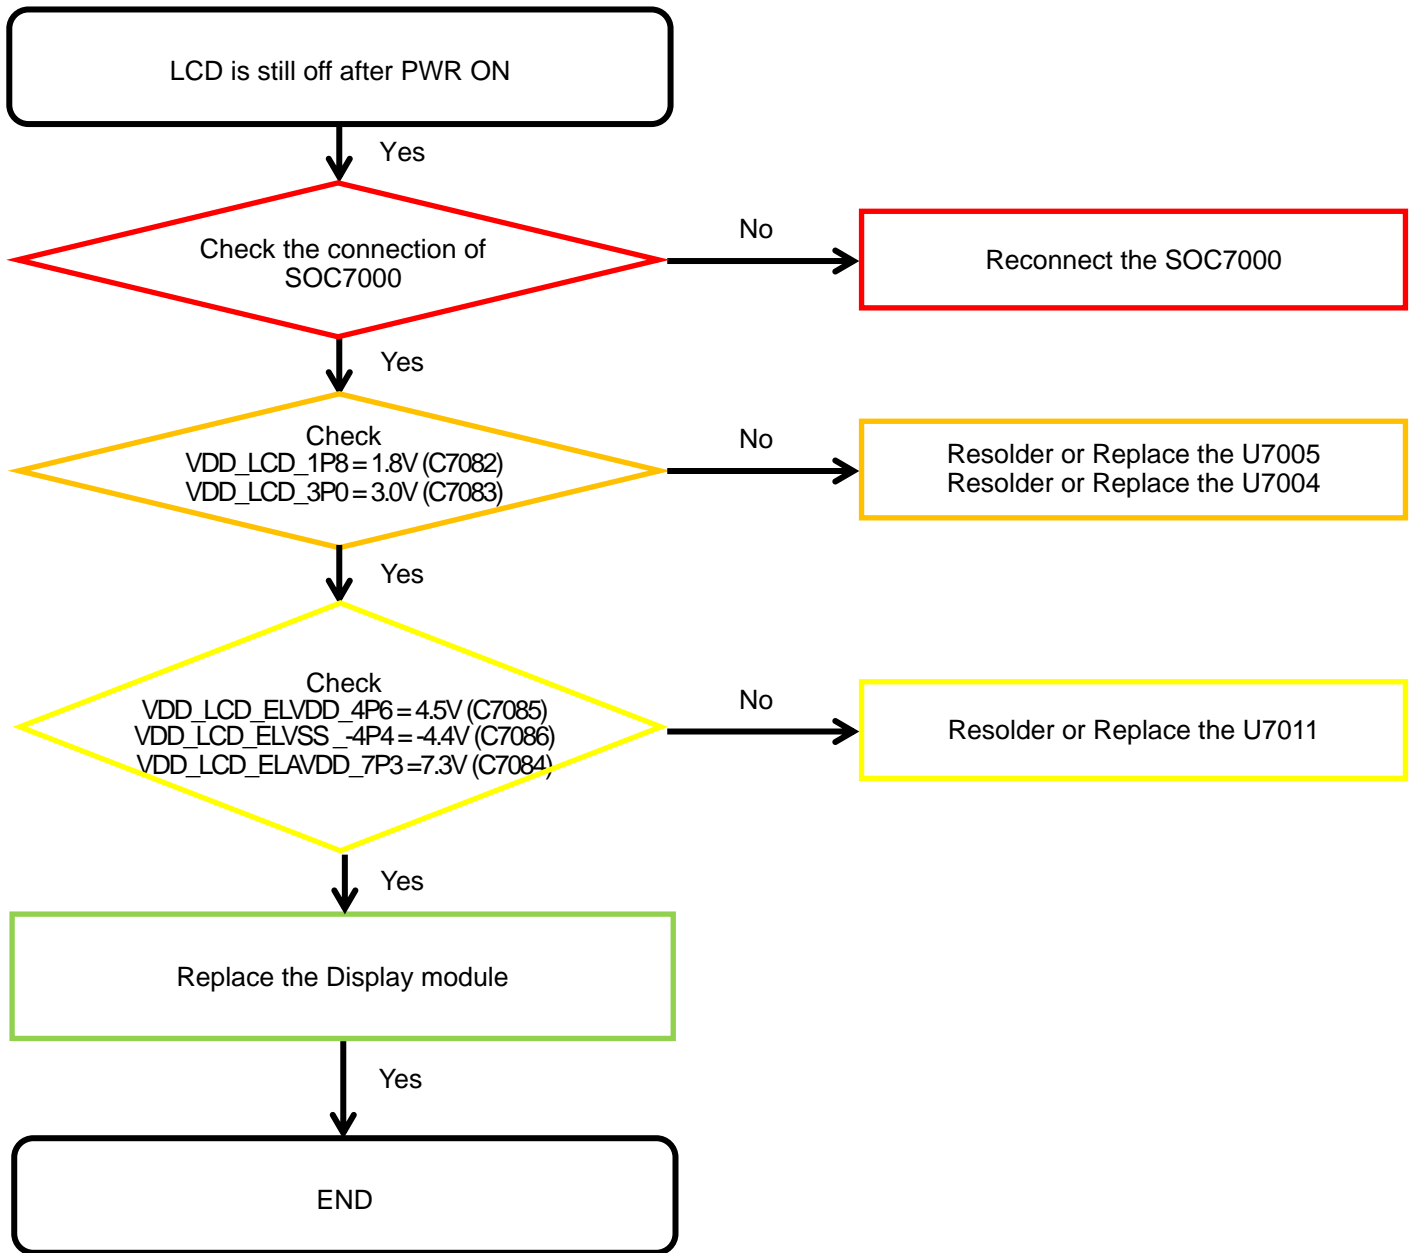


8. Level 3 Repair

8-4-12-1. 16M AF Rear CAMERA

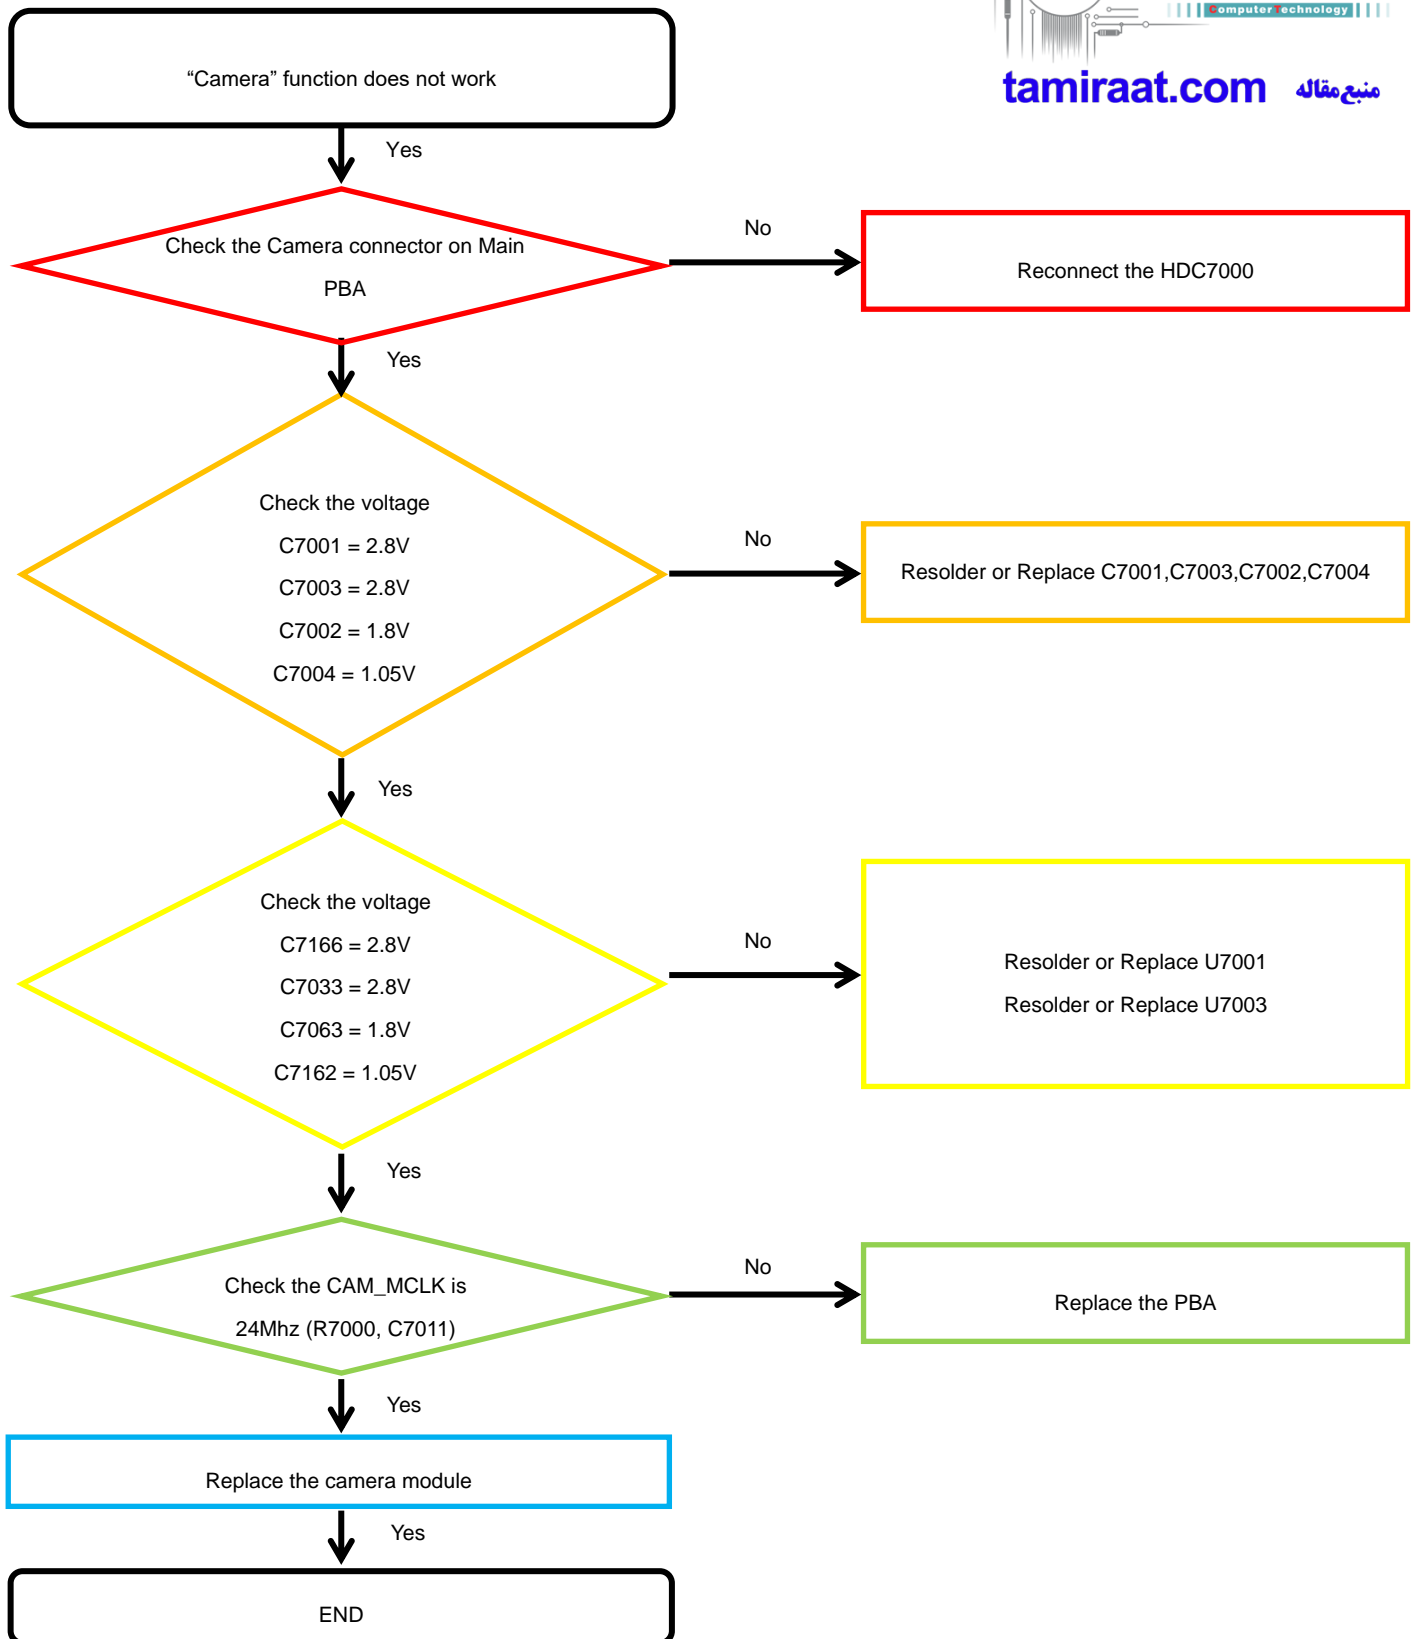


8. Level 3 Repair

8-4-12-2. 5M FF Rear CAMERA

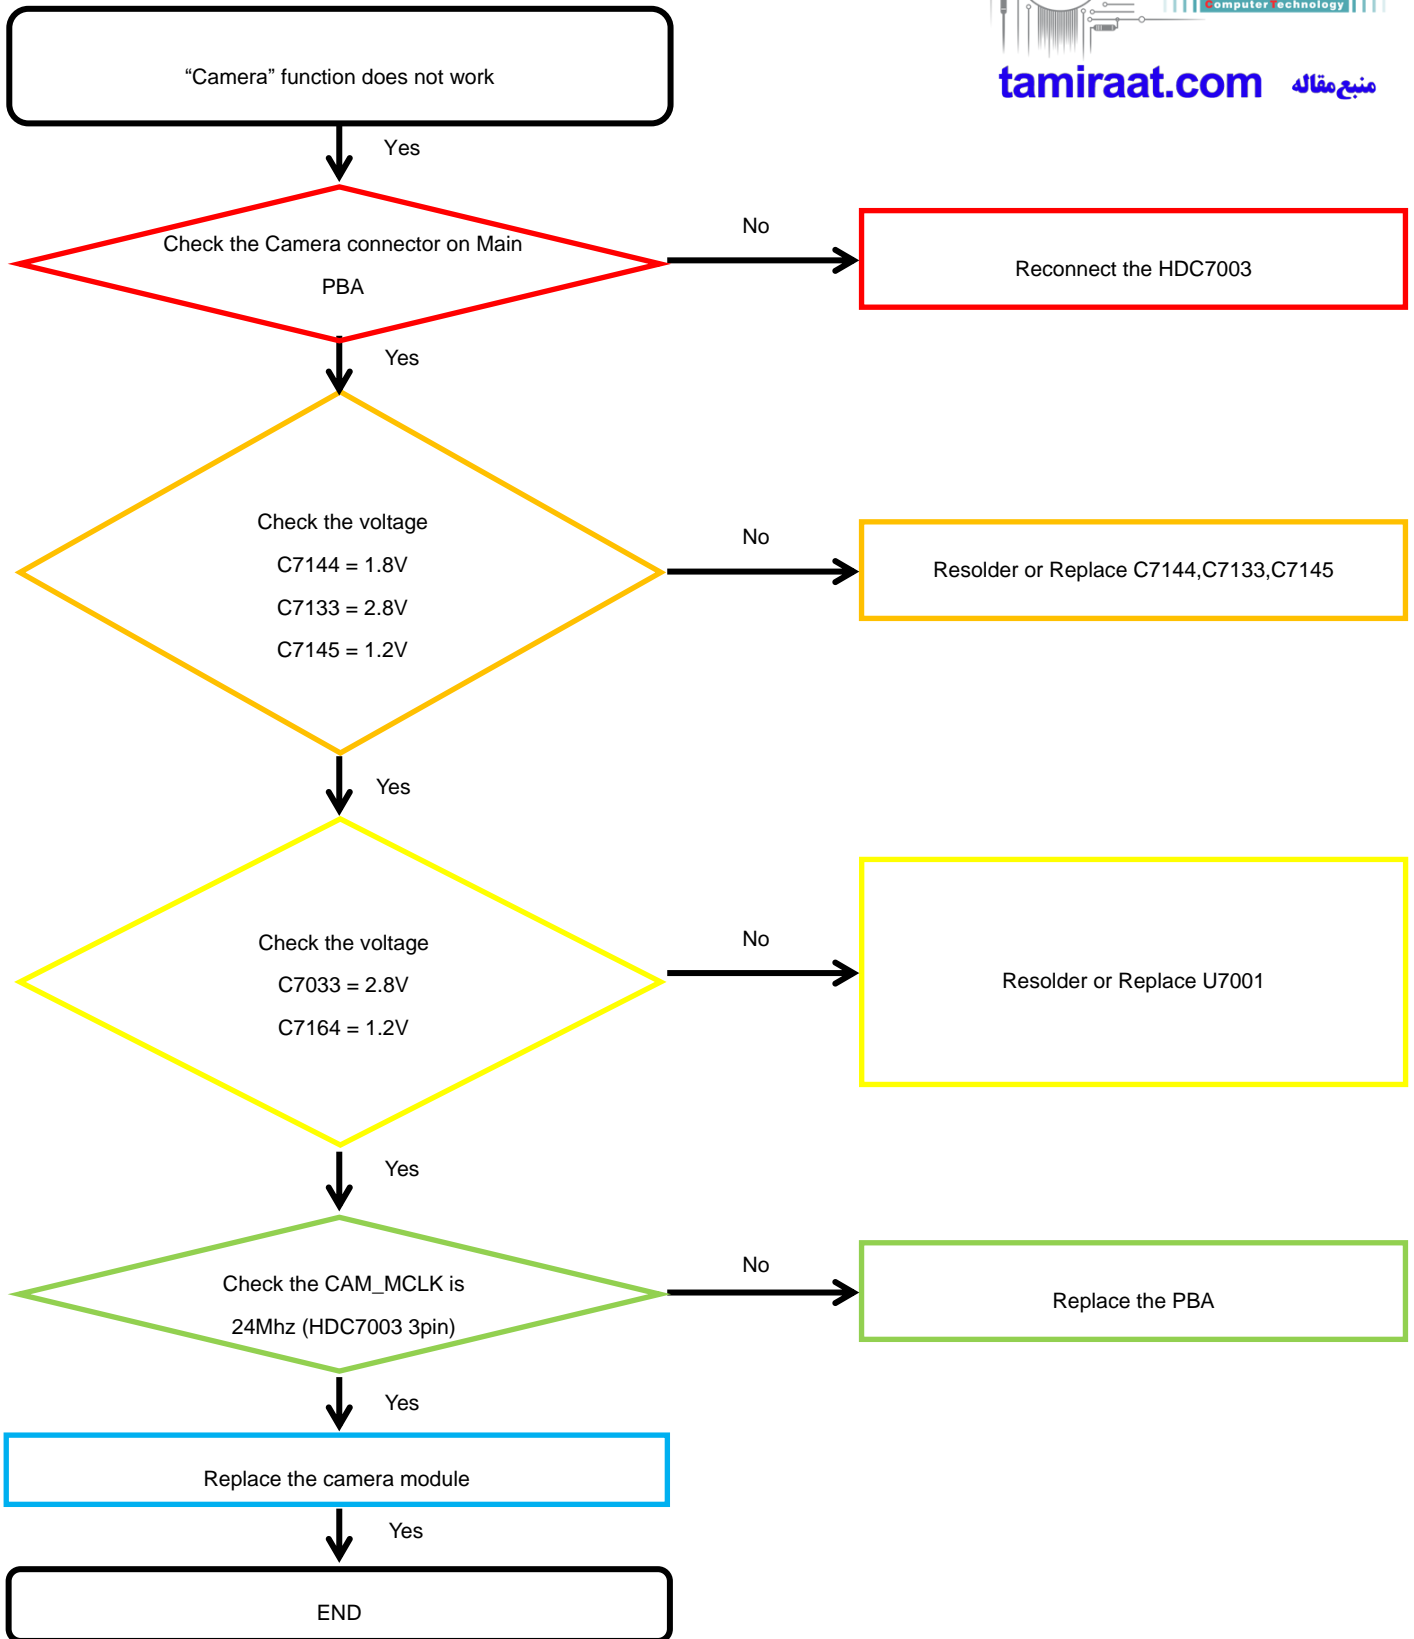


8. Level 3 Repair

8-4-13. 25M FF Front CAMERA

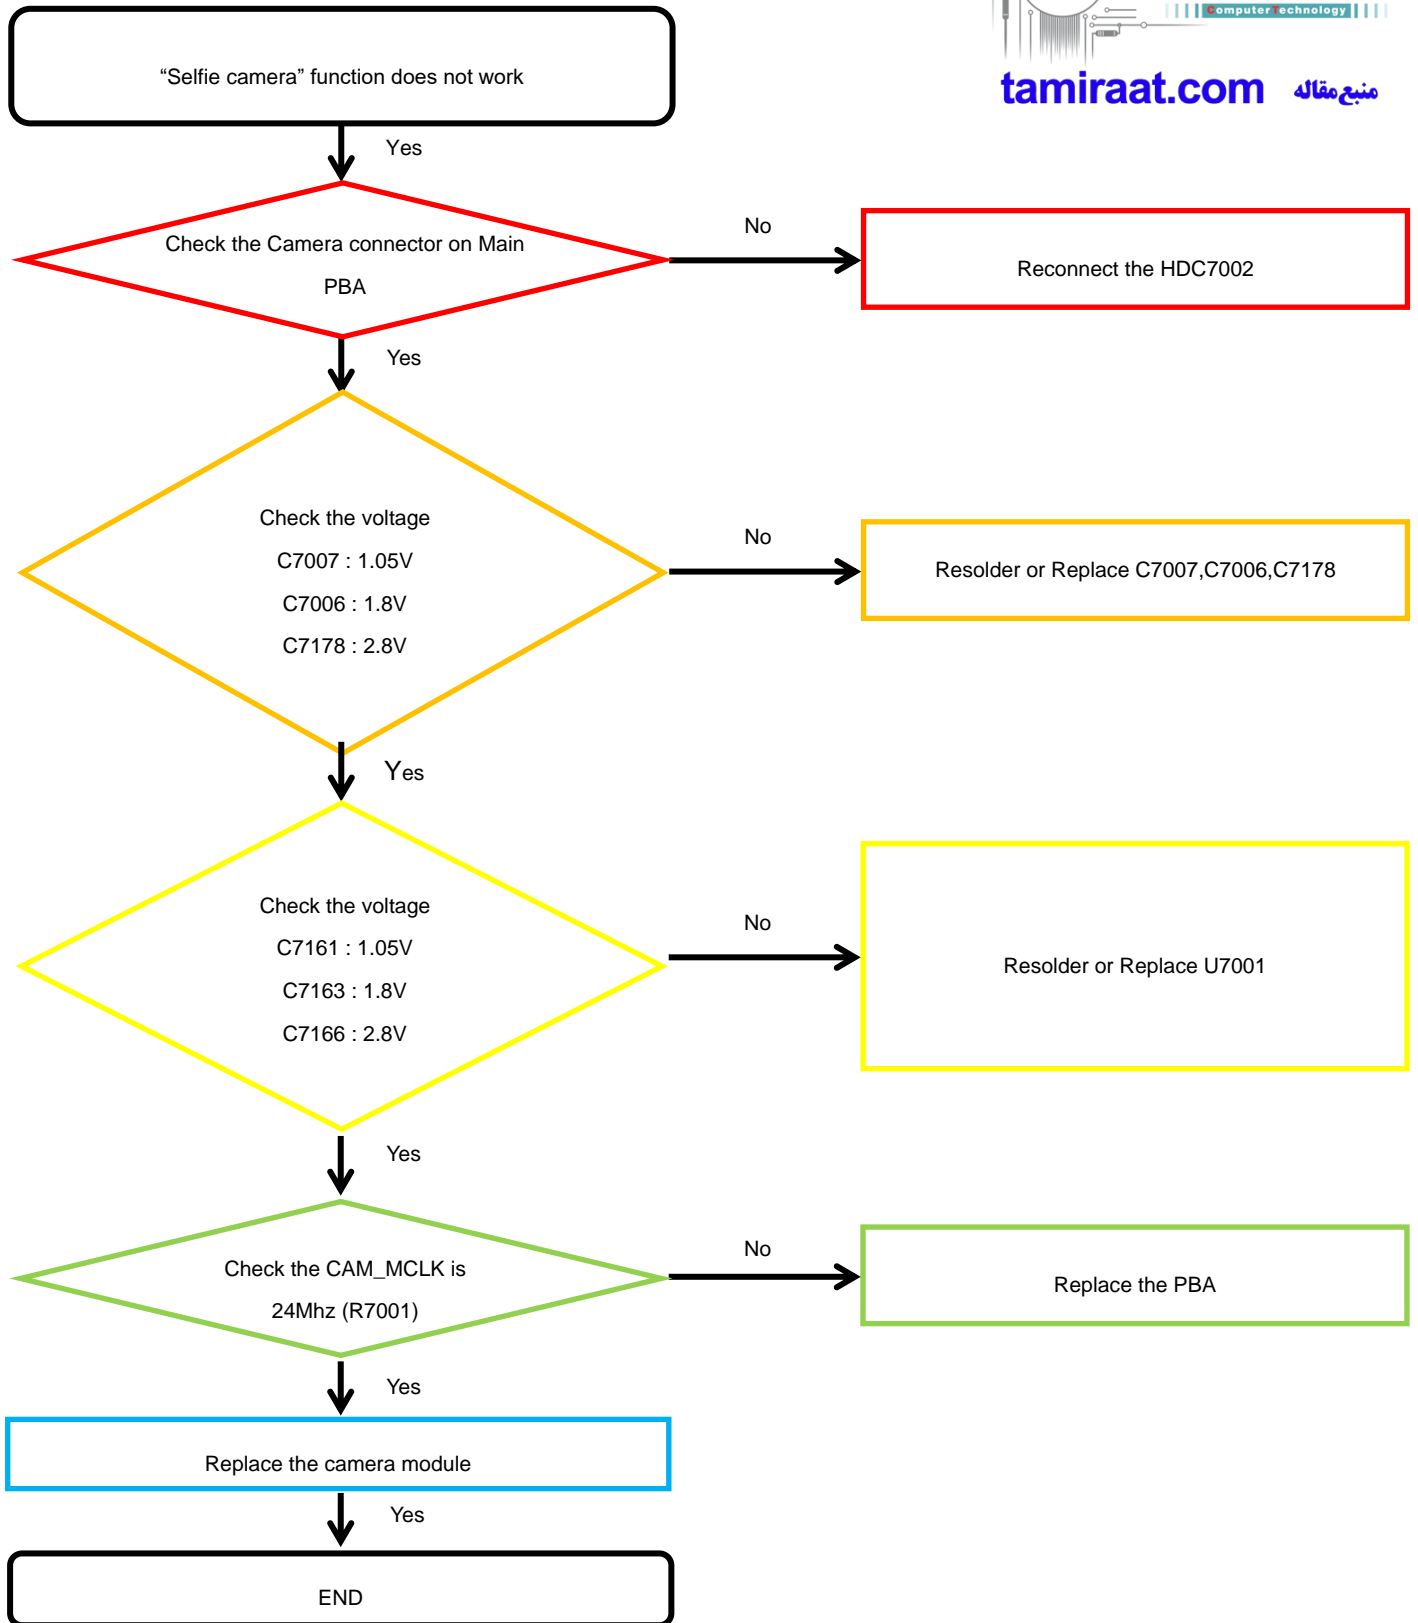


8. Level 3 Repair

8-4-14. LCD

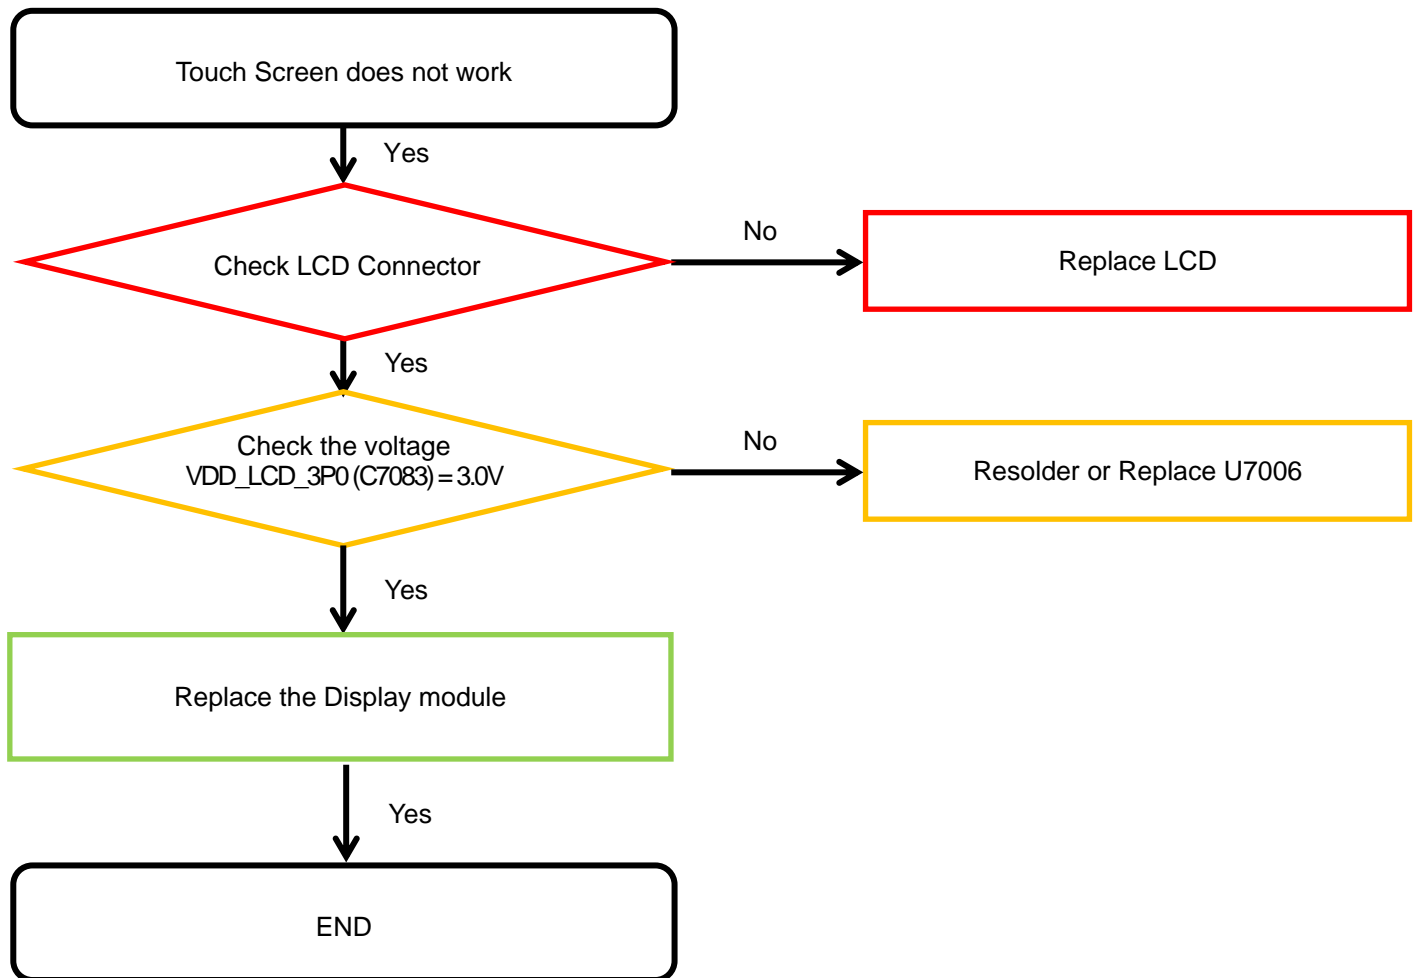


8. Level 3 Repair

8-4-15. Motor

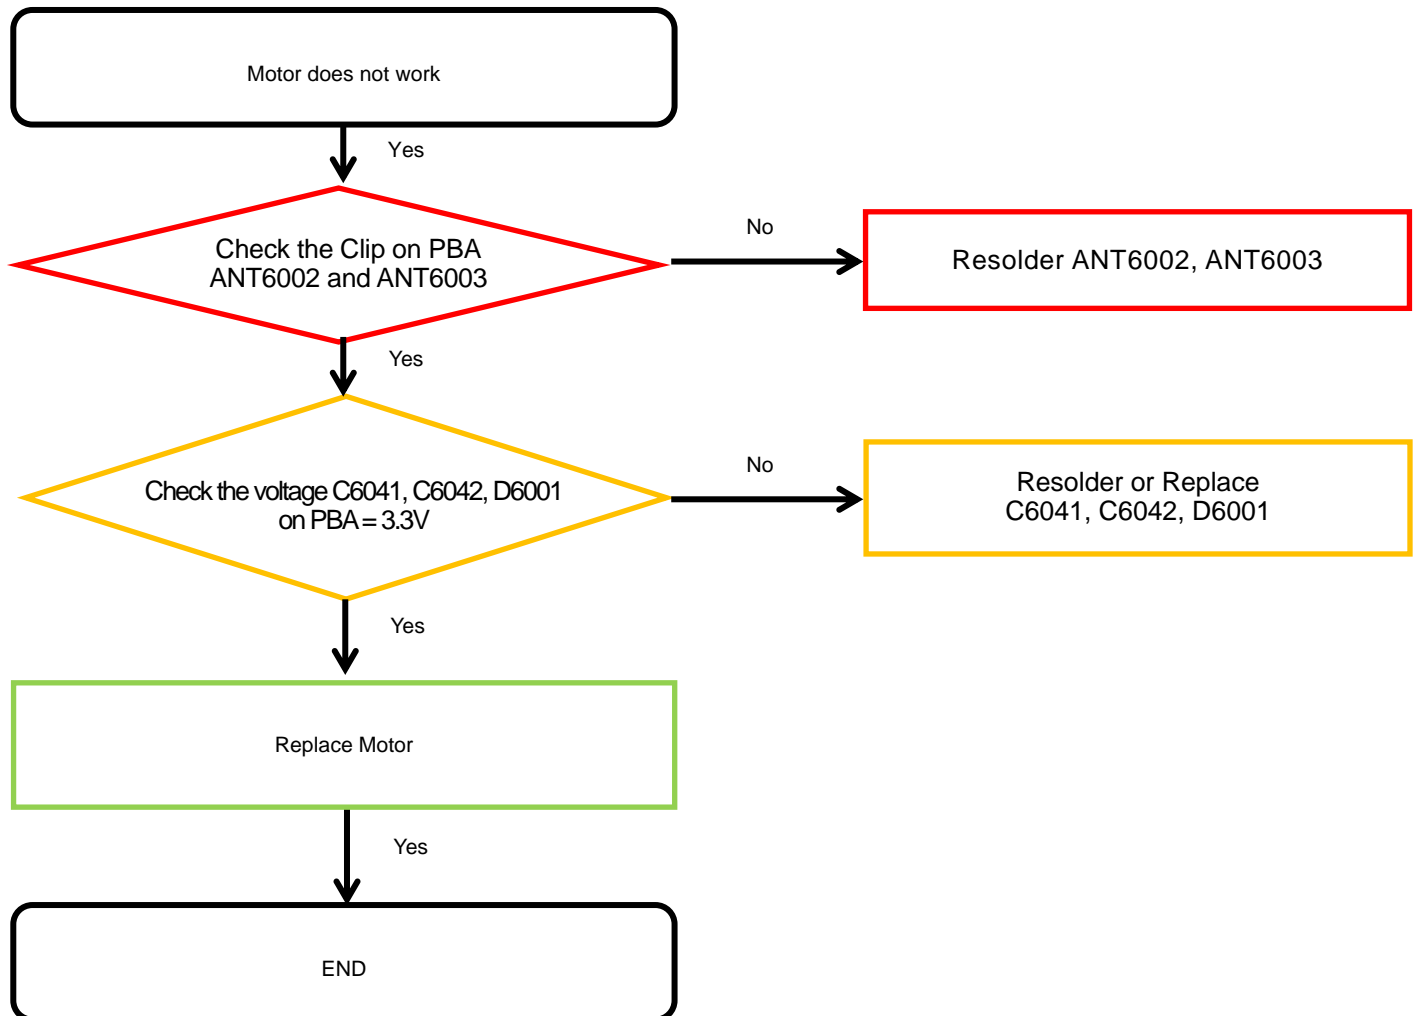


8. Level 3 Repair

8-4-16. BT/WIFI

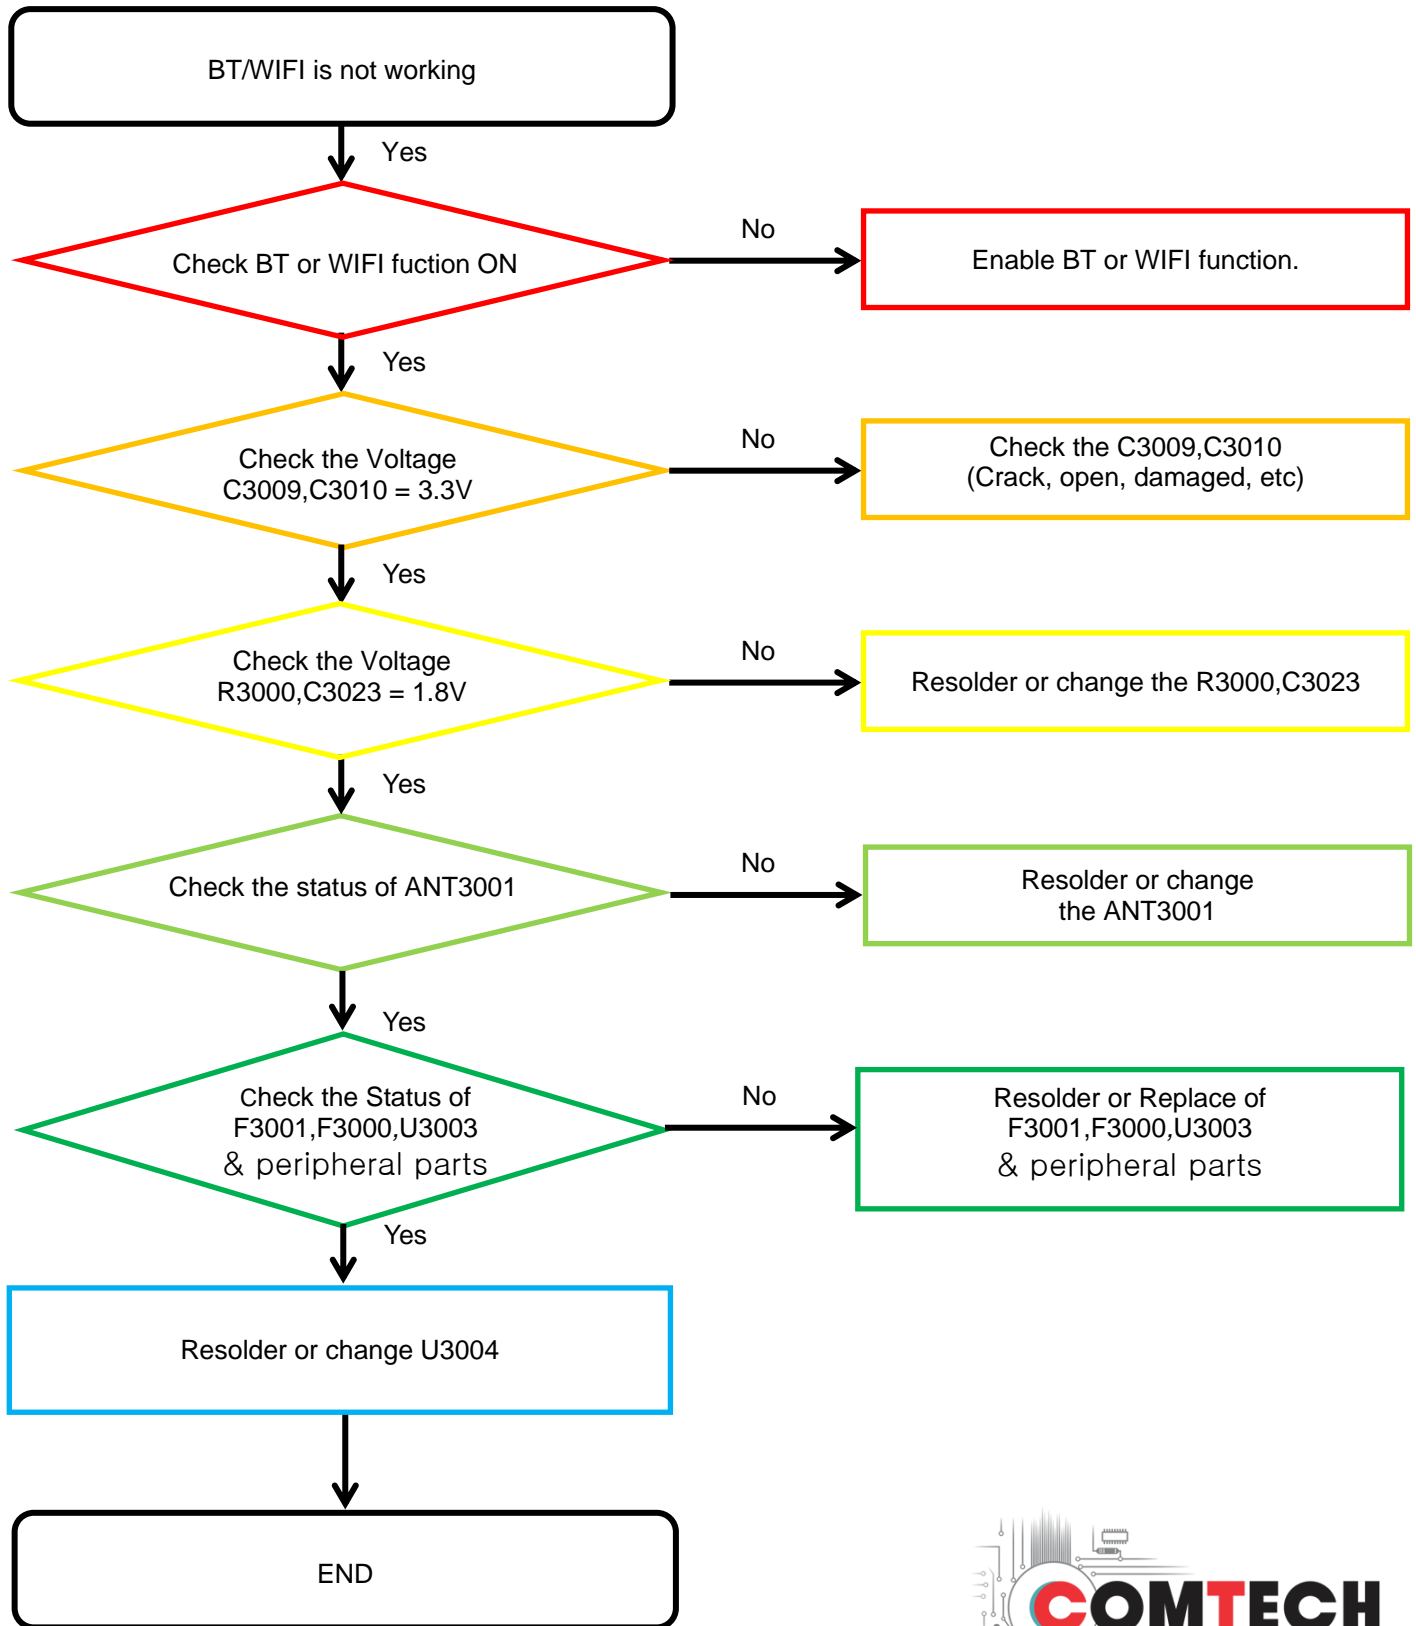


8. Level 3 Repair

8-4-17. GPS

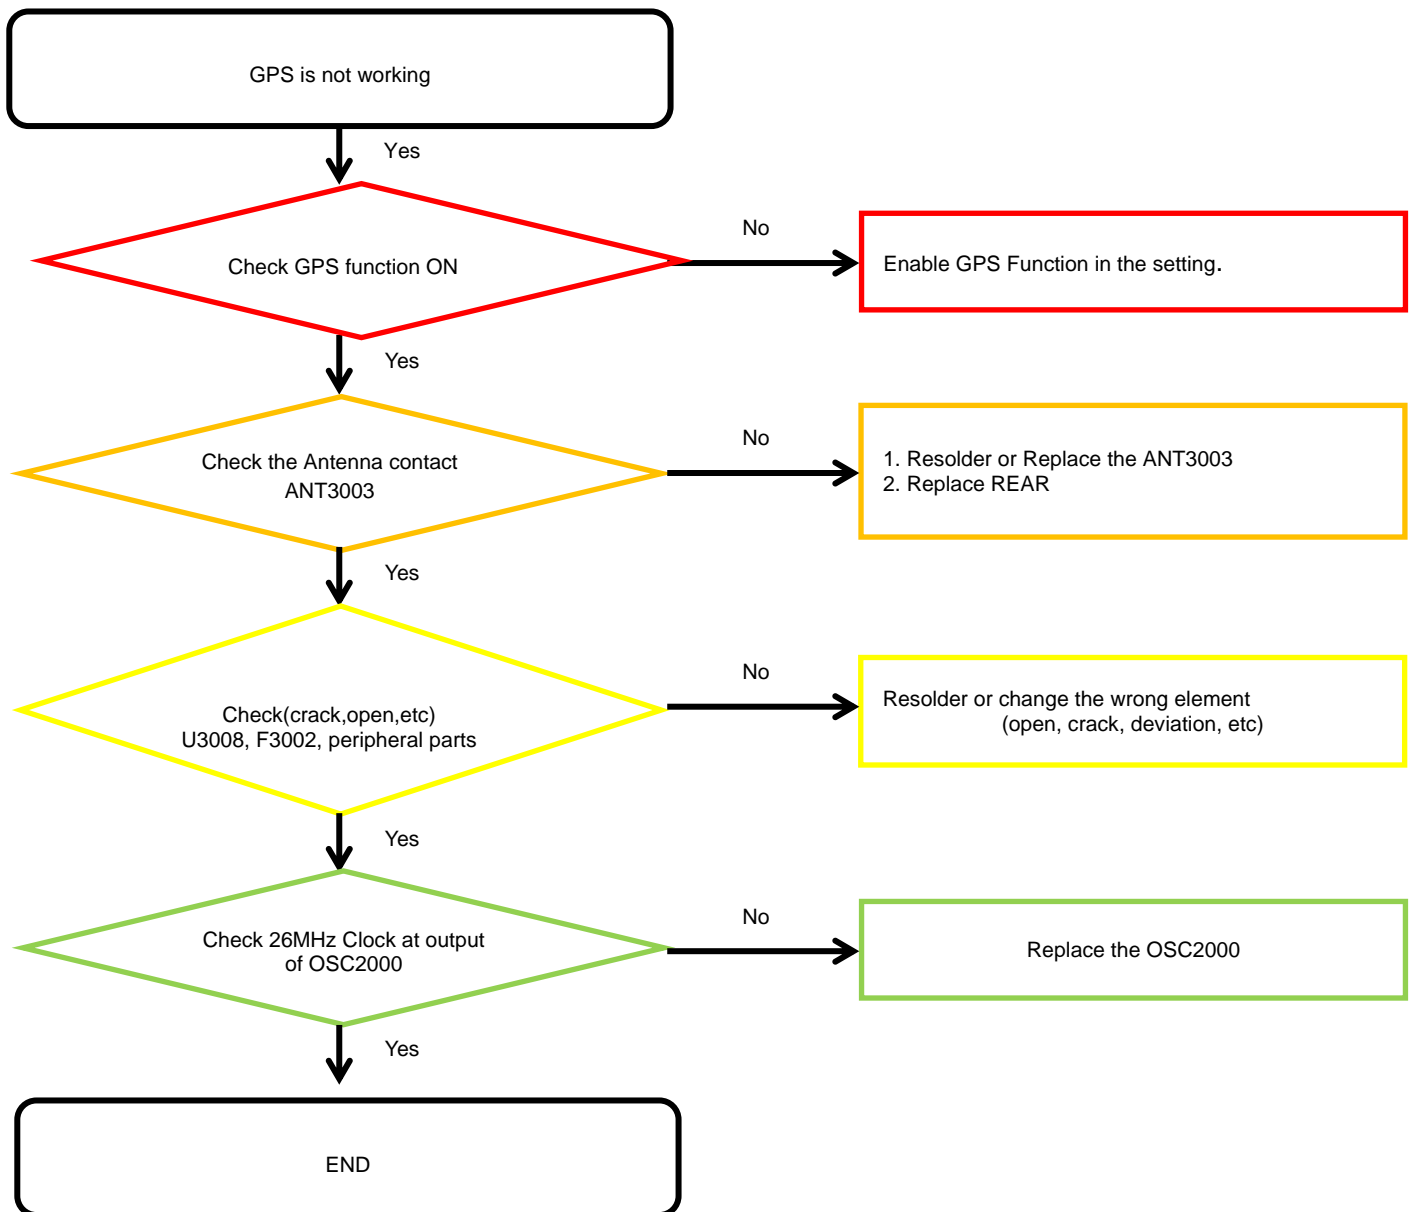


8. Level 3 Repair

8-4-18. NFC

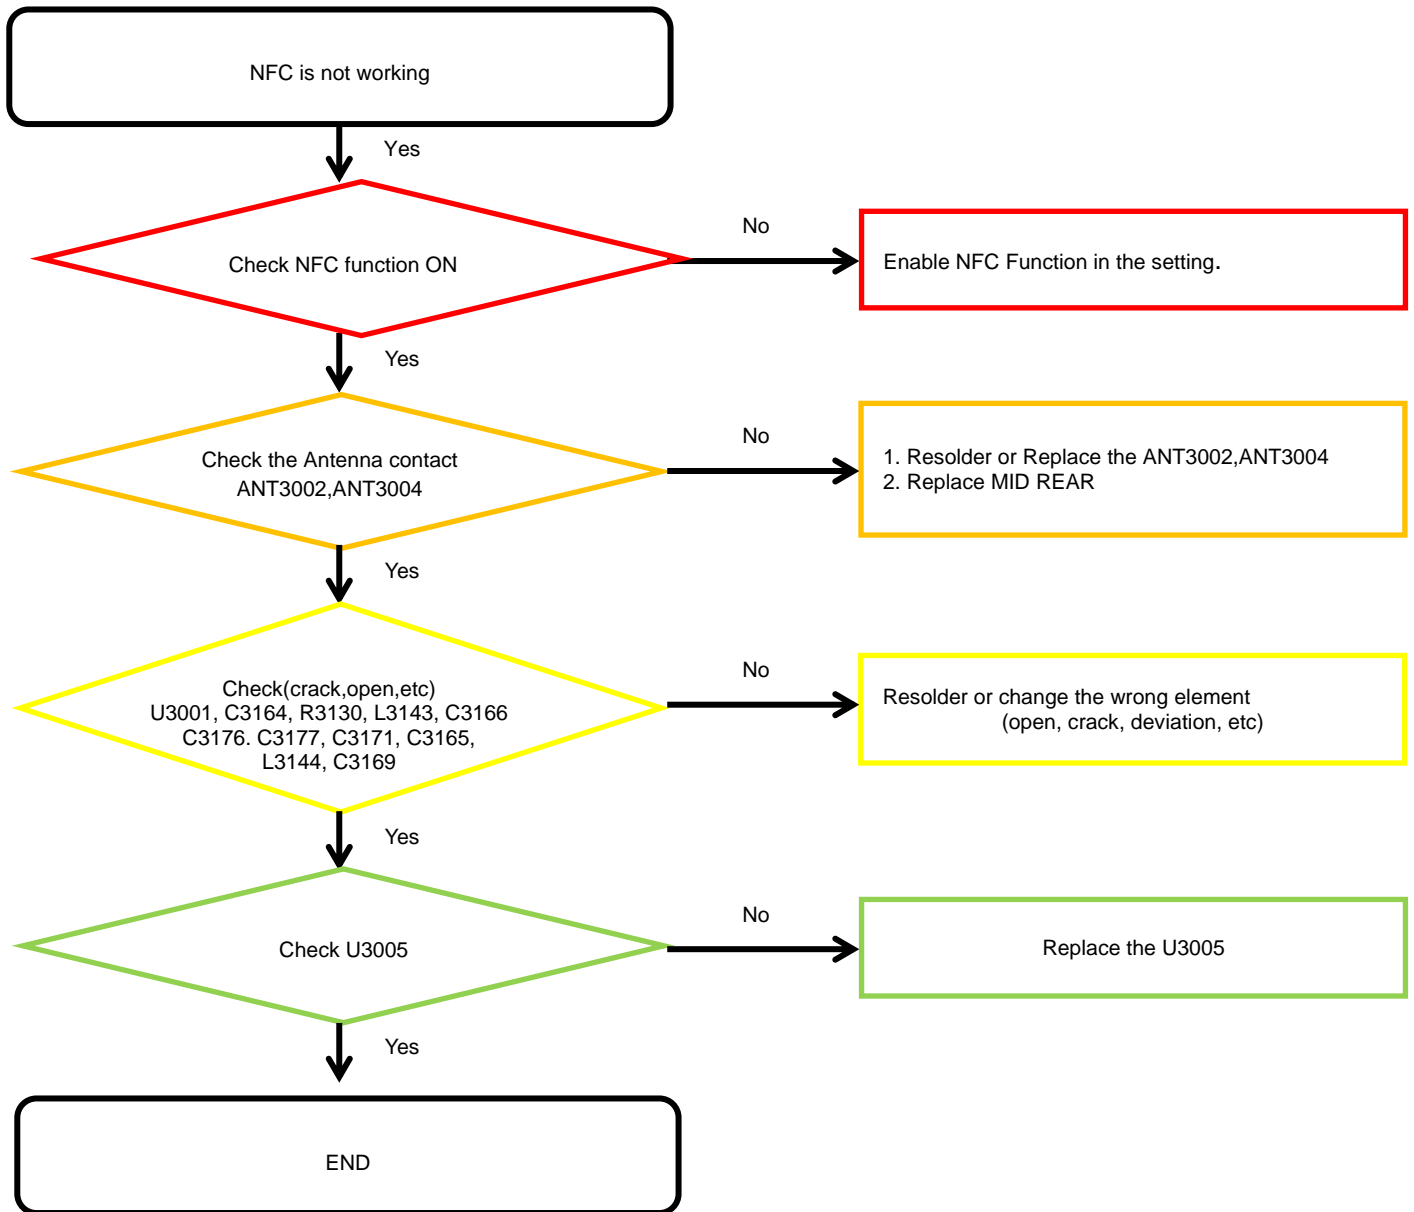


8. Level 3 Repair

8-4-20. LTE B1, WCDMA B1 Rx

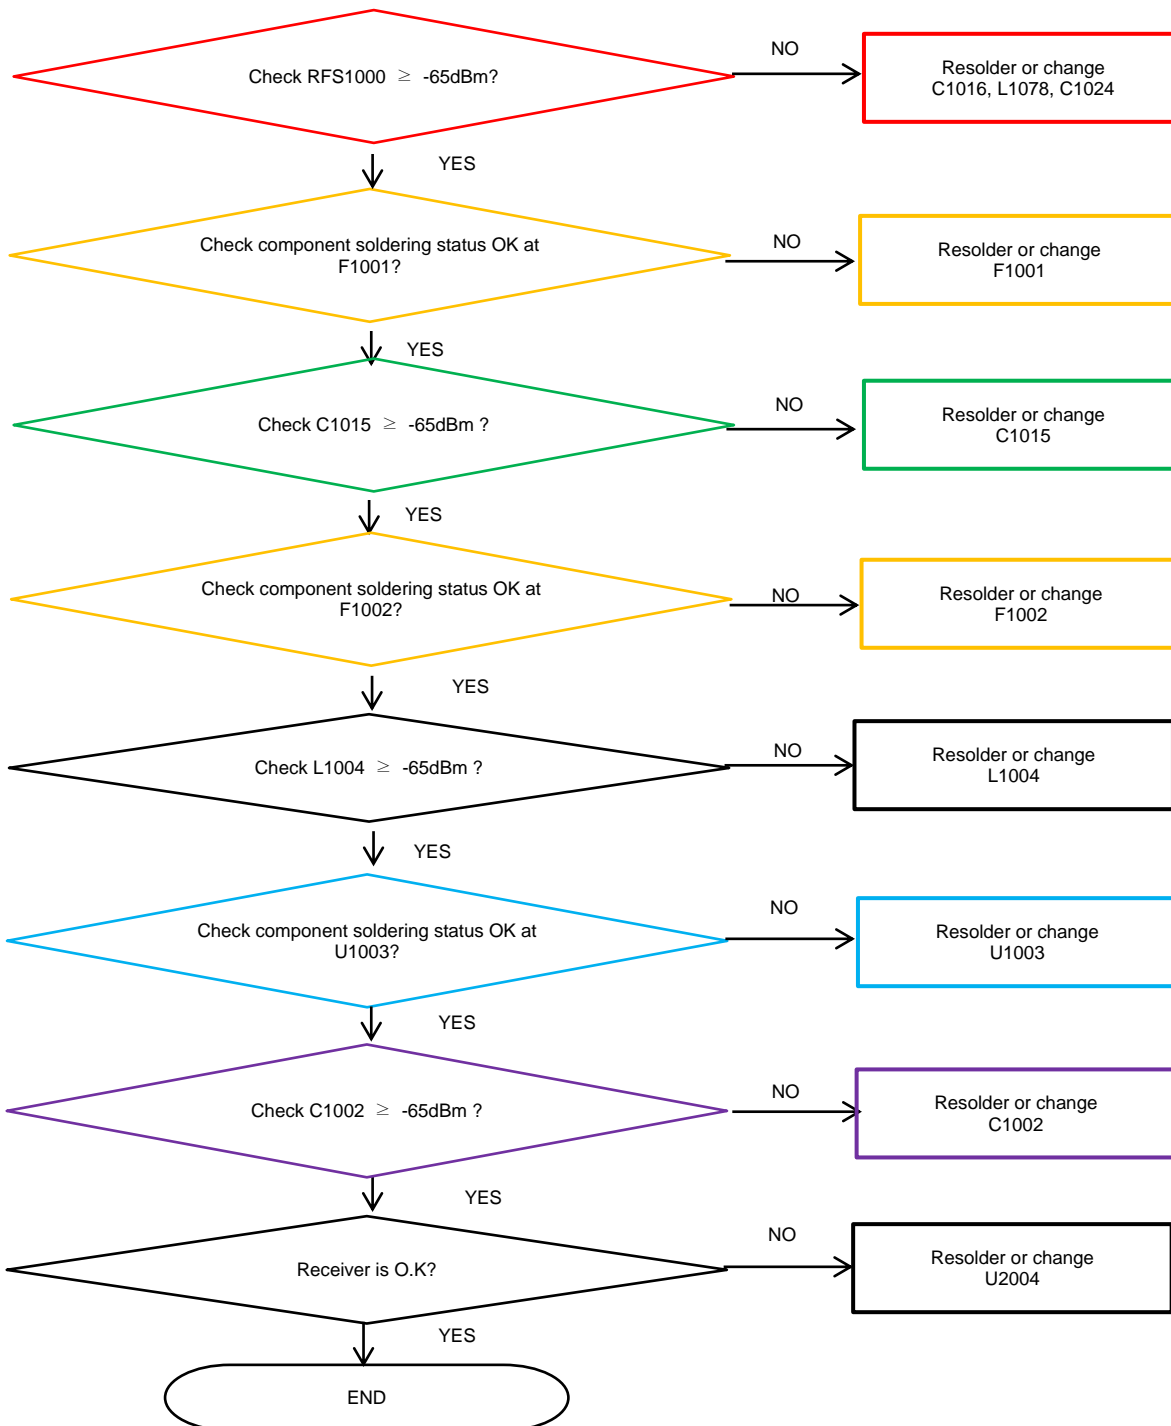


8. Level 3 Repair

8-4-21. WCDMA B2 / PCS RX, LTEB2

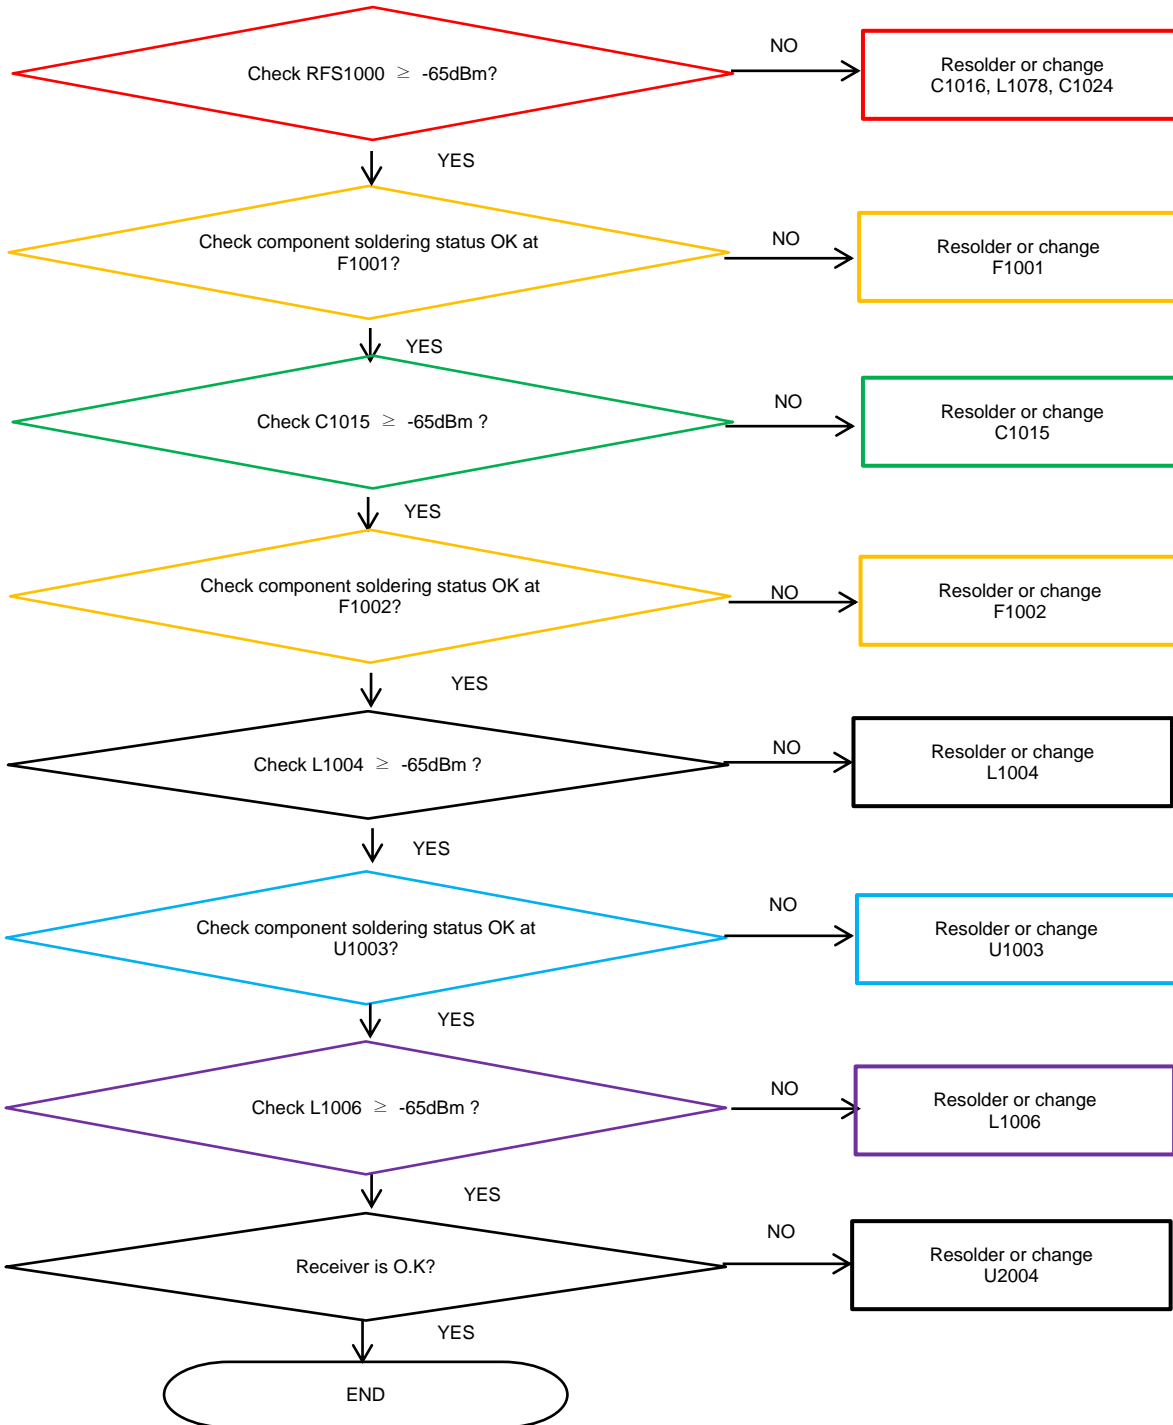


8. Level 3 Repair

8-4-22. LTE B3 / DCS RX

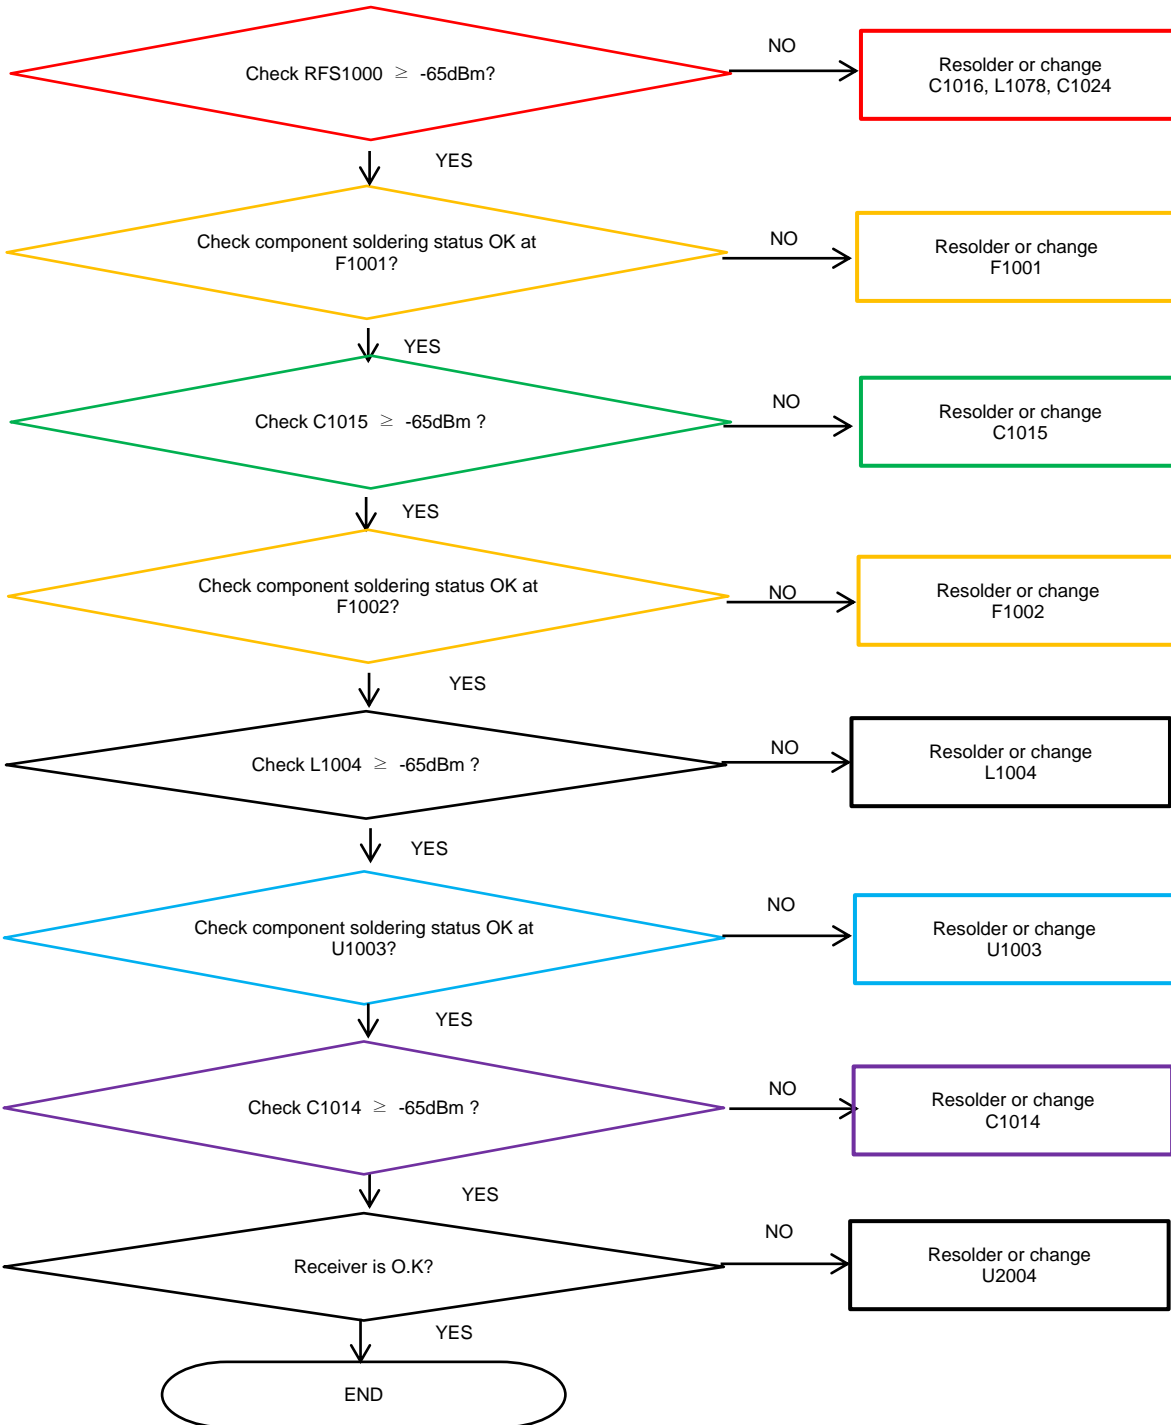


8. Level 3 Repair

8-4-24. LTE, WCDMA B5 / GSM850 RX

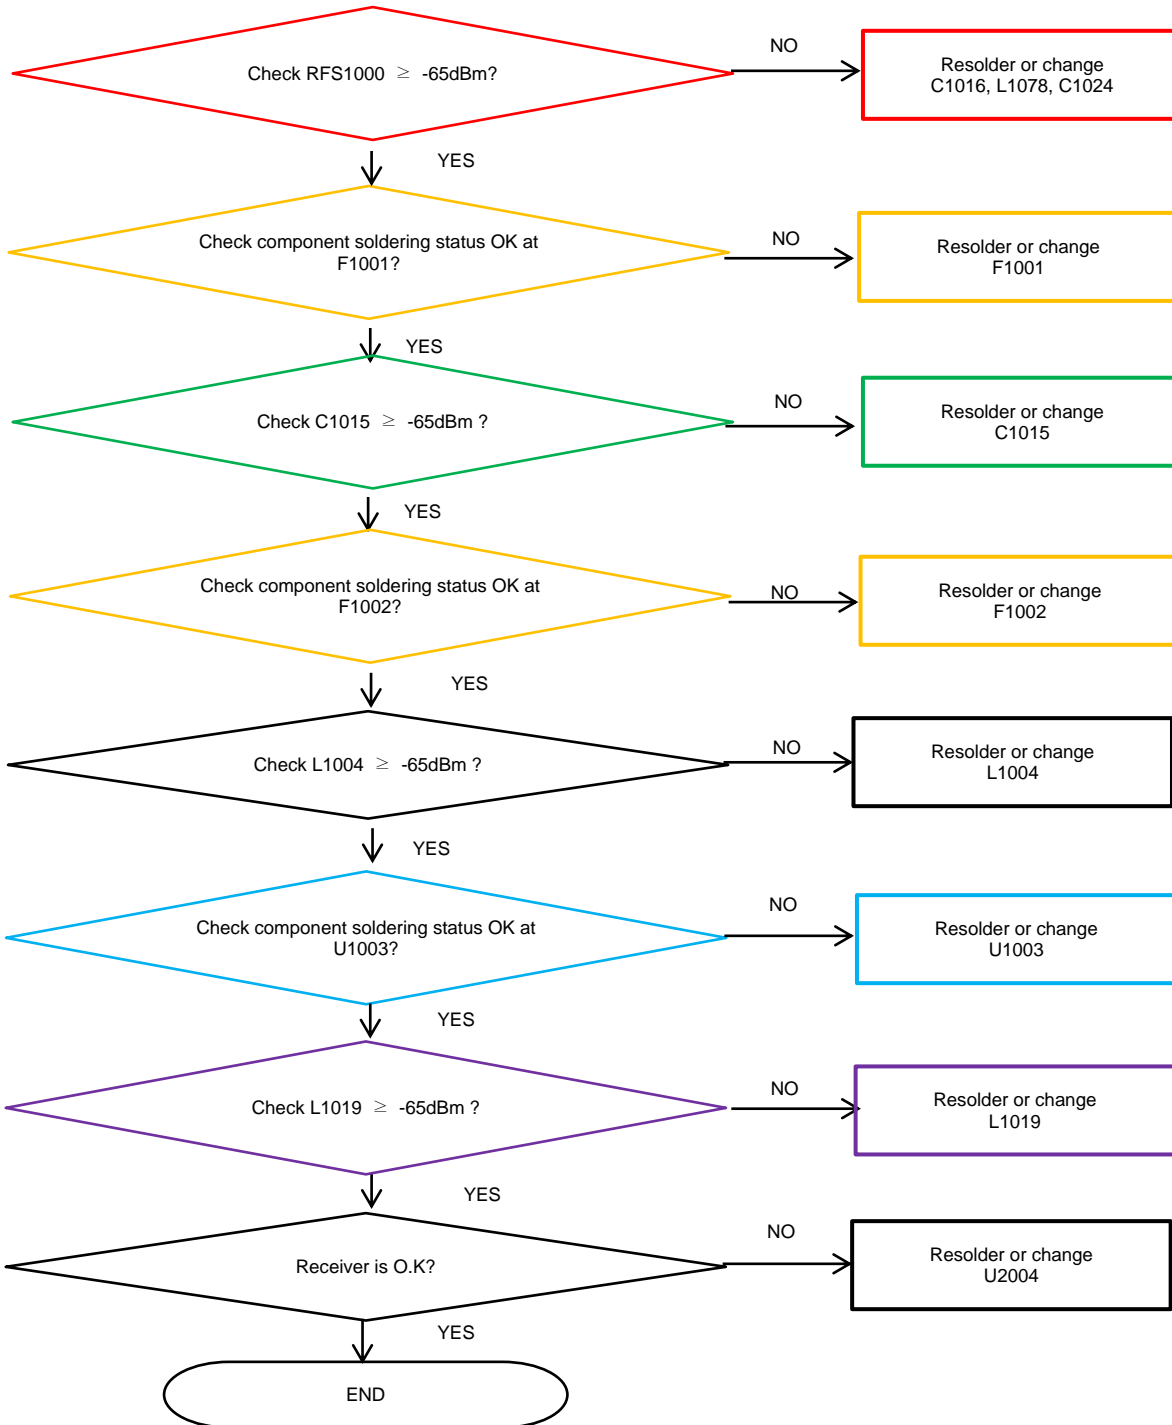


8. Level 3 Repair

8-4-25. LTE B8, WCDMA B8 / EGSM RX

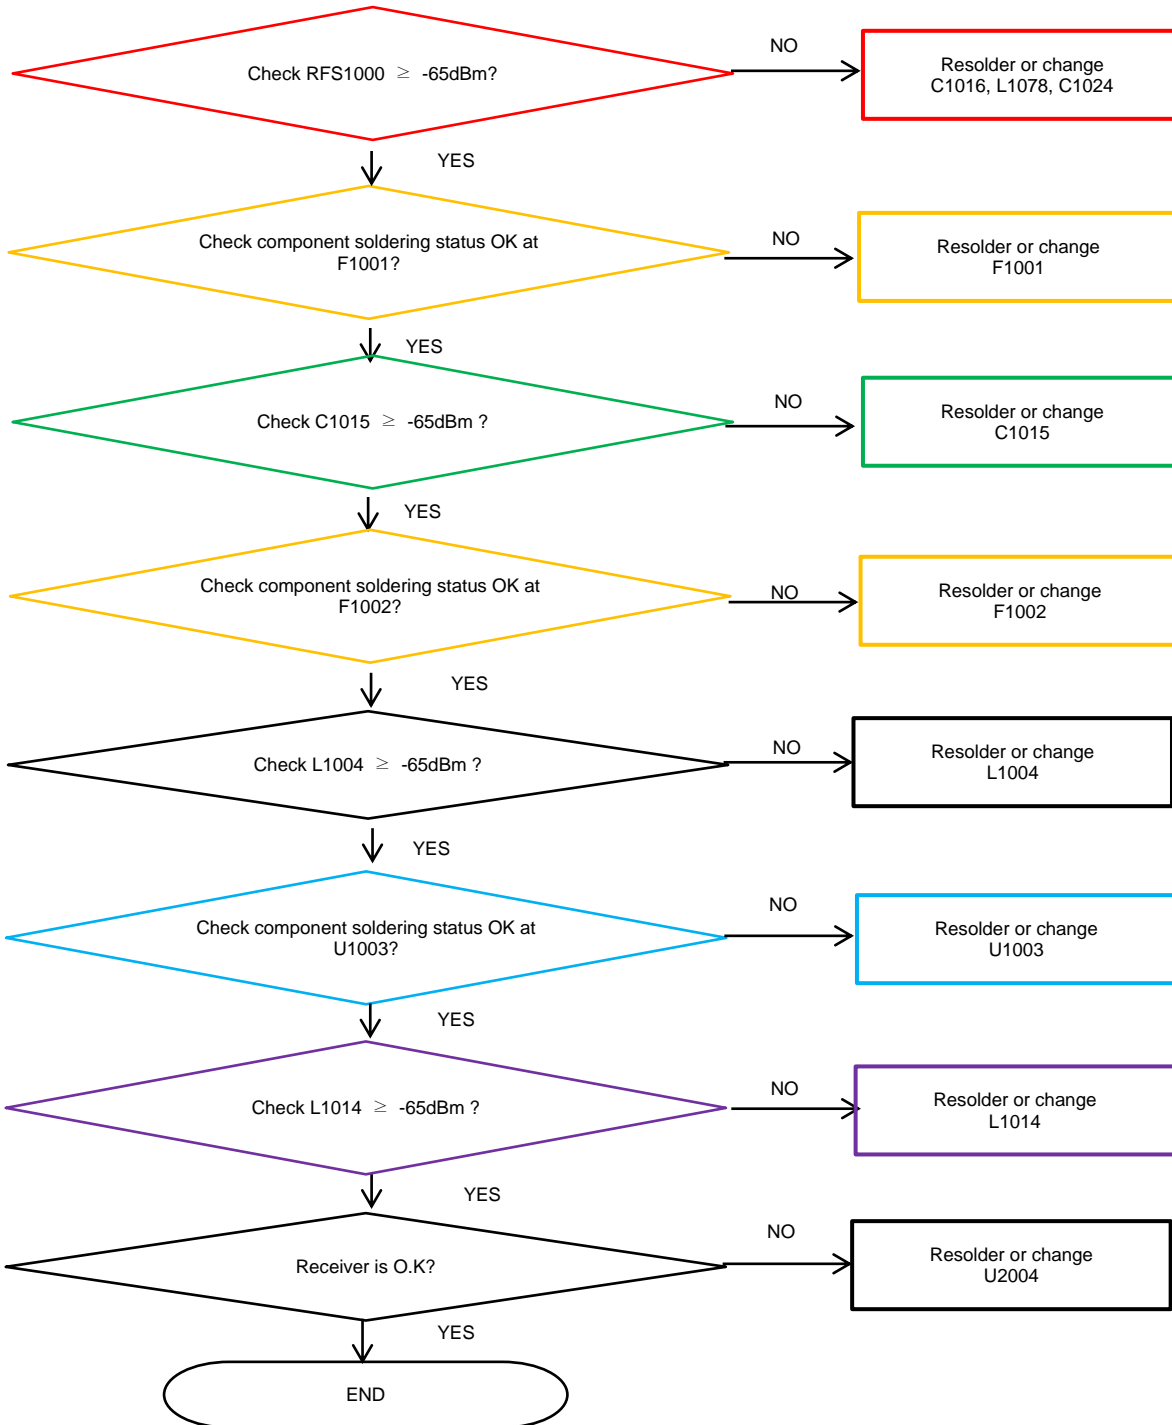


8. Level 3 Repair

8-4-26. LTE B20 RX

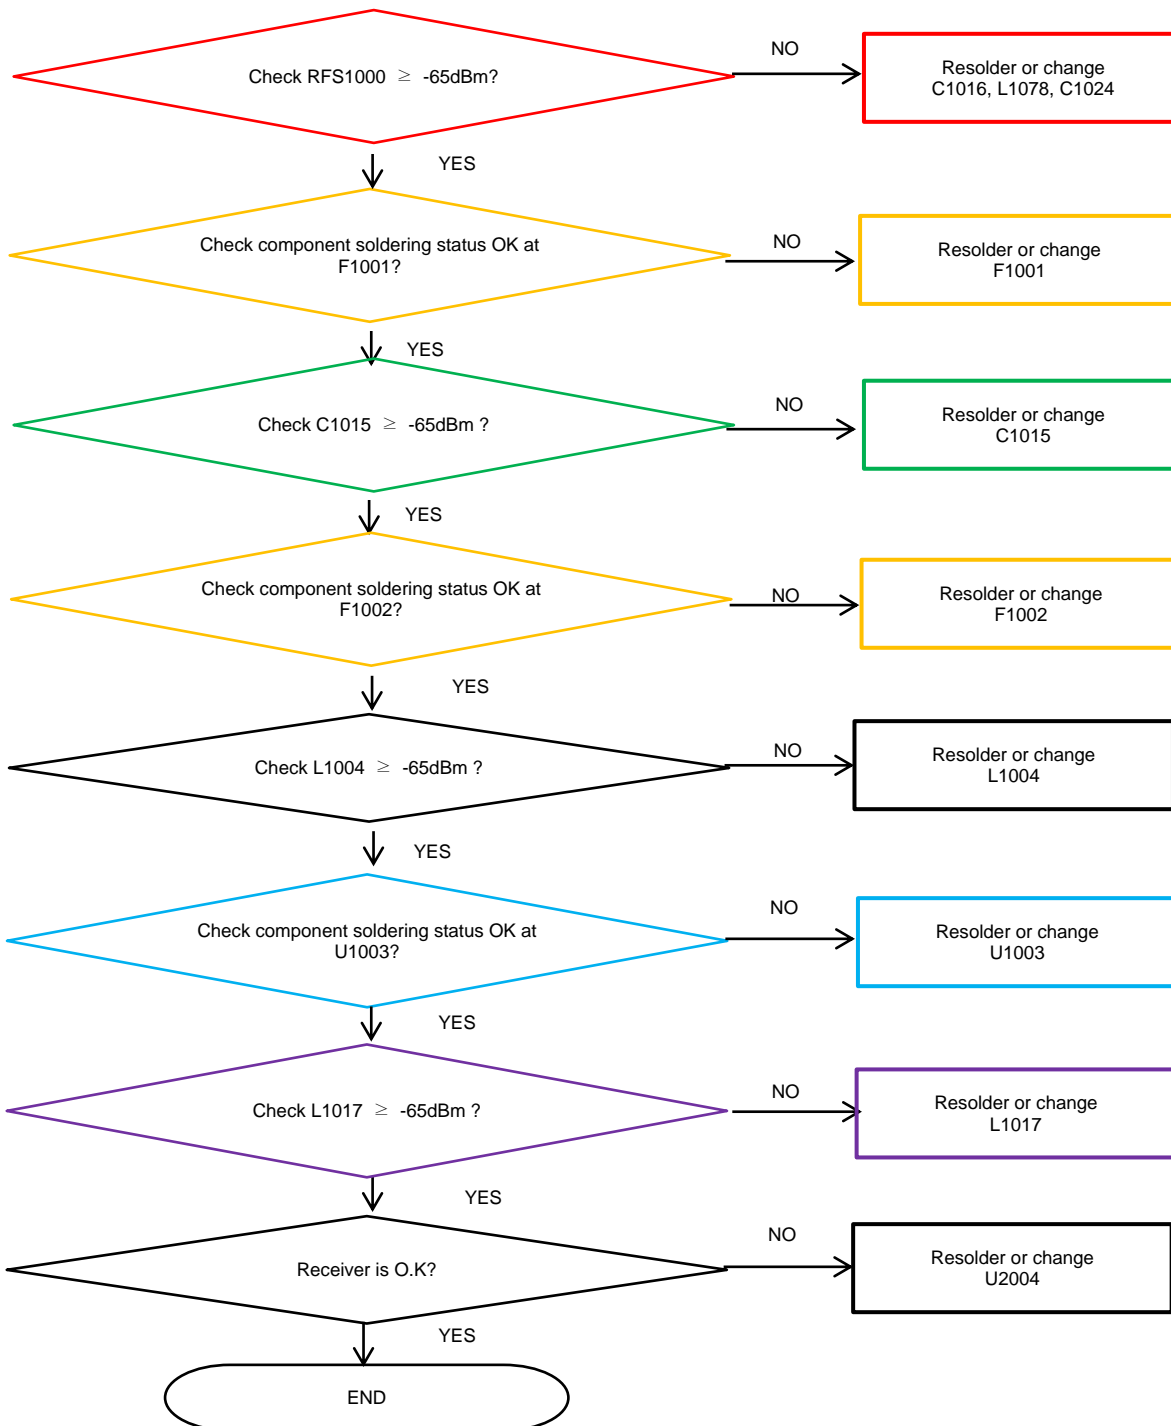


8. Level 3 Repair

8-4-30. LTE B7 RX

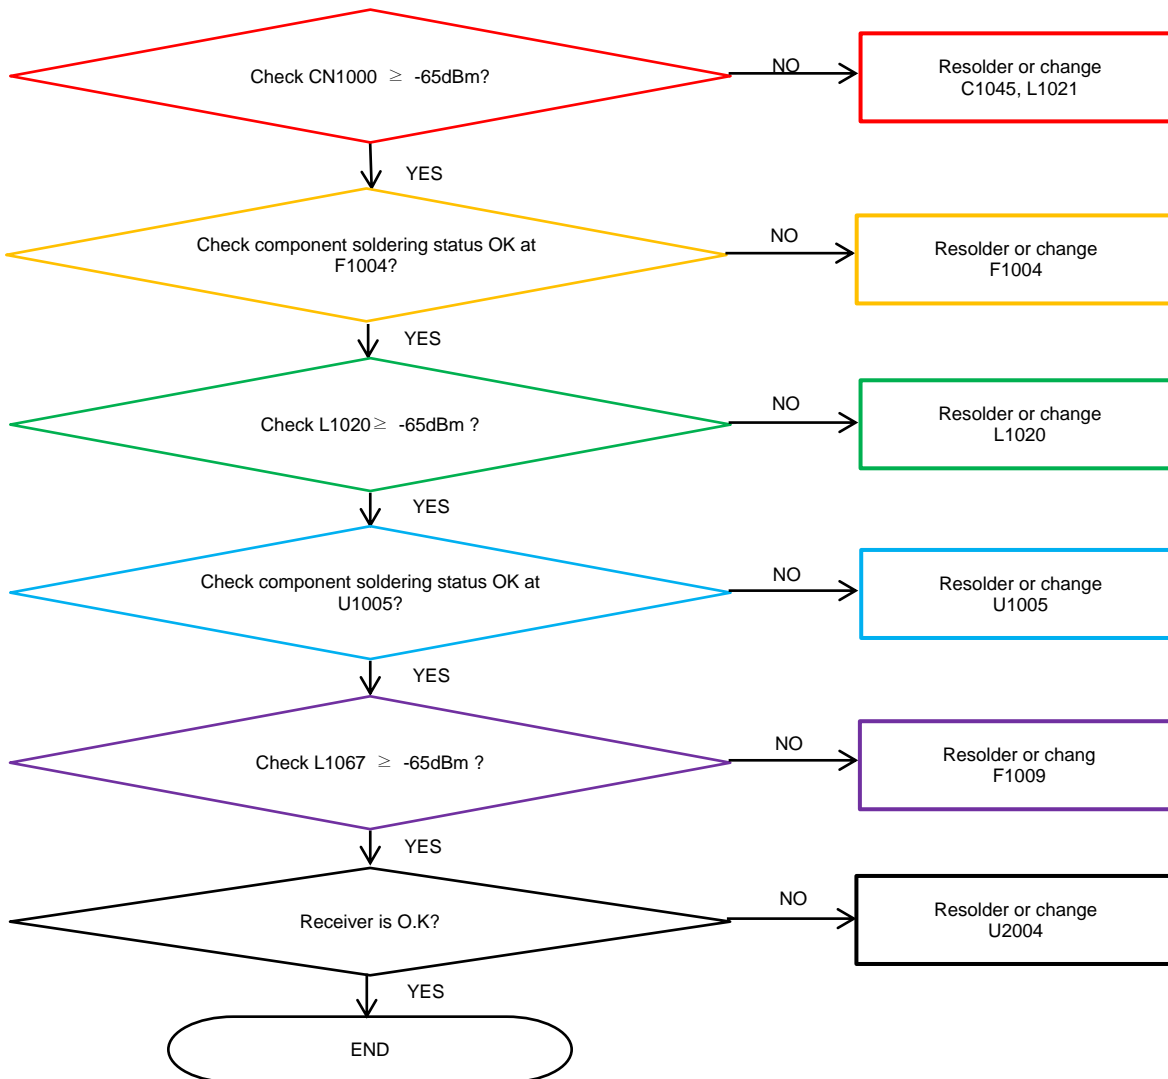


8. Level 3 Repair

8-4-31. LTE B38_41 RX

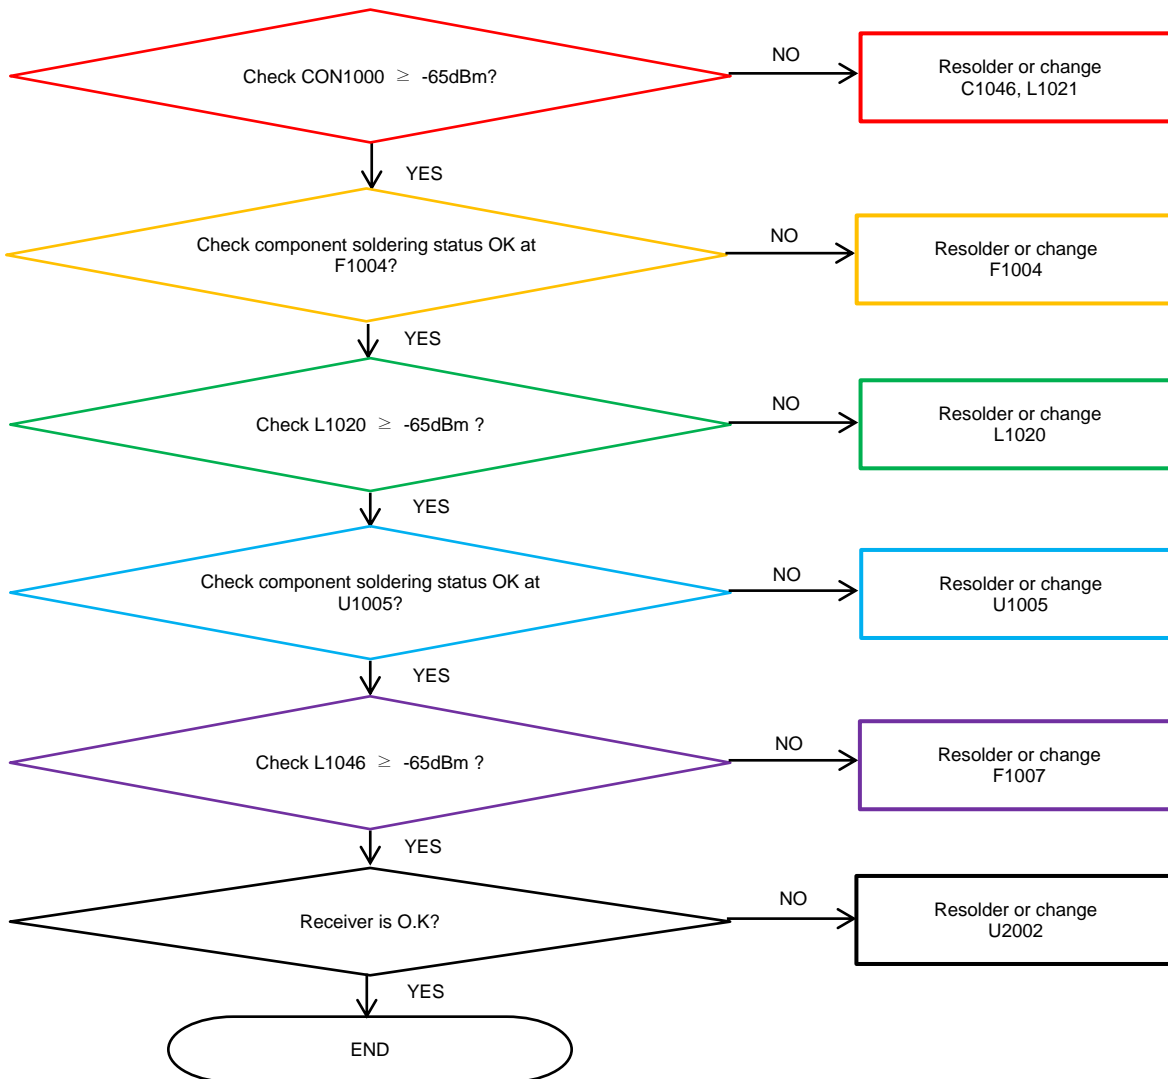


8. Level 3 Repair

8-4-32. LTE B40 RX

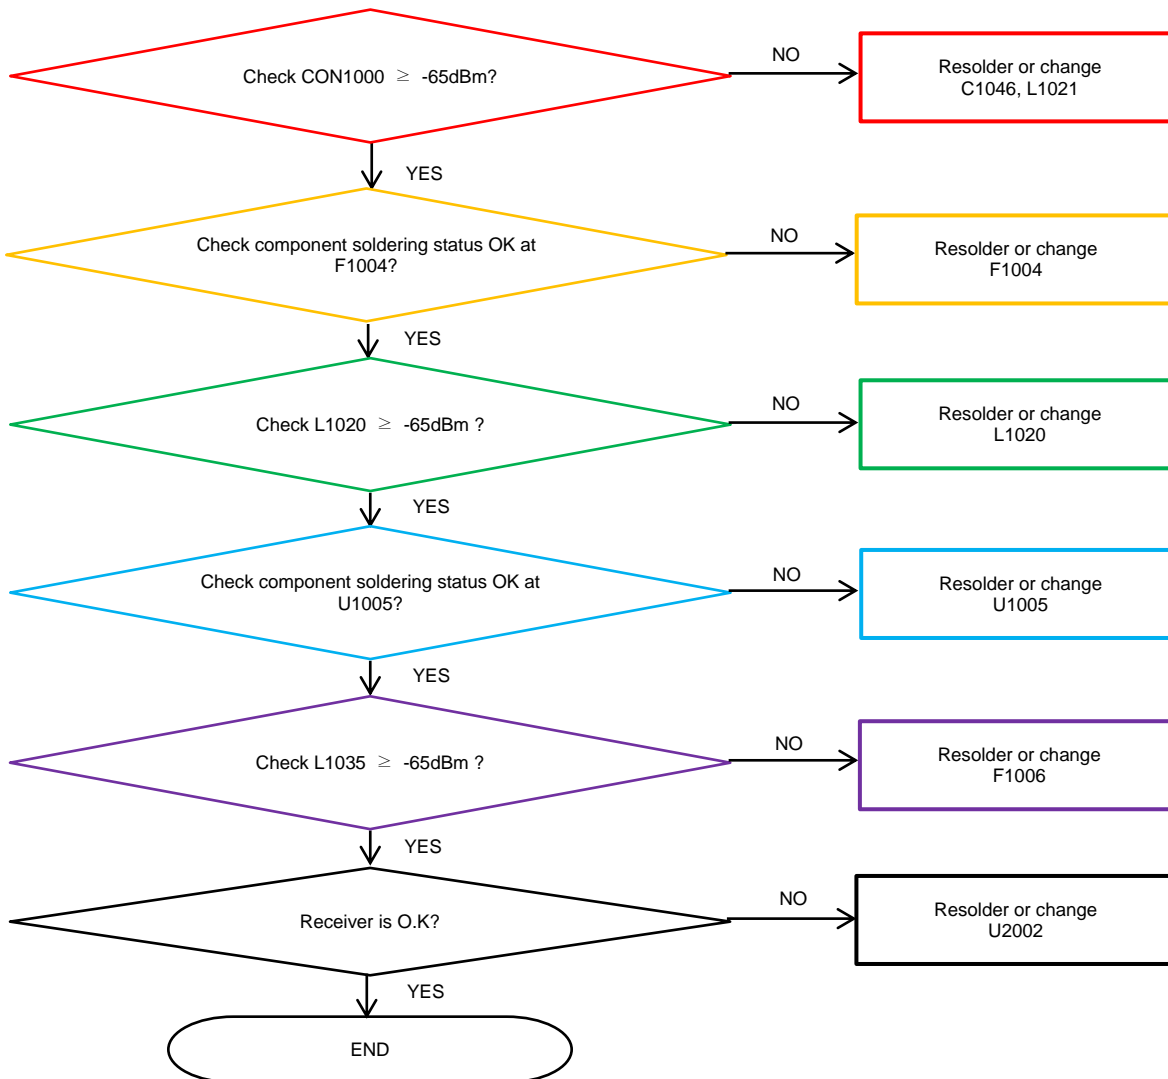


8. Level 3 Repair

8-4-33. GSM 850 / GSM900 TX

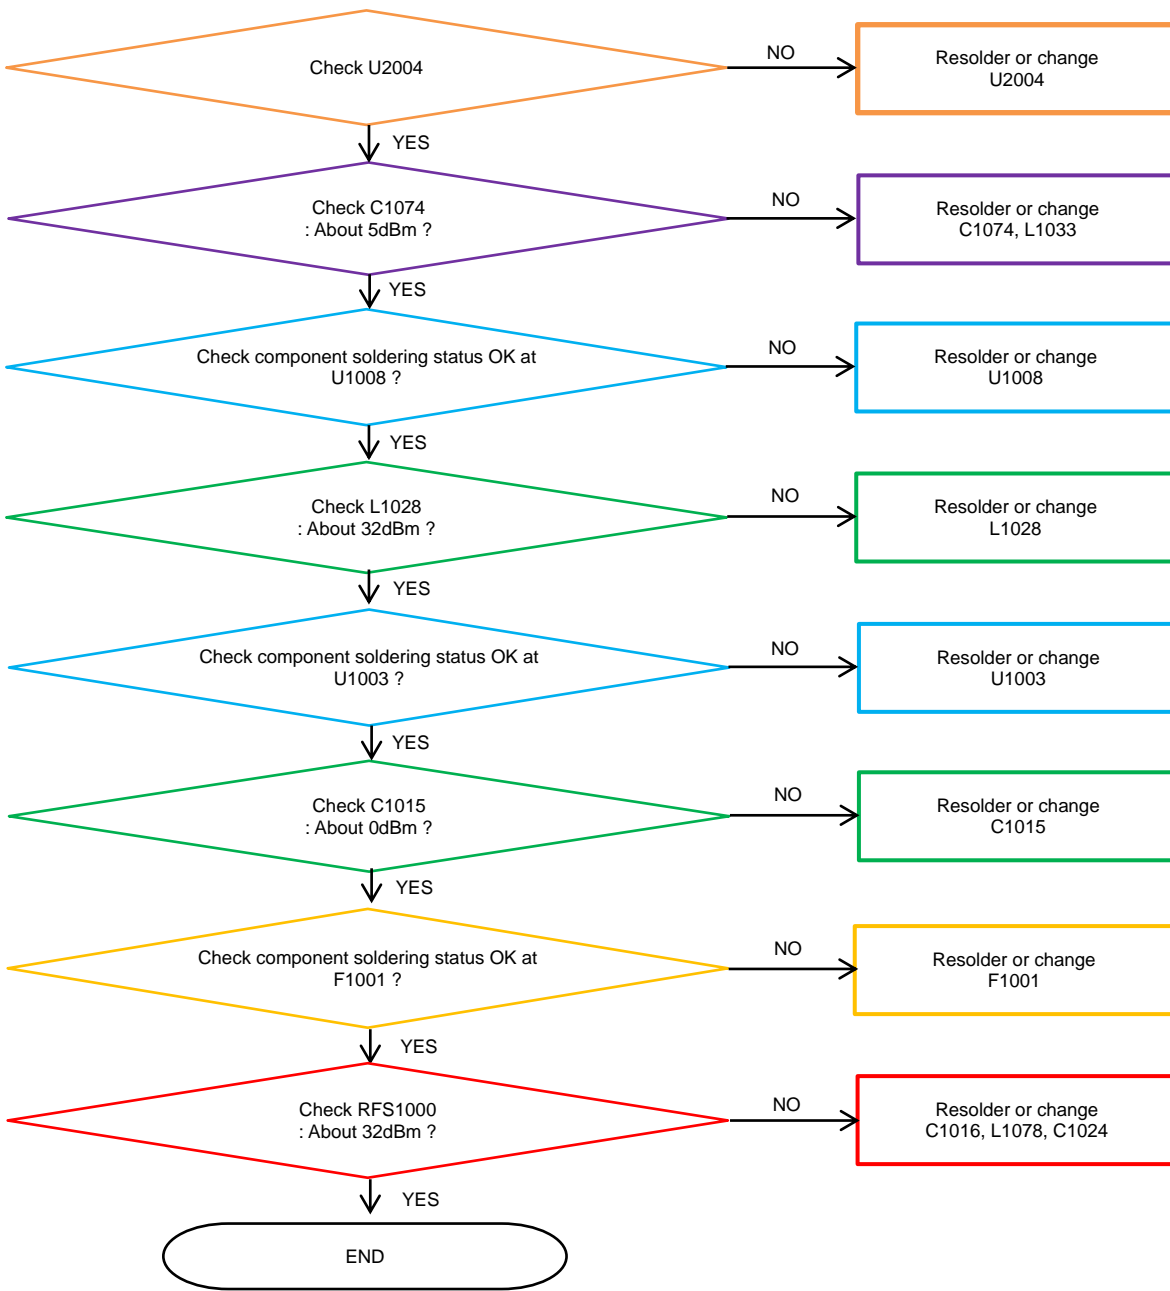


8. Level 3 Repair

8-4-34. GSM1800/ GSM1900 TX

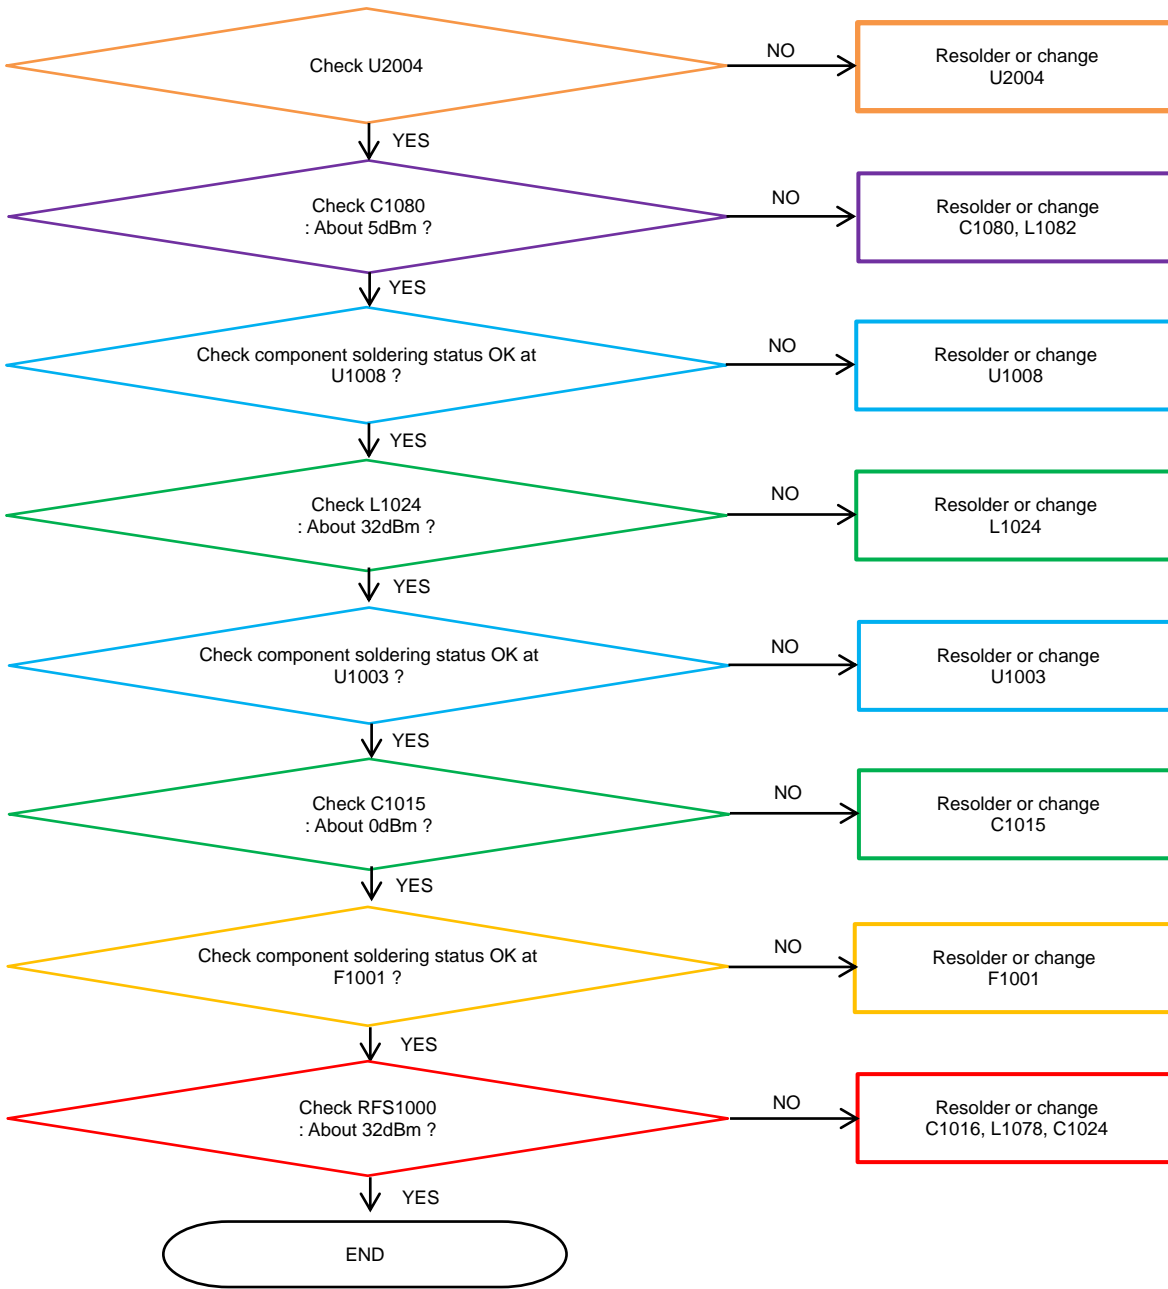


8. Level 3 Repair

8-4-35. LTE, WCDMA B1 TX

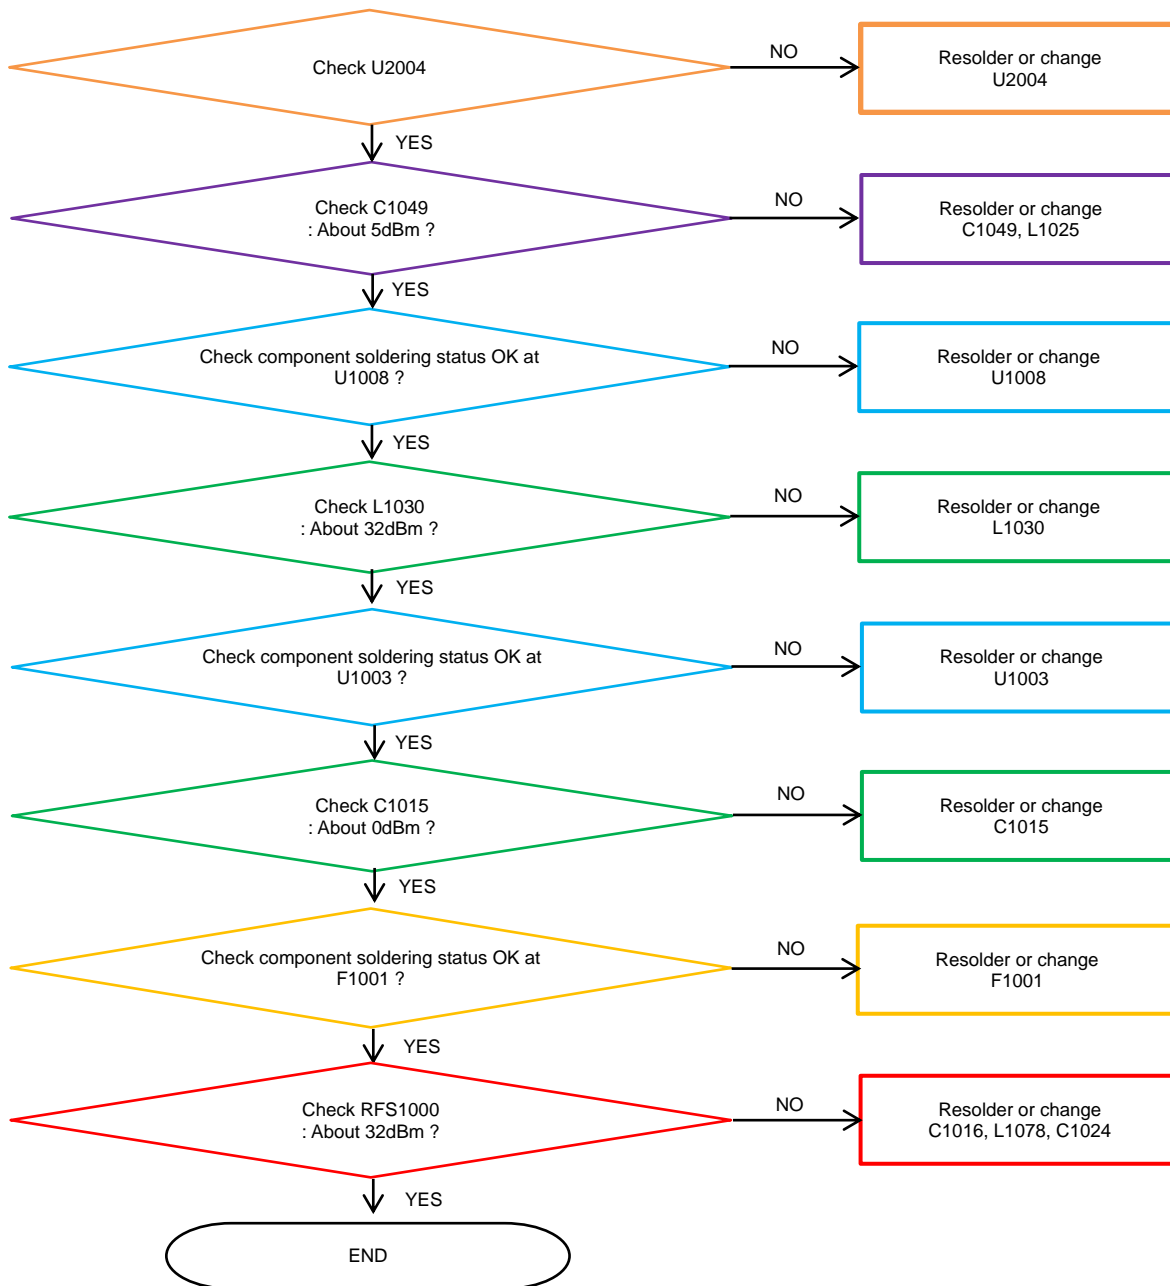


8. Level 3 Repair

8-4-36. WCDMA B2 TX

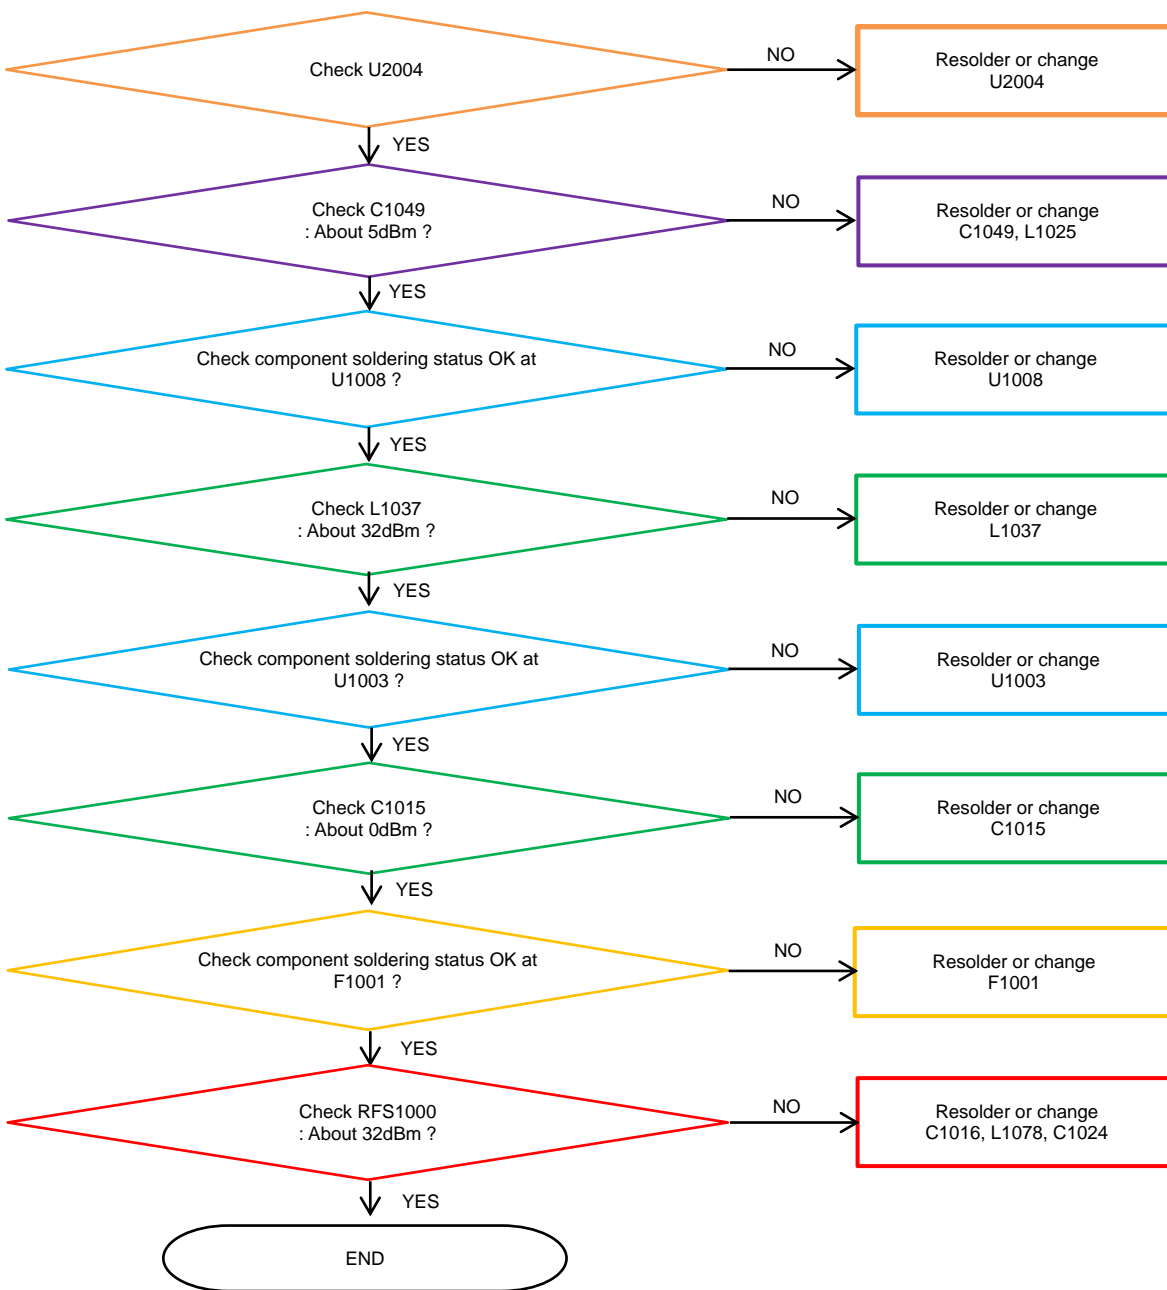


8. Level 3 Repair

8-4-37. LTE B3 TX

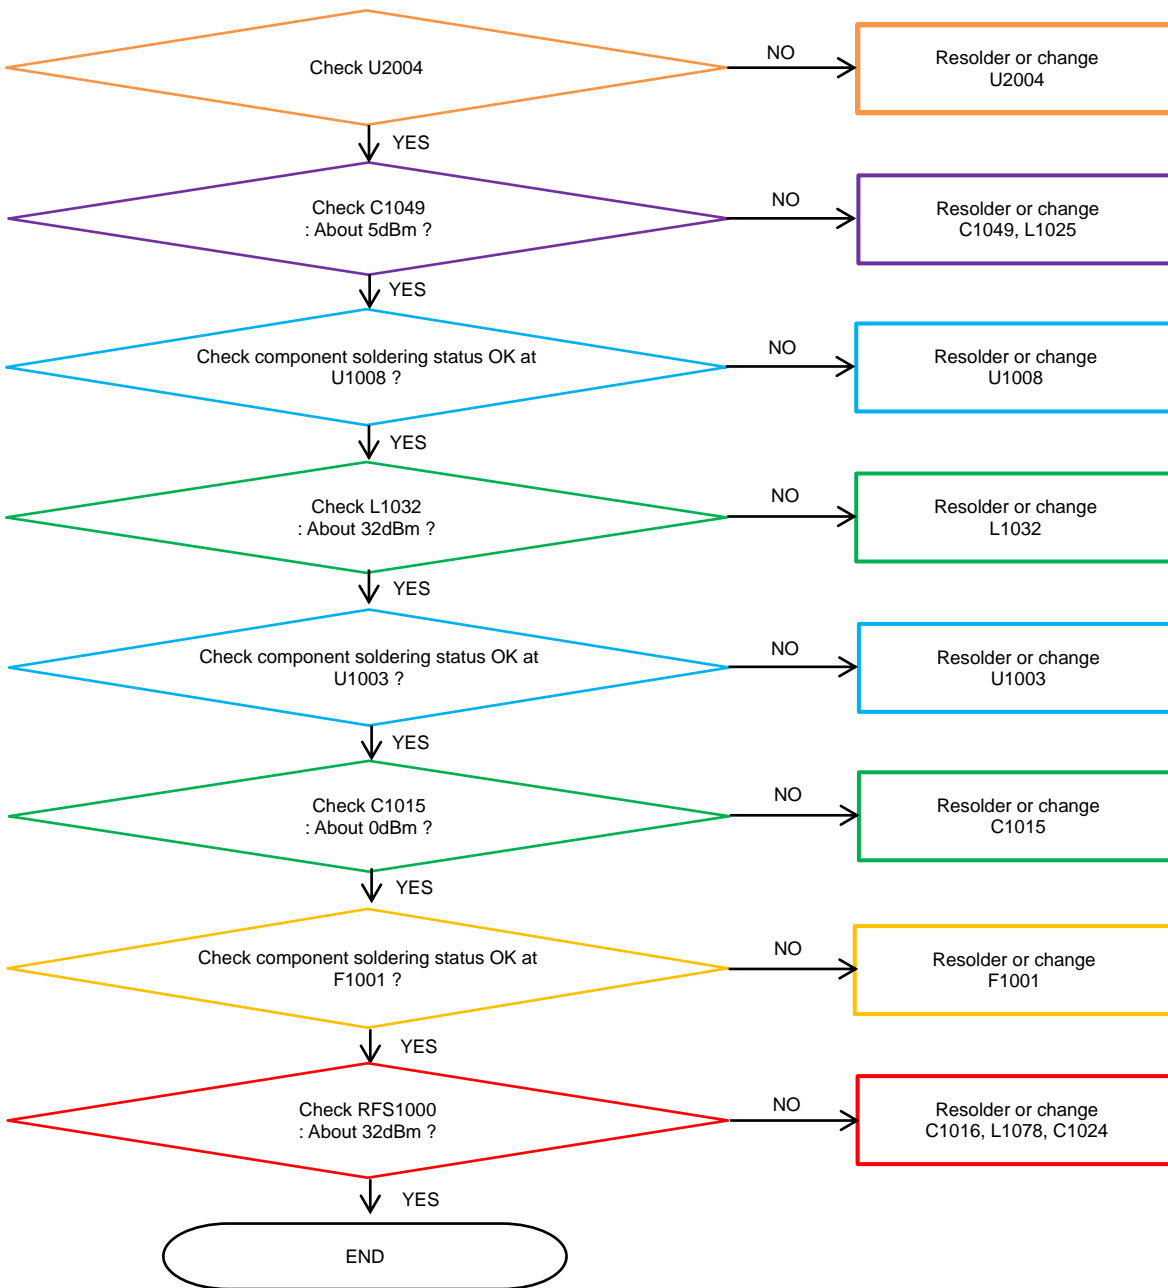


8. Level 3 Repair

8-4-38. LTE, WCDMA B5 TX

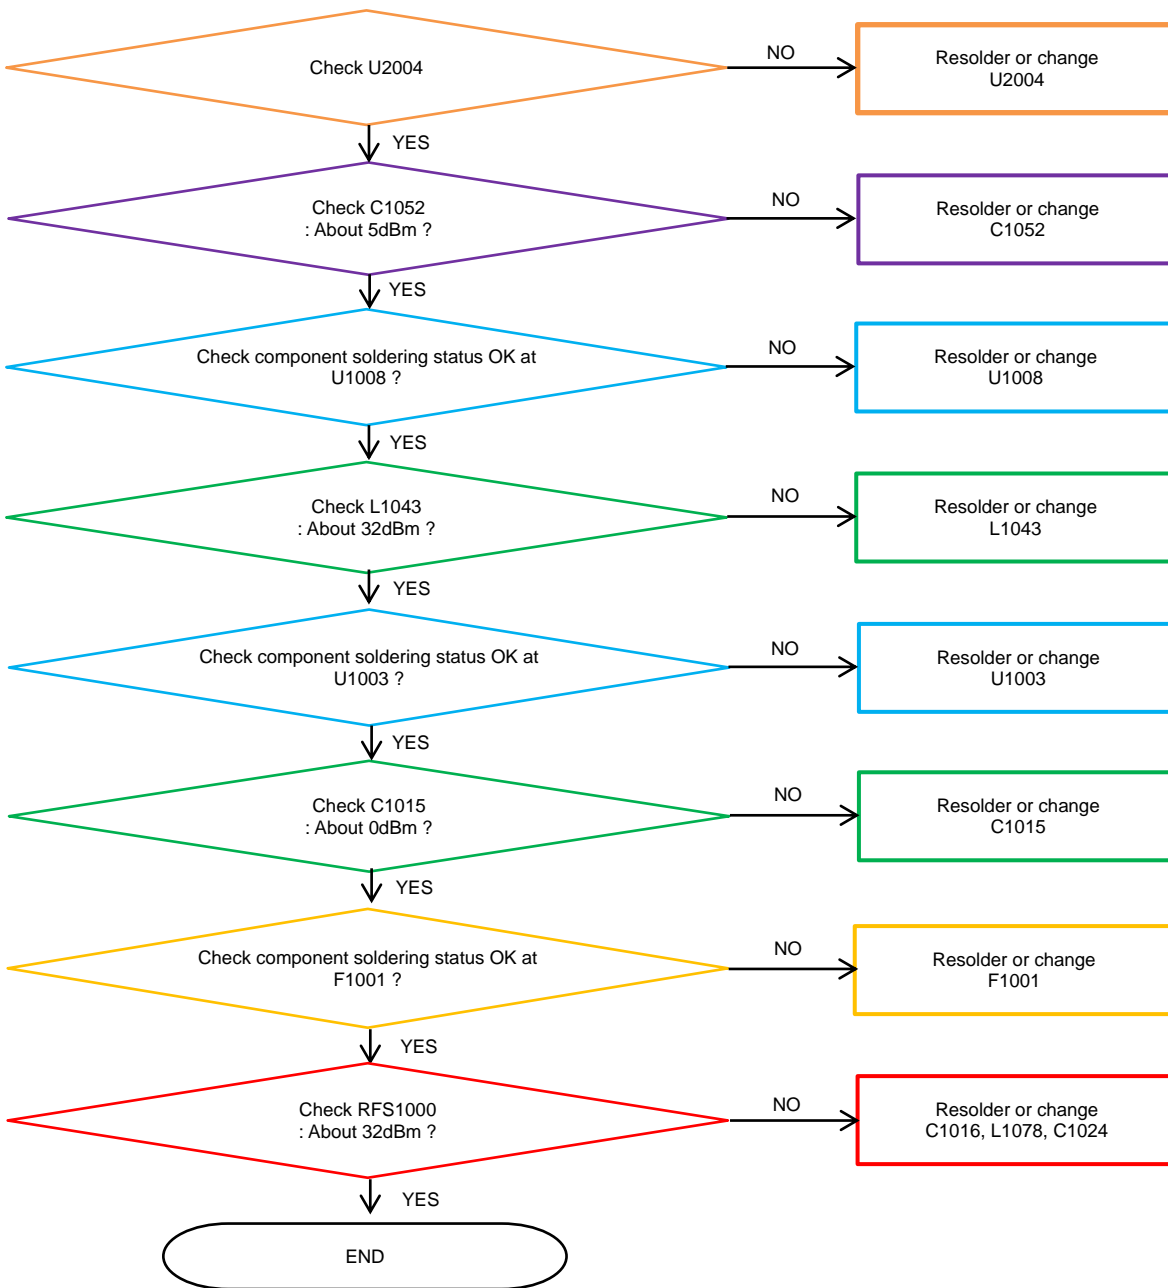


8. Level 3 Repair

8-4-39. LTE, WCDMA B8 TX

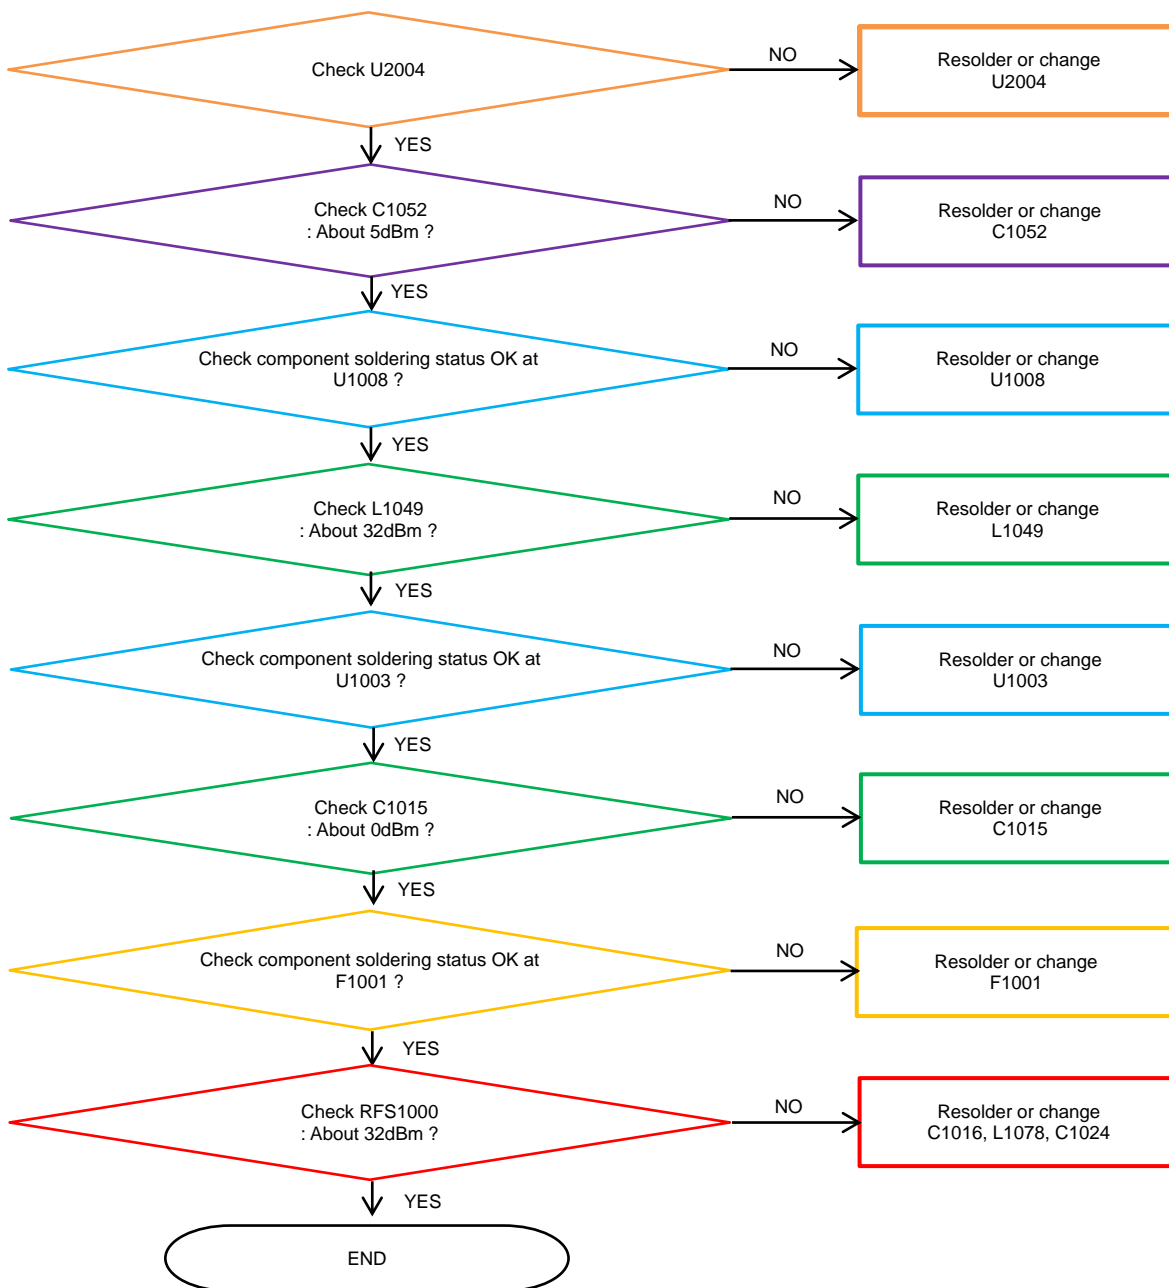


8. Level 3 Repair

8-4-40. LTE B20 TX

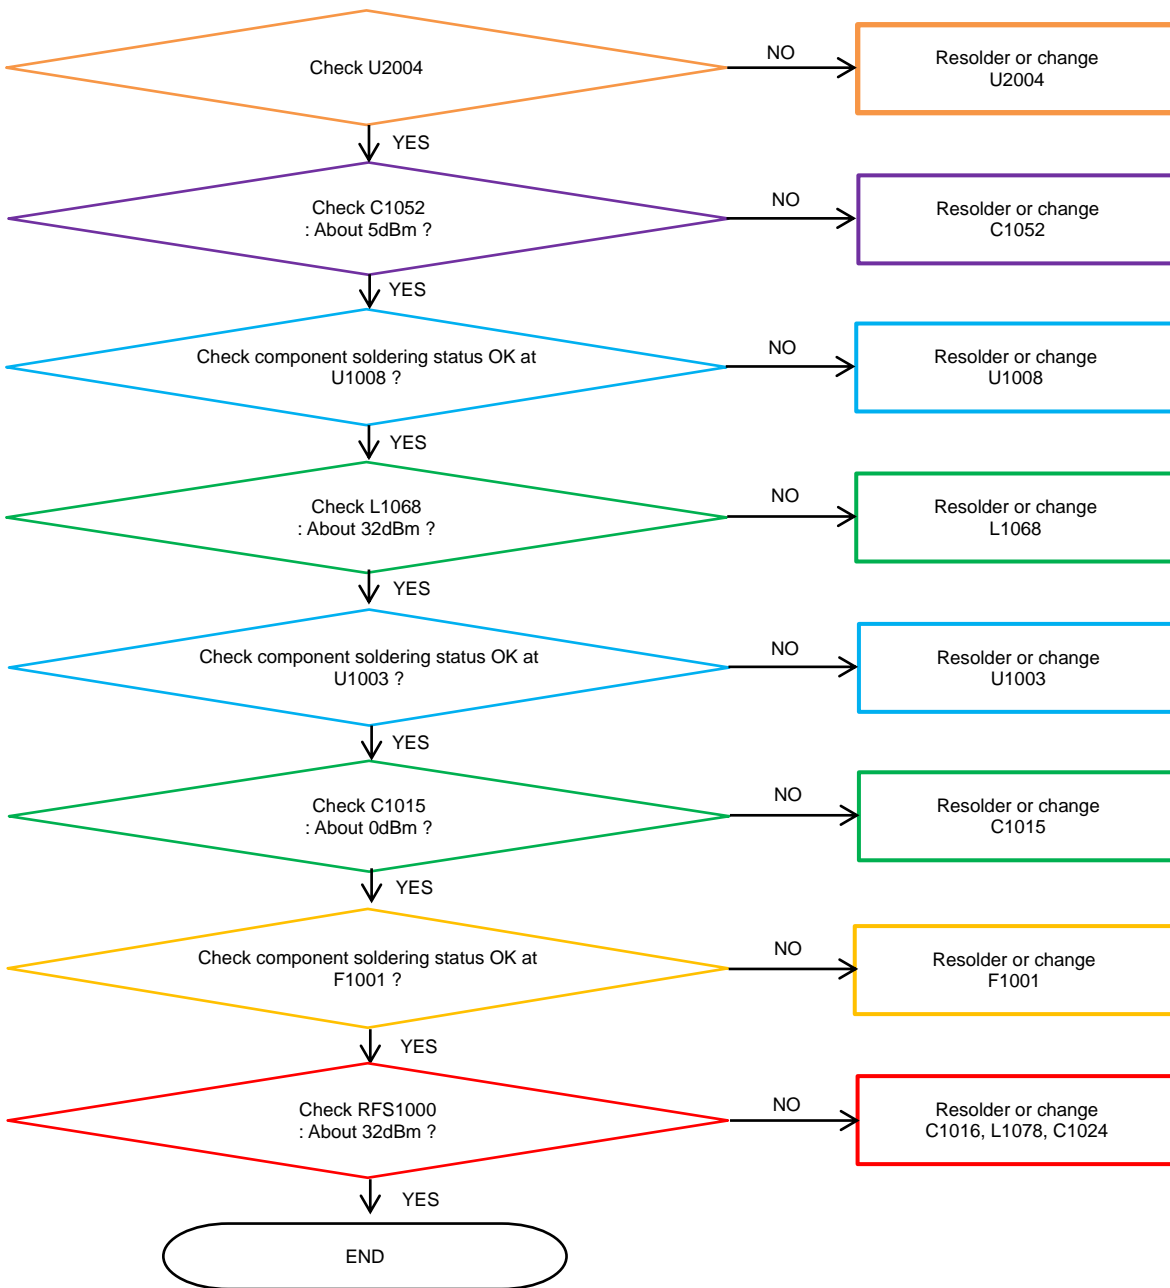


8. Level 3 Repair

8-4-41. LTE B7 TX

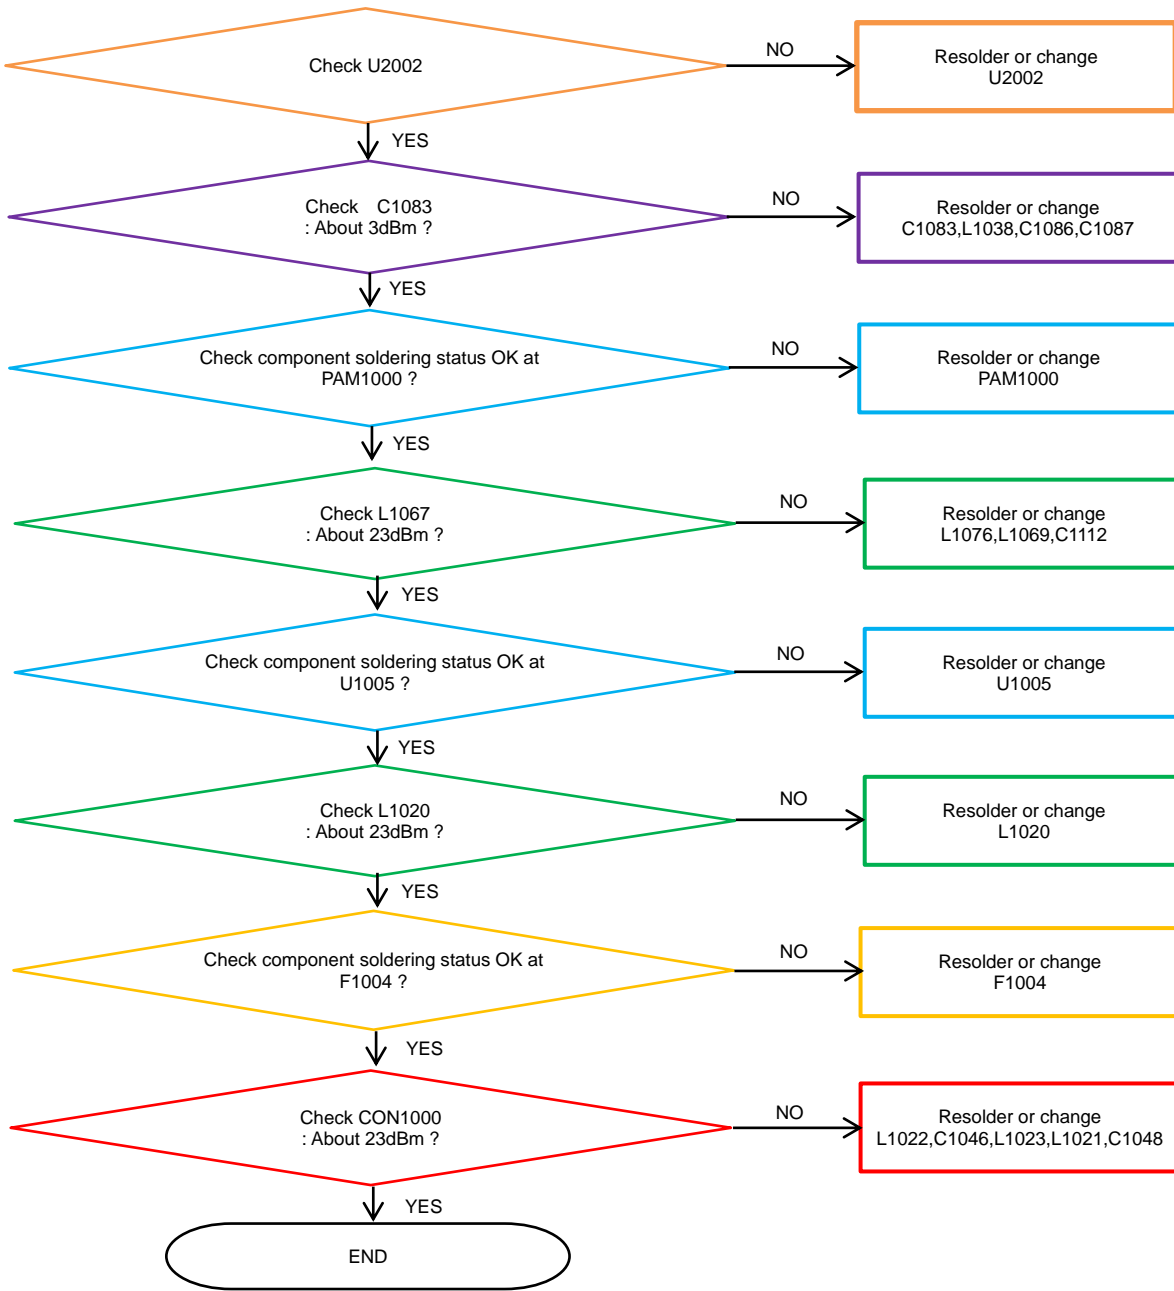

8. Level 3 Repair

8-4-42. LTE B38, 41 TX

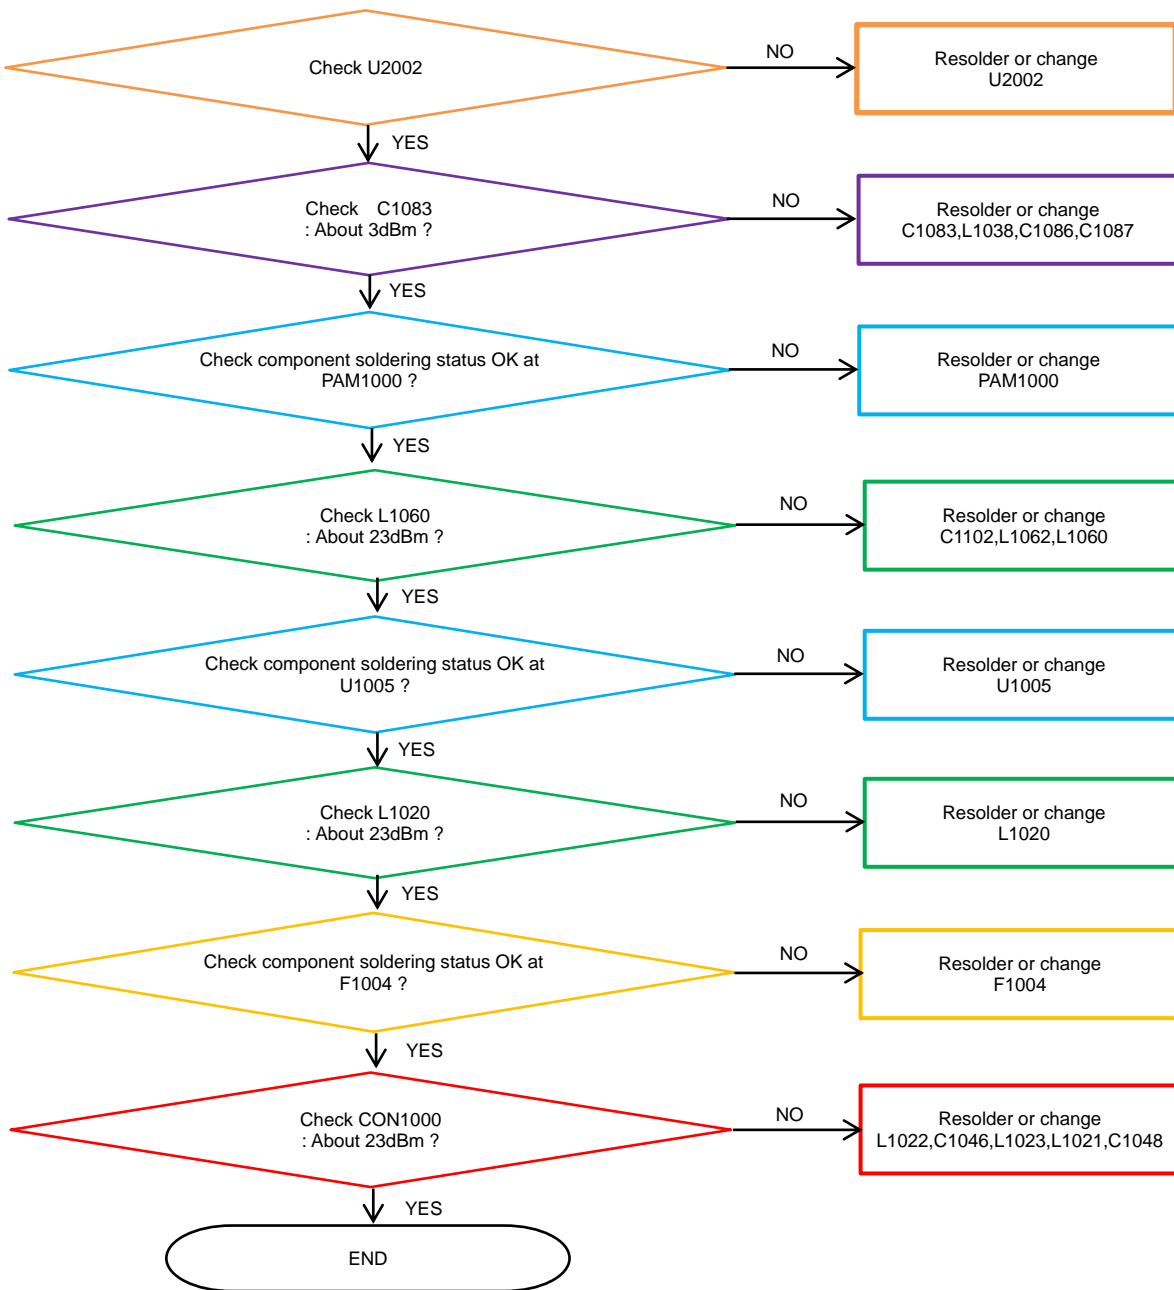

8. Level 3 Repair

8-4-43. LTE B40 TX

