

## 5. MAIN Electrical Parts List

### [SM-N976B]

Parts Code	Design LOC	Description
R11001,R3008	0202-002125	SOLDER BRIDGE
D7000	0404-001250	DIODE
ZD7001,ZD7002	0406-001809	DIODE
ZD1000	0406-001829	DIODE
LED9000	0601-003794	LED
U7001	0801-003639	IC
U9005	0903-002233	IC
U8004	1001-001755	IC
U7005	1001-001806	IC
U2003	1001-002075	IC
U7009	1003-003026	IC
U4006	1009-001076	IC
UME3000	1107-002663	IC
U4002	1201-003735	IC
U8001,U8002	1201-004178	IC
U1013	1201-004214	IC
U4003	1201-004235	IC
U9001	1203-008472	IC
U7006	1203-008811	IC
U4012,U8000	1203-008867	IC
U9008	1203-008910	IC
U9004	1203-009035	IC
U9000	1203-009154	IC
U7010	1203-009156	IC
U12000	1203-009182	IC
U7003	1203-009187	IC
U7000	1203-009191	IC
U9002	1203-009227	IC
U7008	1203-009234	IC
U3001	1203-009271	IC
U11004	1203-009277	IC
U9007	1203-009290	IC
U1003,U1004	1204-003776	IC
U9006	1205-005217	IC
U8003	1205-005729	IC
UCP12000	1205-006040	IC
U1001	1205-006048	IC

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

U4000	1205-006142	IC
UCP5000	1205-006152	IC
U4007	1209-002513	IC
U5000	1209-002567	IC
U4008	1209-002578	IC
U4010	1209-002654	IC
TH1000,TH4000,TH5000	1404-001724	THERMISTOR
TH5001,TH7000,TH7001	1404-001724	THERMISTOR
TH7002	1404-001724	THERMISTOR
V11000,V11002,V11004	1405-001395	VARISTOR
V11007,V2000,V2001	1405-001395	VARISTOR
V2004,V4000,V4001	1405-001415	VARISTOR
V4004	1405-001415	VARISTOR
V11009,V2008	1405-001420	VARISTOR
V4003	1405-001422	VARISTOR
V11005,V4005	1405-001439	VARISTOR
V11006,V11008	1405-001458	VARISTOR
R9020	2007-007135	R-CHIP
R8021,R8023	2007-007193	R-CHIP
R12002,R5000,R5039	2007-007310	R-CHIP
R5049,R5097	2007-007310	R-CHIP
R9015	2007-007698	R-CHIP
R12001,R12005,R4017	2007-007741	R-CHIP
R8000,R9006,R9011	2007-007741	R-CHIP
R3000,R3003,R3005	2007-008043	R-CHIP
R5009	2007-008047	R-CHIP
R9005,R9022	2007-008052	R-CHIP
R9001	2007-008296	R-CHIP
R7004	2007-008420	R-CHIP
R5056,R7020,R7023	2007-008531	R-CHIP
R7024,R8014,R9013	2007-008531	R-CHIP
R4018,R4019,R8016	2007-008774	R-CHIP
R8018,R8019,R8020	2007-008774	R-CHIP
R8022,R8024,R8025	2007-008774	R-CHIP
R8026	2007-008774	R-CHIP
R3012	2007-008785	R-CHIP
R4016	2007-009111	R-CHIP
R1010,R4022,R5054	2007-009157	R-CHIP
R5055,R5075,R5076	2007-009157	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

R7006,R7010,R7013	2007-009157	R-CHIP
R7016,R7025,R7036	2007-009157	R-CHIP
R7037,R8017,R8027	2007-009157	R-CHIP
R9000,R9003	2007-009157	R-CHIP
R4001,R4002	2007-009182	R-CHIP
R8007,R8008,R8010	2007-009201	R-CHIP
R8011,R8012	2007-009201	R-CHIP
R5083,R5087,R9009	2007-009212	R-CHIP
R9010	2007-009212	R-CHIP
R7031,R7032	2007-009233	R-CHIP
R3011	2007-009314	R-CHIP
R11000,R7021,R7022	2007-009408	R-CHIP
R8015	2007-009408	R-CHIP
R1009	2007-009766	R-CHIP
R9019	2007-009793	R-CHIP
R4013,R4014	2007-009805	R-CHIP
R5001,R5002,R5010	2007-009866	R-CHIP
R5011,R7000,R7027	2007-009866	R-CHIP
R7038,R9002,R9004	2007-009866	R-CHIP
R9021	2007-009866	R-CHIP
R12003,R12004,R12006	2007-009920	R-CHIP
R12007	2007-009920	R-CHIP
R7014,R7018,R7019	2007-010202	R-CHIP
R7029	2007-010202	R-CHIP
R7033,R7034	2007-010685	R-CHIP
R5058,R5059,R5061	2007-011262	R-CHIP
R5062,R5063,R5067	2007-011262	R-CHIP
R5068,R5073,R5077	2007-011262	R-CHIP
R5080,R5085,R5086	2007-011262	R-CHIP
R5090,R5091,R5092	2007-011262	R-CHIP
R5093,R5094,R5096	2007-011262	R-CHIP
R8004,R9016	2007-011262	R-CHIP
R4012	2007-011378	R-CHIP
R8006	2007-011532	R-CHIP
R5050,R5051,R5052	2007-011546	R-CHIP
R5053,R5098,R5099	2007-011546	R-CHIP
R5100,R5101	2007-011546	R-CHIP
R1003,R1004,R1007	2007-011548	R-CHIP
R1008,R12012,R12013	2007-011548	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

R12014,R12015,R7011	2007-011548	R-CHIP
R9017	2007-011548	R-CHIP
R4004,R4005,R4006	2007-011591	R-CHIP
R4007,R5005,R5006	2007-011591	R-CHIP
R5012,R5013,R5016	2007-011591	R-CHIP
R5017,R5018,R5019	2007-011591	R-CHIP
R5023,R5024,R5027	2007-011591	R-CHIP
R5028,R5031,R5032	2007-011591	R-CHIP
R5035,R5036,R5037	2007-011591	R-CHIP
R5038,R5040,R5041	2007-011591	R-CHIP
R5042,R5043,R7026	2007-011591	R-CHIP
R7028	2007-011591	R-CHIP
R5014,R5015,R5025	2007-011594	R-CHIP
R5026,R5033,R5034	2007-011594	R-CHIP
R5044,R5045,R5046	2007-011594	R-CHIP
R5047,R9007,R9008	2007-011594	R-CHIP
R9018	2007-011594	R-CHIP
R7042	2007-012777	R-CHIP
C7130	2203-000233	C-CERAMIC,CHIP
C7139	2203-001033	C-CERAMIC,CHIP
C1027,C4031,C8018	2203-005682	C-CERAMIC,CHIP
L1020,L2002	2203-005682	C-CERAMIC,CHIP
C7142,C7143	2203-005717	C-CERAMIC,CHIP
C2010,C2036,C8031	2203-005726	C-CERAMIC,CHIP
C8035,C8037,C8038	2203-005726	C-CERAMIC,CHIP
C8041	2203-005726	C-CERAMIC,CHIP
C1068,C2034,C5006	2203-005727	C-CERAMIC,CHIP
C1030	2203-005729	C-CERAMIC,CHIP
C9009	2203-005734	C-CERAMIC,CHIP
C1089,C2019,C2020	2203-005736	C-CERAMIC,CHIP
C2023,C2025,C2028	2203-005736	C-CERAMIC,CHIP
C2039,C2040,C4010	2203-005736	C-CERAMIC,CHIP
C4016,C4017,C4035	2203-005736	C-CERAMIC,CHIP
C4060,C4062,C4068	2203-005736	C-CERAMIC,CHIP
C9043,C9044,C9045	2203-005736	C-CERAMIC,CHIP
C9046,C9047,C9053	2203-005736	C-CERAMIC,CHIP
C9088,C9089,L2004	2203-005736	C-CERAMIC,CHIP
L2017,L4026	2203-005736	C-CERAMIC,CHIP
C9035,C9078,C9095	2203-005779	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C9104	2203-005779	C-CERAMIC,CHIP
C2001,C2008,C2022	2203-005789	C-CERAMIC,CHIP
C2027	2203-005789	C-CERAMIC,CHIP
C2007,C2014	2203-005792	C-CERAMIC,CHIP
C2021	2203-006187	C-CERAMIC,CHIP
C3023,C9120,C9129	2203-006194	C-CERAMIC,CHIP
C12023,C12024,C12103	2203-006400	C-CERAMIC,CHIP
C2000,C2018,C2030	2203-006400	C-CERAMIC,CHIP
C3012,C3013,C3015	2203-006400	C-CERAMIC,CHIP
C4072,C5004,C5007	2203-006400	C-CERAMIC,CHIP
C7098,C7123,C7156	2203-006400	C-CERAMIC,CHIP
C1000	2203-006562	C-CERAMIC,CHIP
C1059,L2023	2203-006611	C-CERAMIC,CHIP
C4013	2203-006665	C-CERAMIC,CHIP
C5009	2203-006668	C-CERAMIC,CHIP
C1049,C1050	2203-006712	C-CERAMIC,CHIP
C4034,C7129,C7134	2203-006839	C-CERAMIC,CHIP
C7146,C7149	2203-006839	C-CERAMIC,CHIP
C1028	2203-006844	C-CERAMIC,CHIP
C1091	2203-006896	C-CERAMIC,CHIP
C1007,C1009,C1092	2203-006979	C-CERAMIC,CHIP
C12083,C12093,C12109	2203-007210	C-CERAMIC,CHIP
C12110,C12111,C12112	2203-007210	C-CERAMIC,CHIP
C5002,C5003,C5014	2203-007210	C-CERAMIC,CHIP
C5015,C6013	2203-007210	C-CERAMIC,CHIP
C11010,C11011,C3022	2203-007317	C-CERAMIC,CHIP
C6054,C6064,C6100	2203-007317	C-CERAMIC,CHIP
C6103,C6115,C7090	2203-007317	C-CERAMIC,CHIP
C7152,C8021,C8023	2203-007317	C-CERAMIC,CHIP
C8026,C8033,C8036	2203-007317	C-CERAMIC,CHIP
C9011,C9033,C9041	2203-007317	C-CERAMIC,CHIP
C9042,C9072,C9075	2203-007317	C-CERAMIC,CHIP
C9086,C9087,C9097	2203-007317	C-CERAMIC,CHIP
C7153,C8009,C8010	2203-007391	C-CERAMIC,CHIP
C8030,C9029	2203-007391	C-CERAMIC,CHIP
C1038,C1051,C1052	2203-007392	C-CERAMIC,CHIP
C1053	2203-007392	C-CERAMIC,CHIP
C1017,C1021,C1041	2203-007393	C-CERAMIC,CHIP
C1042,C12016,C12032	2203-007393	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C12037,C4022,C4026	2203-007393	C-CERAMIC,CHIP
C4061,C4066,C7024	2203-007393	C-CERAMIC,CHIP
C7060,C7068,C7148	2203-007393	C-CERAMIC,CHIP
C9028	2203-007393	C-CERAMIC,CHIP
C7125,C7126	2203-007425	C-CERAMIC,CHIP
C1004,C1006,C1008	2203-007456	C-CERAMIC,CHIP
C1011	2203-007456	C-CERAMIC,CHIP
C4043,C4073	2203-007544	C-CERAMIC,CHIP
C1001,C1005,C1010	2203-007621	C-CERAMIC,CHIP
C1018,C1022,C2006	2203-007621	C-CERAMIC,CHIP
C2017,C2029,C4027	2203-007621	C-CERAMIC,CHIP
C4028,C4041,C4044	2203-007621	C-CERAMIC,CHIP
C4045,C4074,C5000	2203-007621	C-CERAMIC,CHIP
C5001,C7011,C7021	2203-007621	C-CERAMIC,CHIP
C7041,C7042,C7045	2203-007621	C-CERAMIC,CHIP
C8022,C8049,C8051	2203-007621	C-CERAMIC,CHIP
C1002,C1003,C1012	2203-007796	C-CERAMIC,CHIP
C1029,C1031,C1090	2203-007796	C-CERAMIC,CHIP
C11013,C12028,C12031	2203-007796	C-CERAMIC,CHIP
C12034,C12039,C12040	2203-007796	C-CERAMIC,CHIP
C12041,C12050,C12051	2203-007796	C-CERAMIC,CHIP
C12052,C12058,C12059	2203-007796	C-CERAMIC,CHIP
C12060,C12061,C12062	2203-007796	C-CERAMIC,CHIP
C12063,C12064,C12065	2203-007796	C-CERAMIC,CHIP
C12066,C12067,C12068	2203-007796	C-CERAMIC,CHIP
C12069,C12072,C12073	2203-007796	C-CERAMIC,CHIP
C12074,C12075,C12076	2203-007796	C-CERAMIC,CHIP
C12077,C12078,C12079	2203-007796	C-CERAMIC,CHIP
C12080,C12081,C12082	2203-007796	C-CERAMIC,CHIP
C12084,C12085,C12086	2203-007796	C-CERAMIC,CHIP
C12087,C12088,C12089	2203-007796	C-CERAMIC,CHIP
C12090,C12091,C12092	2203-007796	C-CERAMIC,CHIP
C12094,C12095,C12096	2203-007796	C-CERAMIC,CHIP
C12097,C12098,C12099	2203-007796	C-CERAMIC,CHIP
C12100,C12101,C12102	2203-007796	C-CERAMIC,CHIP
C3002,C3004,C3005	2203-007796	C-CERAMIC,CHIP
C4000,C4001,C4002	2203-007796	C-CERAMIC,CHIP
C4003,C4004,C4018	2203-007796	C-CERAMIC,CHIP
C4029,C4069,C4070	2203-007796	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C6000,C6001,C6011	2203-007796	C-CERAMIC,CHIP
C6012,C6015,C6016	2203-007796	C-CERAMIC,CHIP
C6024,C6027,C6028	2203-007796	C-CERAMIC,CHIP
C6030,C6031,C6032	2203-007796	C-CERAMIC,CHIP
C6034,C6035,C6036	2203-007796	C-CERAMIC,CHIP
C6045,C6046,C6048	2203-007796	C-CERAMIC,CHIP
C6051,C6052,C6055	2203-007796	C-CERAMIC,CHIP
C6056,C6057,C6058	2203-007796	C-CERAMIC,CHIP
C6059,C6060,C6061	2203-007796	C-CERAMIC,CHIP
C6063,C6065,C6066	2203-007796	C-CERAMIC,CHIP
C6067,C6068,C6069	2203-007796	C-CERAMIC,CHIP
C6070,C6071,C6072	2203-007796	C-CERAMIC,CHIP
C6073,C6074,C6075	2203-007796	C-CERAMIC,CHIP
C6076,C6077,C6078	2203-007796	C-CERAMIC,CHIP
C6079,C6080,C6081	2203-007796	C-CERAMIC,CHIP
C6084,C6086,C6088	2203-007796	C-CERAMIC,CHIP
C6089,C6090,C6091	2203-007796	C-CERAMIC,CHIP
C6093,C6094,C6095	2203-007796	C-CERAMIC,CHIP
C6096,C6097,C6102	2203-007796	C-CERAMIC,CHIP
C6106,C6107,C6108	2203-007796	C-CERAMIC,CHIP
C6109,C6110,C6111	2203-007796	C-CERAMIC,CHIP
C6112,C7055,C7056	2203-007796	C-CERAMIC,CHIP
C7057,C7062,C7063	2203-007796	C-CERAMIC,CHIP
C7066,C7070,C7071	2203-007796	C-CERAMIC,CHIP
C7075,C7076,C7077	2203-007796	C-CERAMIC,CHIP
C7078,C7091,C7093	2203-007796	C-CERAMIC,CHIP
C7094,C7096,C7117	2203-007796	C-CERAMIC,CHIP
C7127,C7144,C7151	2203-007796	C-CERAMIC,CHIP
C7154,C7155,C8011	2203-007796	C-CERAMIC,CHIP
C8012,C8013,C8015	2203-007796	C-CERAMIC,CHIP
C8024,C8025,C8027	2203-007796	C-CERAMIC,CHIP
C8028,C8044,C9002	2203-007796	C-CERAMIC,CHIP
C9003,C9062,C9070	2203-007796	C-CERAMIC,CHIP
C9071,C9096	2203-007796	C-CERAMIC,CHIP
C1034,C1035,C1036	2203-008097	C-CERAMIC,CHIP
C1037,C1039,C1040	2203-008097	C-CERAMIC,CHIP
C1043,C1044,C1045	2203-008097	C-CERAMIC,CHIP
C1047,C1054,C1055	2203-008097	C-CERAMIC,CHIP
C1056,C1057,C12025	2203-008097	C-CERAMIC,CHIP

## 5. MAIN Electrical Parts List

C7009,C7022,C7121	2203-008097	C-CERAMIC,CHIP
C7138,C8001,C8003	2203-008097	C-CERAMIC,CHIP
C8014,C8016,C8029	2203-008097	C-CERAMIC,CHIP
C8040,C9098,C9101	2203-008097	C-CERAMIC,CHIP
C11018,C12019,C12020	2203-008242	C-CERAMIC,CHIP
C12021,C12022,C12026	2203-008242	C-CERAMIC,CHIP
C12027,C12029,C12033	2203-008242	C-CERAMIC,CHIP
C12036,C12038,C3006	2203-008242	C-CERAMIC,CHIP
C4005,C4006,C4008	2203-008242	C-CERAMIC,CHIP
C6087,C6101,C7014	2203-008242	C-CERAMIC,CHIP
C7015,C7016,C7027	2203-008242	C-CERAMIC,CHIP
C7028,C7029,C7032	2203-008242	C-CERAMIC,CHIP
C7052,C7053,C7054	2203-008242	C-CERAMIC,CHIP
C7058,C7059,C7061	2203-008242	C-CERAMIC,CHIP
C7069,C7072,C7089	2203-008242	C-CERAMIC,CHIP
C7092,C7157,C7158	2203-008242	C-CERAMIC,CHIP
C8020,C9001,C9010	2203-008242	C-CERAMIC,CHIP
C9012,C9013,C9014	2203-008242	C-CERAMIC,CHIP
C9015,C9016,C9025	2203-008242	C-CERAMIC,CHIP
C9026,C9076,C9077	2203-008242	C-CERAMIC,CHIP
C9080,C9081,C9082	2203-008242	C-CERAMIC,CHIP
C9100,C9103	2203-008242	C-CERAMIC,CHIP
L4001	2203-008394	C-CERAMIC,CHIP
C1013	2203-008400	C-CERAMIC,CHIP
C4021,C4025	2203-008403	C-CERAMIC,CHIP
C4007,C4033,C4063	2203-008466	C-CERAMIC,CHIP
C4067	2203-008466	C-CERAMIC,CHIP
C4019,C4023,C4024	2203-008529	C-CERAMIC,CHIP
C7107,C9122	2203-008529	C-CERAMIC,CHIP
C1019,C1020,C1023	2203-008563	C-CERAMIC,CHIP
C3017,C3018,C3019	2203-008563	C-CERAMIC,CHIP
C3020,C9126	2203-008563	C-CERAMIC,CHIP
C7100,C7131	2203-008572	C-CERAMIC,CHIP
C8006,C8007,C8008	2203-008654	C-CERAMIC,CHIP
C3024,C3025,C8047	2203-008692	C-CERAMIC,CHIP
C8048,C8050,C8052	2203-008692	C-CERAMIC,CHIP
C9094	2203-008692	C-CERAMIC,CHIP
C7099	2203-008749	C-CERAMIC,CHIP
C9004,C9005,C9006	2203-008844	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.



## 5. MAIN Electrical Parts List

C9008	2203-008844	C-CERAMIC,CHIP
C1099,C11012,C7147	2203-008860	C-CERAMIC,CHIP
C7159	2203-008860	C-CERAMIC,CHIP
C1069,C11017,C11019	2203-008876	C-CERAMIC,CHIP
C12000,C12003,C12005	2203-008876	C-CERAMIC,CHIP
C12007,C12008,C12011	2203-008876	C-CERAMIC,CHIP
C12012,C12013,C12014	2203-008876	C-CERAMIC,CHIP
C12017,C12018,C3010	2203-008876	C-CERAMIC,CHIP
C7008,C7010,C7012	2203-008876	C-CERAMIC,CHIP
C7013,C7017,C7018	2203-008876	C-CERAMIC,CHIP
C7020,C7025,C7026	2203-008876	C-CERAMIC,CHIP
C7033,C7036,C7037	2203-008876	C-CERAMIC,CHIP
C7039,C7040,C7043	2203-008876	C-CERAMIC,CHIP
C7044,C7048,C7049	2203-008876	C-CERAMIC,CHIP
C7050,C7051,C7064	2203-008876	C-CERAMIC,CHIP
C7088,C7095,C7128	2203-008876	C-CERAMIC,CHIP
C9000,C9017,C9018	2203-008876	C-CERAMIC,CHIP
C9020,C9021,C9022	2203-008876	C-CERAMIC,CHIP
C9027,C9034,C9059	2203-008876	C-CERAMIC,CHIP
C9060,C9067,C9079	2203-008876	C-CERAMIC,CHIP
C9083,C9090,C9091	2203-008876	C-CERAMIC,CHIP
C9092,C9093,C9099	2203-008876	C-CERAMIC,CHIP
C9102,C9109,C9110	2203-008876	C-CERAMIC,CHIP
C12053,C6002,C6003	2203-009064	C-CERAMIC,CHIP
C6005,C6007,C6008	2203-009064	C-CERAMIC,CHIP
C6019,C6020,C6021	2203-009064	C-CERAMIC,CHIP
C6023,C6050,C6114	2203-009064	C-CERAMIC,CHIP
C11014,C11015,C12030	2203-009537	C-CERAMIC,CHIP
C6049,C9023,C9024	2203-009537	C-CERAMIC,CHIP
C9056,C9057	2203-009537	C-CERAMIC,CHIP
C1046,C1048,C1058	2203-009618	C-CERAMIC,CHIP
C1093,C11000,C11001	2203-009618	C-CERAMIC,CHIP
C11002,C11003,C11004	2203-009618	C-CERAMIC,CHIP
C11005,C11006,C11007	2203-009618	C-CERAMIC,CHIP
C12006,C12010,C12015	2203-009618	C-CERAMIC,CHIP
C7038,C7079,C7081	2203-009618	C-CERAMIC,CHIP
C7083,C7105,C7106	2203-009618	C-CERAMIC,CHIP
C7111,C7112,C7136	2203-009618	C-CERAMIC,CHIP
C7137,C9007	2203-009618	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C11008,C11009,C12001	2203-009733	C-CERAMIC,CHIP
C3011,C7000,C7001	2203-009733	C-CERAMIC,CHIP
C7030,C7031,C7067	2203-009733	C-CERAMIC,CHIP
C7087,C7122,C7145	2203-009733	C-CERAMIC,CHIP
C8019,C9032,C9036	2203-009733	C-CERAMIC,CHIP
C9068,C9069,C9073	2203-009733	C-CERAMIC,CHIP
C9124	2203-009733	C-CERAMIC,CHIP
C12002,C12004,C12009	2203-009735	C-CERAMIC,CHIP
C12047,C12048,C12049	2203-009735	C-CERAMIC,CHIP
C6098,C6099,C7080	2203-009735	C-CERAMIC,CHIP
C7082	2203-009735	C-CERAMIC,CHIP
C3000,C3001,C9030	2203-009736	C-CERAMIC,CHIP
C9031,C9037,C9038	2203-009736	C-CERAMIC,CHIP
C9039,C9040,C9048	2203-009736	C-CERAMIC,CHIP
C9049,C9050,C9051	2203-009736	C-CERAMIC,CHIP
C9052,C9084,C9085	2203-009736	C-CERAMIC,CHIP
C9121	2203-009736	C-CERAMIC,CHIP
C7132,C8004	2203-009812	C-CERAMIC,CHIP
C3003,C3009,C7140	2203-009858	C-CERAMIC,CHIP
C7141,C7150,C8017	2203-009858	C-CERAMIC,CHIP
C9065	2203-009858	C-CERAMIC,CHIP
C9125	2203-009859	C-CERAMIC,CHIP
C7101,C8000,C8002	2203-009969	C-CERAMIC,CHIP
C7002,C7003	2203-009970	C-CERAMIC,CHIP
C9063,C9064,C9111	2203-009987	C-CERAMIC,CHIP
C3007,C3008,C7084	2203-010066	C-CERAMIC,CHIP
C7085,C7086,C9054	2203-010066	C-CERAMIC,CHIP
C9055	2203-010066	C-CERAMIC,CHIP
C9127,C9128	2203-010085	C-CERAMIC,CHIP
C8045,C8046,C8053	2203-010134	C-CERAMIC,CHIP
C8054	2203-010134	C-CERAMIC,CHIP
C7102,C9066	2203-010136	C-CERAMIC,CHIP
TA12000,TA12001	2409-001403	C-CERAMIC,CHIP
TA7000,TA7001,TA7002	2409-001403	C-CERAMIC,CHIP
TA7003	2409-001403	C-CERAMIC,CHIP
C1070	2703-002907	INDUCTOR
L4012	2703-002953	INDUCTOR
L2014,L2019	2703-002955	INDUCTOR
L2018,L2022,L2026	2703-002958	INDUCTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

L9002,L9012,L9013	2703-002959	INDUCTOR
L9017	2703-002959	INDUCTOR
C2024	2703-002999	INDUCTOR
L1036	2703-004000	INDUCTOR
L4025	2703-004012	INDUCTOR
L1006	2703-004013	INDUCTOR
C4009,C4012,L2033	2703-004014	INDUCTOR
L4011,L4022	2703-004018	INDUCTOR
C2003,C2032,C4014	2703-004034	INDUCTOR
C4020,L1004	2703-004034	INDUCTOR
L4005,L4023	2703-004036	INDUCTOR
C2033,L2003,L2031	2703-004038	INDUCTOR
L4010	2703-004287	INDUCTOR
C2002,C2013,C2015	2703-004317	INDUCTOR
C2031,C2035,L1018	2703-004317	INDUCTOR
L2006	2703-004317	INDUCTOR
L4024,L4027	2703-004366	INDUCTOR
L4004	2703-004703	INDUCTOR
L2024	2703-005058	INDUCTOR
L11004,L12000,L12001	2703-005067	INDUCTOR
L12002,L12003,L12004	2703-005067	INDUCTOR
L12005,L7019,L9004	2703-005067	INDUCTOR
L9005,L9006	2703-005067	INDUCTOR
C2012,C4015,L1005	2703-005085	INDUCTOR
L4000	2703-005085	INDUCTOR
C2005,L1007,L1047	2703-005086	INDUCTOR
L2032,L2035	2703-005086	INDUCTOR
L1015,L1016,L4016	2703-005200	INDUCTOR
L4017	2703-005200	INDUCTOR
L12006,L7001,L7002	2703-005201	INDUCTOR
L7003,L7004,L7005	2703-005201	INDUCTOR
L7008,L7009,L7010	2703-005201	INDUCTOR
L7011,L7018,L7022	2703-005201	INDUCTOR
L9019	2703-005201	INDUCTOR
L11000	2703-005224	INDUCTOR
L1014,L1019,L3000	2703-005225	INDUCTOR
L9003	2703-005225	INDUCTOR
L12007,L12008	2703-005226	INDUCTOR
L8003,L8004	2703-005233	INDUCTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

L2007,L4002	2703-005295	INDUCTOR
C2026,L2020	2703-005296	INDUCTOR
L11003	2703-005418	INDUCTOR
L8000	2703-005505	INDUCTOR
L7000,L7006,L7007	2703-005577	INDUCTOR
L7012,L7013,L7014	2703-005577	INDUCTOR
L7015,L7016,L7017	2703-005577	INDUCTOR
C2004	2703-005614	INDUCTOR
L11001,L11002	2703-005723	INDUCTOR
L7023,L8001,L9009	2703-005724	INDUCTOR
OSC7000	2801-005393	CRYSTAL
C12054,C12055,C12056	2901-001690	FILTER
C12057,C12070,C12071	2901-001690	FILTER
C6004,C6006,C6018	2901-001690	FILTER
C6022,C6037,C6038	2901-001690	FILTER
C6039,C6040,C6047	2901-001690	FILTER
C6053,C6062,C6116	2901-001690	FILTER
C6117,C6118,C6119	2901-001690	FILTER
C6120,C6121	2901-001690	FILTER
F2006	2904-002270	FILTER
U4004	2904-002356	FILTER
F2000	2904-002362	FILTER
U2002	2904-002397	FILTER
F4000,F4004	2904-002401	FILTER
F4005	2904-002406	FILTER
F2003	2904-002407	FILTER
F2004	2904-002408	FILTER
F2002	2911-000453	FILTER
F2005,U2004	2911-000455	FILTER
F2008	2911-000468	FILTER
MIC8000,MIC8001	3003-001243	MIC
L9010	3301-002035	BEAD
L9000,L9001,L9015	3301-002223	BEAD
L9016,L9018	3301-002223	BEAD
L8002	3301-002228	BEAD
L4030,L4031	3301-002235	BEAD
L1013,L1068,L2000	3301-002237	BEAD
L2005,L2010,L2012	3301-002237	BEAD
L2013,L2016,L2027	3301-002237	BEAD

## 5. MAIN Electrical Parts List

L4018,L4019,L4020	3301-002237	BEAD
L4021	3301-002237	BEAD
L1011,L1012,L4035	3301-002238	BEAD
L1000,L1070	3301-002243	BEAD
L9020	3301-002244	BEAD
L1009,L1010	3301-002245	BEAD
L9007,L9008,L9014	3301-002279	BEAD
L11005,L11006,L11007	3301-002312	BEAD
L3001,L4014,L4032	3301-002312	BEAD
L4033	3301-002312	BEAD
L7020,L7021,L9021	3301-002331	BEAD
RFS2002	3705-001708	CONNECTOR
CN3000	3709-001892	CONNECTOR
SOC9002	3710-004345	CONNECTOR
SOC9000	3710-004349	CONNECTOR
SOC9001,SOC9003	3710-004376	CONNECTOR
ANT11001,ANT4000	3712-001604	CONNECTOR
ANT2001,ANT4001	3712-001626	CONNECTOR
ANT4006	3712-001626	CONNECTOR
ANT2007	3712-001633	CONNECTOR
ANT4003,ANT4004	3712-001634	CONNECTOR
ANT4005,ANT4007	3712-001666	CONNECTOR
ANT2005	3712-001694	CONNECTOR
ANT8000,ANT8001	3712-001714	CONNECTOR
ANT2000,ANT2002	3712-001731	CONNECTOR
ANT2003,ANT2006	3712-001731	CONNECTOR
F4001	4709-002285	RF-MODULE
F2001	4709-002529	RF-MODULE
U2001	4709-002654	RF-MODULE
U4001	4709-002708	RF-MODULE
F4003	4709-002756	RF-MODULE
F4002	4709-002761	RF-MODULE
SC11001	GH63-17455A	
SC11000	GH63-17456A	
SC11003	GH63-17457A	
SC11002	GH63-17458A	
SC11004	GH63-17459A	
INP13000	GH94-23959A	
R502	0202-002125	SOLDER BRIDGE

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

ZD301	0401-001110	DIODE
ZD302	0404-001250	DIODE
ZD701,ZD702,ZD703	0404-001863	DIODE
ZD705	0404-001863	DIODE
ZD700,ZD704	0406-001717	DIODE
U301,ZD300	0406-001729	DIODE
ZD401	0406-001805	DIODE
ZD706,ZD707	0406-001826	DIODE
U100	1001-002062	IC
U305	1001-002091	IC
PAM101	1201-004114	IC
PAM100	1201-004157	IC
U101	1201-004210	IC
U601	1202-001120	IC
U303	1203-009168	IC
U304	1203-009283	IC
U400	1205-005871	IC
U201	1205-006032	IC
U702	1205-006131	IC
V200	1404-001724	THERMISTOR
V501	1405-001395	VARISTOR
V502	1405-001410	VARISTOR
R402,R404	2007-007314	R-CHIP
R304	2007-007698	R-CHIP
R303,R305,U302	2007-007741	R-CHIP
R503	2007-007942	R-CHIP
R506	2007-007946	R-CHIP
R602	2007-008052	R-CHIP
R601	2007-008211	R-CHIP
R225	2007-009157	R-CHIP
R306	2007-009182	R-CHIP
R3007,R403,R408,R409	2007-009212	R-CHIP
R410,R710	2007-009212	R-CHIP
R509,R603	2007-009314	R-CHIP
R405,R406	2007-011262	R-CHIP
R712,R713	2007-011378	R-CHIP
R600,R604	2007-011542	R-CHIP
R215,R219,R221,R222	2007-011548	R-CHIP
R703,R704,R705,R708	2007-011548	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

R709,R711	2007-011548	R-CHIP
R400,R401,R504,R505	2007-011591	R-CHIP
R550,R714,R715	2007-011591	R-CHIP
R224	2007-011648	R-CHIP
U602	2007-012202	R-CHIP
C302,C314	2203-000138	C-CERAMIC,CHIP
C414,C418	2203-000233	C-CERAMIC,CHIP
C322	2203-000438	C-CERAMIC,CHIP
C311	2203-000489	C-CERAMIC,CHIP
C321	2203-000725	C-CERAMIC,CHIP
C416,C500	2203-000812	C-CERAMIC,CHIP
C300,C318	2203-001153	C-CERAMIC,CHIP
C329,C501	2203-002285	C-CERAMIC,CHIP
C417	2203-005056	C-CERAMIC,CHIP
C127,C135,C142,C151	2203-005682	C-CERAMIC,CHIP
C602,C603,L117	2203-005682	C-CERAMIC,CHIP
C137,C159,L114	2203-005725	C-CERAMIC,CHIP
C123,C133,C138	2203-005727	C-CERAMIC,CHIP
C136	2203-005731	C-CERAMIC,CHIP
C101,C103,C105,C111	2203-005736	C-CERAMIC,CHIP
C114,C115,C118,C120	2203-005736	C-CERAMIC,CHIP
C121,C122,C124,C126	2203-005736	C-CERAMIC,CHIP
C145,C147,C152,C160	2203-005736	C-CERAMIC,CHIP
C232,C502,C503,C613	2203-005736	C-CERAMIC,CHIP
C615,L163	2203-005736	C-CERAMIC,CHIP
C106,C109,C128,C132	2203-005789	C-CERAMIC,CHIP
C149,C150	2203-005789	C-CERAMIC,CHIP
C156	2203-005792	C-CERAMIC,CHIP
C404	2203-005806	C-CERAMIC,CHIP
C130,C705,C709	2203-006123	C-CERAMIC,CHIP
C125,C223	2203-006194	C-CERAMIC,CHIP
C146	2203-006260	C-CERAMIC,CHIP
C148,C226,C412,C419	2203-006400	C-CERAMIC,CHIP
C331,L129	2203-006556	C-CERAMIC,CHIP
C324	2203-006562	C-CERAMIC,CHIP
C415	2203-006642	C-CERAMIC,CHIP
C235	2203-006668	C-CERAMIC,CHIP
C333	2203-006839	C-CERAMIC,CHIP
C211,C213,U206	2203-006979	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C400,C401,C718,U9006	2203-007317	C-CERAMIC,CHIP
C234,C707	2203-007391	C-CERAMIC,CHIP
C100,C221,C224,C327	2203-007393	C-CERAMIC,CHIP
C328	2203-007393	C-CERAMIC,CHIP
C303,C304,C306,C307	2203-007544	C-CERAMIC,CHIP
C308,C309,C325,C520	2203-007544	C-CERAMIC,CHIP
C521,C522,U300	2203-007544	C-CERAMIC,CHIP
C139,C140,C202,C209	2203-007621	C-CERAMIC,CHIP
C214,C222,C225,C334	2203-007621	C-CERAMIC,CHIP
C504	2203-007621	C-CERAMIC,CHIP
C102,C119,C206,C207	2203-007796	C-CERAMIC,CHIP
C208,C210,C212,C215	2203-007796	C-CERAMIC,CHIP
C216,C231,C233,C316	2203-007796	C-CERAMIC,CHIP
C402,C405,C407,C612	2203-007796	C-CERAMIC,CHIP
C616,C700,C701,C702	2203-007796	C-CERAMIC,CHIP
C703,C704,C706,C708	2203-007796	C-CERAMIC,CHIP
C710	2203-007796	C-CERAMIC,CHIP
C320	2203-007809	C-CERAMIC,CHIP
C330	2203-008095	C-CERAMIC,CHIP
C301,C305,C323,C712	2203-008097	C-CERAMIC,CHIP
C312,C313,C315,C319	2203-008158	C-CERAMIC,CHIP
C310,C601,C605	2203-008242	C-CERAMIC,CHIP
C110,C3016,C422,C423	2203-008466	C-CERAMIC,CHIP
C425,C609	2203-008466	C-CERAMIC,CHIP
C250	2203-008563	C-CERAMIC,CHIP
C201,C606,C611,C614	2203-008860	C-CERAMIC,CHIP
C717	2203-008860	C-CERAMIC,CHIP
C144,C317,C600,C604	2203-008876	C-CERAMIC,CHIP
C411,C413	2203-009167	C-CERAMIC,CHIP
C610	2203-009551	C-CERAMIC,CHIP
C408,C409,C410	2203-009733	C-CERAMIC,CHIP
C332	2203-009858	C-CERAMIC,CHIP
C607,C608	2203-010179	C-CERAMIC,CHIP
TA305,TA306	2409-001400	C-CERAMIC,CHIP
TA300,TA301,TA302	2409-001404	C-CERAMIC,CHIP
TA303,TA304	2409-001404	C-CERAMIC,CHIP
L159	2703-002953	INDUCTOR
L112	2703-002955	INDUCTOR
L104	2703-002958	INDUCTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.



## 5. MAIN Electrical Parts List

L118,L132,L142	2703-004000	INDUCTOR
L102,L124,L131,L143	2703-004012	INDUCTOR
L145,L156,L165	2703-004012	INDUCTOR
L136,L148,L151	2703-004013	INDUCTOR
C113,L139,L146,L149	2703-004014	INDUCTOR
L157,L162	2703-004014	INDUCTOR
L106,L147,L150,L164	2703-004033	INDUCTOR
C157,C158,L110,L121	2703-004034	INDUCTOR
L123,L125,L137,L144	2703-004034	INDUCTOR
L155,L161,L167	2703-004034	INDUCTOR
L158	2703-004036	INDUCTOR
L133,L135,L160,L169	2703-004038	INDUCTOR
C131,C141,L103,L115	2703-004317	INDUCTOR
L120,L166	2703-004317	INDUCTOR
L105	2703-004763	INDUCTOR
L300,L303	2703-004841	INDUCTOR
L402	2703-005058	INDUCTOR
L130,L154	2703-005085	INDUCTOR
C129,L128	2703-005086	INDUCTOR
L107,L119,L152	2703-005296	INDUCTOR
L400,L401	2703-005435	INDUCTOR
C117,L168	2703-005614	INDUCTOR
U700	2801-005444	CRYSTAL
OSC500	2805-001118	CRYSTAL
U207	2805-001128	CRYSTAL
F105	2904-002296	FILTER
F103	2904-002362	FILTER
F106	2904-002403	FILTER
F102,U102	2911-000468	FILTER
L700	3301-001659	BEAD
L601	3301-001989	BEAD
L100,L101,L109,L122	3301-002237	BEAD
L126,L127	3301-002237	BEAD
L600	3301-002238	BEAD
U600	3301-002239	BEAD
L111	3301-002243	BEAD
L113,L153	3301-002244	BEAD
L701	3301-002279	BEAD
L301,L302	3301-002331	BEAD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

SOC400	3710-004008	CONNECTOR
SOC401,SOC700	3710-004109	CONNECTOR
SOC500,SOC600	3710-004349	CONNECTOR
SOC300	3710-004424	CONNECTOR
SOC100	3710-004425	CONNECTOR
HDC700	3711-009356	CONNECTOR
F100	4709-002529	RF-MODULE
F101,F104	4709-002654	RF-MODULE

## 5. MAIN Electrical Parts List

### [SM-N975F]

Parts Code	Design LOC	Description
R11005,R3008	0202-002125	SOLDER BRIDGE
D7000	0404-001250	DIODE
ZD7001,ZD7002	0406-001809	DIODE
ZD1000	0406-001829	DIODE
LED9000	0601-003794	LED
U7001	0801-003639	IC
U9005	0903-002233	IC
U8004	1001-001755	IC
U7005	1001-001806	IC
U2003	1001-002075	IC
U7009	1003-003026	IC
U4006	1009-001076	IC
UME3000	1107-002663	IC
U4002	1201-003735	IC
U8001,U8002	1201-004178	IC
U4003	1201-004235	IC
U9001	1203-008472	IC
U7006	1203-008811	IC
U4012,U8000	1203-008867	IC
U9008	1203-008910	IC
U9004	1203-009035	IC
U9000	1203-009154	IC
U7010	1203-009156	IC
U7003	1203-009187	IC
U7000	1203-009191	IC
U9002	1203-009227	IC
U7008	1203-009234	IC
U3001	1203-009271	IC
U11004	1203-009277	IC
U9007	1203-009290	IC
U1003	1204-003776	IC
U9006	1205-005217	IC
U8003	1205-005729	IC
U4000	1205-006142	IC
UCP5000	1205-006152	IC
U4007	1209-002513	IC
U5000	1209-002567	IC

## 5. MAIN Electrical Parts List

U4008	1209-002578	IC
U4010	1209-002654	IC
TH4000,TH5000,TH5001	1404-001724	THERMISTOR
TH7000,TH7001,TH7002	1404-001724	THERMISTOR
V11000,V11002,V11004	1405-001395	VARISTOR
V11007,V2000,V2001	1405-001395	VARISTOR
V2004,V4000,V4001	1405-001415	VARISTOR
V4004	1405-001415	VARISTOR
V11009,V2008	1405-001420	VARISTOR
V4003	1405-001422	VARISTOR
V11005,V4005	1405-001439	VARISTOR
V11006,V11008	1405-001458	VARISTOR
R9020	2007-007135	R-CHIP
R8021,R8023	2007-007193	R-CHIP
R5000,R5039,R5049	2007-007310	R-CHIP
R5097	2007-007310	R-CHIP
R9015	2007-007698	R-CHIP
R4017,R8000,R9006	2007-007741	R-CHIP
R9011	2007-007741	R-CHIP
R3000,R3003,R3005	2007-008043	R-CHIP
R5009	2007-008047	R-CHIP
R9005,R9022	2007-008052	R-CHIP
R9001	2007-008296	R-CHIP
R7004	2007-008420	R-CHIP
R5056,R7020,R7023	2007-008531	R-CHIP
R7024,R8014,R9013	2007-008531	R-CHIP
R4018,R4019,R8016	2007-008774	R-CHIP
R8018,R8019,R8020	2007-008774	R-CHIP
R8022,R8024,R8025	2007-008774	R-CHIP
R8026	2007-008774	R-CHIP
R3012	2007-008785	R-CHIP
L2034	2007-008806	R-CHIP
R4016	2007-009111	R-CHIP
R4022,R5054,R5055	2007-009157	R-CHIP
R5075,R5076,R7006	2007-009157	R-CHIP
R7010,R7013,R7016	2007-009157	R-CHIP
R7025,R7036,R7037	2007-009157	R-CHIP
R8017,R8027,R9000	2007-009157	R-CHIP
R9003	2007-009157	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

R4001,R4002	2007-009182	R-CHIP
R8007,R8008,R8010	2007-009201	R-CHIP
R8011,R8012	2007-009201	R-CHIP
R5083,R5087,R9009	2007-009212	R-CHIP
R9010	2007-009212	R-CHIP
R7031,R7032	2007-009233	R-CHIP
R3011	2007-009314	R-CHIP
R11000,R7021,R7022	2007-009408	R-CHIP
R8015	2007-009408	R-CHIP
R9019	2007-009793	R-CHIP
R4013,R4014	2007-009805	R-CHIP
R5001,R5002,R5010	2007-009866	R-CHIP
R5011,R7000,R7027	2007-009866	R-CHIP
R7038,R9002,R9004	2007-009866	R-CHIP
R9021	2007-009866	R-CHIP
R7014,R7018,R7019	2007-010202	R-CHIP
R7029	2007-010202	R-CHIP
R7033,R7034	2007-010685	R-CHIP
R5058,R5059,R5061	2007-011262	R-CHIP
R5062,R5063,R5067	2007-011262	R-CHIP
R5068,R5073,R5077	2007-011262	R-CHIP
R5080,R5085,R5086	2007-011262	R-CHIP
R5090,R5091,R5092	2007-011262	R-CHIP
R5093,R5094,R5096	2007-011262	R-CHIP
R8004,R9016	2007-011262	R-CHIP
R4012	2007-011378	R-CHIP
R8006	2007-011532	R-CHIP
R5050,R5051,R5052	2007-011546	R-CHIP
R5053,R5098,R5099	2007-011546	R-CHIP
R5100,R5101	2007-011546	R-CHIP
R7011,R9017	2007-011548	R-CHIP
R4004,R4005,R4006	2007-011591	R-CHIP
R4007,R5005,R5006	2007-011591	R-CHIP
R5012,R5013,R5016	2007-011591	R-CHIP
R5017,R5018,R5019	2007-011591	R-CHIP
R5023,R5024,R5027	2007-011591	R-CHIP
R5028,R5031,R5032	2007-011591	R-CHIP
R5035,R5036,R5037	2007-011591	R-CHIP
R5038,R5040,R5041	2007-011591	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

R5042,R5043,R7026	2007-011591	R-CHIP
R7028	2007-011591	R-CHIP
R5014,R5015,R5025	2007-011594	R-CHIP
R5026,R5033,R5034	2007-011594	R-CHIP
R5044,R5045,R5046	2007-011594	R-CHIP
R5047,R9007,R9008	2007-011594	R-CHIP
R9018	2007-011594	R-CHIP
R7042	2007-012777	R-CHIP
C7130	2203-000233	C-CERAMIC,CHIP
C7139	2203-001033	C-CERAMIC,CHIP
C4031,C8018,L2002	2203-005682	C-CERAMIC,CHIP
C7142,C7143	2203-005717	C-CERAMIC,CHIP
C2010,C8031,C8035	2203-005726	C-CERAMIC,CHIP
C8037,C8038,C8041	2203-005726	C-CERAMIC,CHIP
C5006	2203-005727	C-CERAMIC,CHIP
C9009	2203-005734	C-CERAMIC,CHIP
C2023,C2025,C2028	2203-005736	C-CERAMIC,CHIP
C2035,C4010,C4016	2203-005736	C-CERAMIC,CHIP
C4017,C4035,C4060	2203-005736	C-CERAMIC,CHIP
C4062,C4068,C9043	2203-005736	C-CERAMIC,CHIP
C9044,C9045,C9046	2203-005736	C-CERAMIC,CHIP
C9047,C9053,C9088	2203-005736	C-CERAMIC,CHIP
C9089,L2004,L2017	2203-005736	C-CERAMIC,CHIP
L4026	2203-005736	C-CERAMIC,CHIP
C9035,C9078,C9095	2203-005779	C-CERAMIC,CHIP
C9104	2203-005779	C-CERAMIC,CHIP
C2001,C2008,C2027	2203-005789	C-CERAMIC,CHIP
C2007,C2014	2203-005792	C-CERAMIC,CHIP
C2021	2203-006187	C-CERAMIC,CHIP
C3023,C9120,C9129	2203-006194	C-CERAMIC,CHIP
C12103,C2000,C2018	2203-006400	C-CERAMIC,CHIP
C2030,C3012,C3013	2203-006400	C-CERAMIC,CHIP
C3015,C4072,C5004	2203-006400	C-CERAMIC,CHIP
C5007,C7098,C7123	2203-006400	C-CERAMIC,CHIP
C7156	2203-006400	C-CERAMIC,CHIP
L2023	2203-006611	C-CERAMIC,CHIP
C4013	2203-006665	C-CERAMIC,CHIP
C5009	2203-006668	C-CERAMIC,CHIP
C1049	2203-006712	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C4034,C7129,C7134	2203-006839	C-CERAMIC,CHIP
C7146,C7149	2203-006839	C-CERAMIC,CHIP
C5002,C5003,C5014	2203-007210	C-CERAMIC,CHIP
C5015,C6013	2203-007210	C-CERAMIC,CHIP
C11010,C11011,C3022	2203-007317	C-CERAMIC,CHIP
C6054,C6064,C6100	2203-007317	C-CERAMIC,CHIP
C6103,C6115,C7090	2203-007317	C-CERAMIC,CHIP
C7152,C8021,C8023	2203-007317	C-CERAMIC,CHIP
C8026,C8033,C8036	2203-007317	C-CERAMIC,CHIP
C9011,C9033,C9041	2203-007317	C-CERAMIC,CHIP
C9042,C9072,C9075	2203-007317	C-CERAMIC,CHIP
C9086,C9087,C9097	2203-007317	C-CERAMIC,CHIP
C7153,C8009,C8010	2203-007391	C-CERAMIC,CHIP
C8030,C9029	2203-007391	C-CERAMIC,CHIP
C1038,C1052	2203-007392	C-CERAMIC,CHIP
C1041,C4022,C4026	2203-007393	C-CERAMIC,CHIP
C4061,C4066,C7024	2203-007393	C-CERAMIC,CHIP
C7060,C7068,C7148	2203-007393	C-CERAMIC,CHIP
C9028	2203-007393	C-CERAMIC,CHIP
C7125,C7126	2203-007425	C-CERAMIC,CHIP
C4043,C4073	2203-007544	C-CERAMIC,CHIP
C2006,C2017,C2029	2203-007621	C-CERAMIC,CHIP
C4027,C4028,C4041	2203-007621	C-CERAMIC,CHIP
C4044,C4045,C4074	2203-007621	C-CERAMIC,CHIP
C5000,C5001,C7011	2203-007621	C-CERAMIC,CHIP
C7021,C7041,C7042	2203-007621	C-CERAMIC,CHIP
C7045,C8022,C8049	2203-007621	C-CERAMIC,CHIP
C8051	2203-007621	C-CERAMIC,CHIP
C11013,C3002,C3004	2203-007796	C-CERAMIC,CHIP
C3005,C4000,C4001	2203-007796	C-CERAMIC,CHIP
C4002,C4003,C4004	2203-007796	C-CERAMIC,CHIP
C4018,C4029,C4069	2203-007796	C-CERAMIC,CHIP
C4070,C6000,C6001	2203-007796	C-CERAMIC,CHIP
C6011,C6012,C6015	2203-007796	C-CERAMIC,CHIP
C6016,C6024,C6027	2203-007796	C-CERAMIC,CHIP
C6028,C6030,C6031	2203-007796	C-CERAMIC,CHIP
C6032,C6034,C6035	2203-007796	C-CERAMIC,CHIP
C6036,C6045,C6046	2203-007796	C-CERAMIC,CHIP
C6048,C6051,C6052	2203-007796	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C6055,C6056,C6057	2203-007796	C-CERAMIC,CHIP
C6058,C6059,C6060	2203-007796	C-CERAMIC,CHIP
C6061,C6063,C6065	2203-007796	C-CERAMIC,CHIP
C6066,C6067,C6068	2203-007796	C-CERAMIC,CHIP
C6069,C6070,C6071	2203-007796	C-CERAMIC,CHIP
C6072,C6073,C6074	2203-007796	C-CERAMIC,CHIP
C6075,C6076,C6077	2203-007796	C-CERAMIC,CHIP
C6078,C6079,C6080	2203-007796	C-CERAMIC,CHIP
C6081,C6084,C6086	2203-007796	C-CERAMIC,CHIP
C6088,C6089,C6090	2203-007796	C-CERAMIC,CHIP
C6091,C6093,C6094	2203-007796	C-CERAMIC,CHIP
C6095,C6096,C6097	2203-007796	C-CERAMIC,CHIP
C6102,C6106,C6107	2203-007796	C-CERAMIC,CHIP
C6108,C6109,C6110	2203-007796	C-CERAMIC,CHIP
C6111,C6112,C7055	2203-007796	C-CERAMIC,CHIP
C7056,C7057,C7062	2203-007796	C-CERAMIC,CHIP
C7063,C7066,C7070	2203-007796	C-CERAMIC,CHIP
C7071,C7075,C7076	2203-007796	C-CERAMIC,CHIP
C7077,C7078,C7091	2203-007796	C-CERAMIC,CHIP
C7093,C7094,C7096	2203-007796	C-CERAMIC,CHIP
C7117,C7127,C7144	2203-007796	C-CERAMIC,CHIP
C7151,C7154,C7155	2203-007796	C-CERAMIC,CHIP
C8011,C8012,C8013	2203-007796	C-CERAMIC,CHIP
C8015,C8024,C8025	2203-007796	C-CERAMIC,CHIP
C8027,C8028,C8044	2203-007796	C-CERAMIC,CHIP
C9002,C9003,C9062	2203-007796	C-CERAMIC,CHIP
C9070,C9071,C9096	2203-007796	C-CERAMIC,CHIP
C1034,C1035,C1039	2203-008097	C-CERAMIC,CHIP
C1043,C1045,C1054	2203-008097	C-CERAMIC,CHIP
C1056,C7009,C7022	2203-008097	C-CERAMIC,CHIP
C7121,C7138,C8001	2203-008097	C-CERAMIC,CHIP
C8003,C8014,C8016	2203-008097	C-CERAMIC,CHIP
C8029,C8040,C9098	2203-008097	C-CERAMIC,CHIP
C9101	2203-008097	C-CERAMIC,CHIP
C11018,C3006,C4005	2203-008242	C-CERAMIC,CHIP
C4006,C4008,C6087	2203-008242	C-CERAMIC,CHIP
C6101,C7014,C7015	2203-008242	C-CERAMIC,CHIP
C7016,C7027,C7028	2203-008242	C-CERAMIC,CHIP
C7029,C7032,C7052	2203-008242	C-CERAMIC,CHIP



## 5. MAIN Electrical Parts List

C7053,C7054,C7058	2203-008242	C-CERAMIC,CHIP
C7059,C7061,C7069	2203-008242	C-CERAMIC,CHIP
C7072,C7089,C7092	2203-008242	C-CERAMIC,CHIP
C7157,C7158,C8020	2203-008242	C-CERAMIC,CHIP
C9001,C9010,C9012	2203-008242	C-CERAMIC,CHIP
C9013,C9014,C9015	2203-008242	C-CERAMIC,CHIP
C9016,C9025,C9026	2203-008242	C-CERAMIC,CHIP
C9076,C9077,C9080	2203-008242	C-CERAMIC,CHIP
C9081,C9082,C9100	2203-008242	C-CERAMIC,CHIP
C9103	2203-008242	C-CERAMIC,CHIP
L4001	2203-008394	C-CERAMIC,CHIP
C4021,C4025	2203-008403	C-CERAMIC,CHIP
C4007,C4033,C4063	2203-008466	C-CERAMIC,CHIP
C4067	2203-008466	C-CERAMIC,CHIP
C4019,C4023,C4024	2203-008529	C-CERAMIC,CHIP
C7107,C9122	2203-008529	C-CERAMIC,CHIP
C3017,C3018,C3019	2203-008563	C-CERAMIC,CHIP
C3020,C9126	2203-008563	C-CERAMIC,CHIP
C7100,C7131	2203-008572	C-CERAMIC,CHIP
C8006,C8007,C8008	2203-008654	C-CERAMIC,CHIP
C3024,C3025,C8047	2203-008692	C-CERAMIC,CHIP
C8048,C8050,C8052	2203-008692	C-CERAMIC,CHIP
C9094	2203-008692	C-CERAMIC,CHIP
C7099	2203-008749	C-CERAMIC,CHIP
C9004,C9005,C9006	2203-008844	C-CERAMIC,CHIP
C9008	2203-008844	C-CERAMIC,CHIP
C1099,C11012,C7147	2203-008860	C-CERAMIC,CHIP
C7159	2203-008860	C-CERAMIC,CHIP
C11017,C11019,C3010	2203-008876	C-CERAMIC,CHIP
C7008,C7010,C7012	2203-008876	C-CERAMIC,CHIP
C7013,C7017,C7018	2203-008876	C-CERAMIC,CHIP
C7020,C7025,C7026	2203-008876	C-CERAMIC,CHIP
C7033,C7036,C7037	2203-008876	C-CERAMIC,CHIP
C7039,C7040,C7043	2203-008876	C-CERAMIC,CHIP
C7044,C7048,C7049	2203-008876	C-CERAMIC,CHIP
C7050,C7051,C7064	2203-008876	C-CERAMIC,CHIP
C7088,C7095,C7128	2203-008876	C-CERAMIC,CHIP
C9000,C9017,C9018	2203-008876	C-CERAMIC,CHIP
C9020,C9021,C9022	2203-008876	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C9027,C9034,C9059	2203-008876	C-CERAMIC,CHIP
C9060,C9067,C9079	2203-008876	C-CERAMIC,CHIP
C9083,C9090,C9091	2203-008876	C-CERAMIC,CHIP
C9092,C9093,C9099	2203-008876	C-CERAMIC,CHIP
C9102,C9109,C9110	2203-008876	C-CERAMIC,CHIP
C6002,C6003,C6005	2203-009064	C-CERAMIC,CHIP
C6007,C6008,C6019	2203-009064	C-CERAMIC,CHIP
C6020,C6021,C6023	2203-009064	C-CERAMIC,CHIP
C6050,C6114	2203-009064	C-CERAMIC,CHIP
C11014,C11015,C6049	2203-009537	C-CERAMIC,CHIP
C9023,C9024,C9056	2203-009537	C-CERAMIC,CHIP
C9057	2203-009537	C-CERAMIC,CHIP
C1046,C1058,C11000	2203-009618	C-CERAMIC,CHIP
C11001,C11002,C11003	2203-009618	C-CERAMIC,CHIP
C11004,C11005,C11006	2203-009618	C-CERAMIC,CHIP
C11007,C7038,C7079	2203-009618	C-CERAMIC,CHIP
C7081,C7083,C7105	2203-009618	C-CERAMIC,CHIP
C7106,C7111,C7112	2203-009618	C-CERAMIC,CHIP
C7136,C7137,C9007	2203-009618	C-CERAMIC,CHIP
C11008,C11009,C3011	2203-009733	C-CERAMIC,CHIP
C7000,C7001,C7030	2203-009733	C-CERAMIC,CHIP
C7031,C7067,C7087	2203-009733	C-CERAMIC,CHIP
C7122,C7145,C8019	2203-009733	C-CERAMIC,CHIP
C9032,C9036,C9068	2203-009733	C-CERAMIC,CHIP
C9069,C9073,C9124	2203-009733	C-CERAMIC,CHIP
C6098,C6099,C7080	2203-009735	C-CERAMIC,CHIP
C7082	2203-009735	C-CERAMIC,CHIP
C3000,C3001,C9030	2203-009736	C-CERAMIC,CHIP
C9031,C9037,C9038	2203-009736	C-CERAMIC,CHIP
C9039,C9040,C9048	2203-009736	C-CERAMIC,CHIP
C9049,C9050,C9051	2203-009736	C-CERAMIC,CHIP
C9052,C9084,C9085	2203-009736	C-CERAMIC,CHIP
C9121	2203-009736	C-CERAMIC,CHIP
C7132,C8004	2203-009812	C-CERAMIC,CHIP
C3003,C3009,C7140	2203-009858	C-CERAMIC,CHIP
C7141,C7150,C8017	2203-009858	C-CERAMIC,CHIP
C9065	2203-009858	C-CERAMIC,CHIP
C9125	2203-009859	C-CERAMIC,CHIP
C7101,C8000,C8002	2203-009969	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C7002,C7003	2203-009970	C-CERAMIC,CHIP
C9063,C9064,C9111	2203-009987	C-CERAMIC,CHIP
C3007,C3008,C7084	2203-010066	C-CERAMIC,CHIP
C7085,C7086,C9054	2203-010066	C-CERAMIC,CHIP
C9055	2203-010066	C-CERAMIC,CHIP
C9127,C9128	2203-010085	C-CERAMIC,CHIP
C8045,C8046,C8053	2203-010134	C-CERAMIC,CHIP
C8054	2203-010134	C-CERAMIC,CHIP
C7102,C9066	2203-010136	C-CERAMIC,CHIP
TA7000,TA7001,TA7002	2409-001403	C-CERAMIC,CHIP
TA7003	2409-001403	C-CERAMIC,CHIP
L4012	2703-002953	INDUCTOR
L2014,L2019	2703-002955	INDUCTOR
L2018,L2026	2703-002958	INDUCTOR
L9002,L9012,L9013	2703-002959	INDUCTOR
L9017	2703-002959	INDUCTOR
C2024	2703-002999	INDUCTOR
L4025	2703-004012	INDUCTOR
C4009,C4012	2703-004014	INDUCTOR
L4011,L4022	2703-004018	INDUCTOR
C2003,C2032,C4014	2703-004034	INDUCTOR
C4020	2703-004034	INDUCTOR
L4005,L4023	2703-004036	INDUCTOR
C2033,L2003	2703-004038	INDUCTOR
L4010	2703-004287	INDUCTOR
C2002,C2013,C2015	2703-004317	INDUCTOR
C2031,L2006	2703-004317	INDUCTOR
L4024,L4027	2703-004366	INDUCTOR
L4004	2703-004703	INDUCTOR
L2024	2703-005058	INDUCTOR
L11004,L7019,L9004	2703-005067	INDUCTOR
L9005,L9006	2703-005067	INDUCTOR
C2012,C4015,L4000	2703-005085	INDUCTOR
C2005	2703-005086	INDUCTOR
L1015,L4016,L4017	2703-005200	INDUCTOR
L7001,L7002,L7003	2703-005201	INDUCTOR
L7004,L7005,L7008	2703-005201	INDUCTOR
L7009,L7010,L7011	2703-005201	INDUCTOR
L7018,L7022,L9019	2703-005201	INDUCTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

L11000	2703-005224	INDUCTOR
L1019,L3000,L9003	2703-005225	INDUCTOR
L8003,L8004	2703-005233	INDUCTOR
L2007,L4002	2703-005295	INDUCTOR
C2026,L2020	2703-005296	INDUCTOR
L11003	2703-005418	INDUCTOR
L8000	2703-005505	INDUCTOR
L7000,L7006,L7007	2703-005577	INDUCTOR
L7012,L7013,L7014	2703-005577	INDUCTOR
L7015,L7016,L7017	2703-005577	INDUCTOR
C2004	2703-005614	INDUCTOR
L11001,L11002	2703-005723	INDUCTOR
L7023,L8001,L9009	2703-005724	INDUCTOR
OSC7000	2801-005393	CRYSTAL
C6004,C6006,C6018	2901-001690	FILTER
C6022,C6037,C6038	2901-001690	FILTER
C6039,C6040,C6047	2901-001690	FILTER
C6053,C6062,C6116	2901-001690	FILTER
C6117,C6118,C6119	2901-001690	FILTER
C6120,C6121	2901-001690	FILTER
F2006	2904-002270	FILTER
U4004	2904-002356	FILTER
F2000	2904-002362	FILTER
U2002	2904-002397	FILTER
F4000,F4004	2904-002401	FILTER
F4005	2904-002406	FILTER
F2003	2904-002407	FILTER
F2004	2904-002408	FILTER
F2002	2911-000453	FILTER
F2005,U2004	2911-000455	FILTER
MIC8000,MIC8001	3003-001243	MIC
L9010	3301-002035	BEAD
L9000,L9001,L9015	3301-002223	BEAD
L9016,L9018	3301-002223	BEAD
L8002	3301-002228	BEAD
L4030,L4031	3301-002235	BEAD
L2000,L2005,L2010	3301-002237	BEAD
L2012,L2013,L2016	3301-002237	BEAD
L2027,L4018,L4019	3301-002237	BEAD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

L4020,L4021	3301-002237	BEAD
L1011,L4035	3301-002238	BEAD
L1000	3301-002243	BEAD
L9020	3301-002244	BEAD
L1009	3301-002245	BEAD
L9007,L9008,L9014	3301-002279	BEAD
L11005,L11006,L11007	3301-002312	BEAD
L3001,L4014,L4032	3301-002312	BEAD
L4033	3301-002312	BEAD
L7020,L7021,L9021	3301-002331	BEAD
CN3000	3709-001892	CONNECTOR
SOC9002	3710-004345	CONNECTOR
SOC9000	3710-004349	CONNECTOR
SOC9001,SOC9003	3710-004376	CONNECTOR
ANT11001,ANT4000	3712-001604	CONNECTOR
ANT2001,ANT4001	3712-001626	CONNECTOR
ANT4006	3712-001626	CONNECTOR
ANT4003,ANT4004	3712-001634	CONNECTOR
ANT4005,ANT4007	3712-001666	CONNECTOR
ANT2005	3712-001694	CONNECTOR
ANT8000,ANT8001	3712-001714	CONNECTOR
ANT2000,ANT2002	3712-001731	CONNECTOR
ANT2003,ANT2006	3712-001731	CONNECTOR
F4001	4709-002285	RF-MODULE
F2001	4709-002529	RF-MODULE
U2001	4709-002654	RF-MODULE
U4001	4709-002708	RF-MODULE
F4003	4709-002756	RF-MODULE
F4002	4709-002761	RF-MODULE
SC11000	GH63-17456A	
SC11003	GH63-17457A	
SC11002	GH63-17458A	
SC11001	GH63-17731A	
INP13000	GH94-23731A	
R501	0202-002125	SOLDER BRIDGE
ZD301	0401-001110	DIODE
ZD302	0404-001250	DIODE
ZD701,ZD702,ZD703	0404-001863	DIODE

## 5. MAIN Electrical Parts List

ZD705	0404-001863	DIODE
ZD700,ZD704	0406-001717	DIODE
U301,ZD300	0406-001729	DIODE
ZD401	0406-001805	DIODE
ZD706,ZD707	0406-001826	DIODE
U100	1001-002062	IC
U305	1001-002091	IC
PAM101	1201-004114	IC
PAM100	1201-004157	IC
U101	1201-004210	IC
U601	1202-001120	IC
U303	1203-009168	IC
U304	1203-009283	IC
U400	1205-005871	IC
U201	1205-006032	IC
U702	1205-006131	IC
V200	1404-001724	THERMISTOR
V501	1405-001395	VARISTOR
V502	1405-001410	VARISTOR
R402,R404	2007-007314	R-CHIP
R304	2007-007698	R-CHIP
R303,R305,U302	2007-007741	R-CHIP
R503	2007-007942	R-CHIP
R506	2007-007946	R-CHIP
R602	2007-008052	R-CHIP
R601	2007-008211	R-CHIP
L116,L134	2007-008806	R-CHIP
R225	2007-009157	R-CHIP
R306	2007-009182	R-CHIP
R3007,R403,R408,R409	2007-009212	R-CHIP
R410,R710	2007-009212	R-CHIP
R509,R603	2007-009314	R-CHIP
R405,R406	2007-011262	R-CHIP
R712,R713	2007-011378	R-CHIP
R600,R604	2007-011542	R-CHIP
R215,R219,R221,R222	2007-011548	R-CHIP
R703,R704,R705,R708	2007-011548	R-CHIP
R709,R711	2007-011548	R-CHIP
R400,R401,R504,R505	2007-011591	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

R550,R714,R715	2007-011591	R-CHIP
R224	2007-011648	R-CHIP
U602	2007-012202	R-CHIP
C302,C314	2203-000138	C-CERAMIC,CHIP
C414,C418	2203-000233	C-CERAMIC,CHIP
C322	2203-000438	C-CERAMIC,CHIP
C311	2203-000489	C-CERAMIC,CHIP
C321	2203-000725	C-CERAMIC,CHIP
C416,C500	2203-000812	C-CERAMIC,CHIP
C300,C318	2203-001153	C-CERAMIC,CHIP
C329,C501	2203-002285	C-CERAMIC,CHIP
C417	2203-005056	C-CERAMIC,CHIP
C127,C135,C142,C151	2203-005682	C-CERAMIC,CHIP
C602,C603,L117	2203-005682	C-CERAMIC,CHIP
C137,C159,L114	2203-005725	C-CERAMIC,CHIP
C123,C138	2203-005727	C-CERAMIC,CHIP
C136	2203-005731	C-CERAMIC,CHIP
C101,C103,C105,C106	2203-005736	C-CERAMIC,CHIP
C111,C114,C115,C118	2203-005736	C-CERAMIC,CHIP
C120,C124,C126,C133	2203-005736	C-CERAMIC,CHIP
C145,C147,C152,C160	2203-005736	C-CERAMIC,CHIP
C232,C502,C503,C613	2203-005736	C-CERAMIC,CHIP
C615,L163,L702	2203-005736	C-CERAMIC,CHIP
C109,C128,C132,C149	2203-005789	C-CERAMIC,CHIP
C150	2203-005789	C-CERAMIC,CHIP
C156	2203-005792	C-CERAMIC,CHIP
C404	2203-005806	C-CERAMIC,CHIP
C130,C705,C709	2203-006123	C-CERAMIC,CHIP
C125	2203-006194	C-CERAMIC,CHIP
C146	2203-006260	C-CERAMIC,CHIP
C148,C226,C412,C419	2203-006400	C-CERAMIC,CHIP
C331,L129	2203-006556	C-CERAMIC,CHIP
C324	2203-006562	C-CERAMIC,CHIP
C415	2203-006642	C-CERAMIC,CHIP
C235	2203-006668	C-CERAMIC,CHIP
C333	2203-006839	C-CERAMIC,CHIP
C211,C213,U206	2203-006979	C-CERAMIC,CHIP
C400,C401,C718,U9006	2203-007317	C-CERAMIC,CHIP
C234,C707	2203-007391	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

C100,C221,C224,C327	2203-007393	C-CERAMIC,CHIP
C328	2203-007393	C-CERAMIC,CHIP
C303,C304,C306,C307	2203-007544	C-CERAMIC,CHIP
C308,C309,C325,C520	2203-007544	C-CERAMIC,CHIP
C521,C522,U300	2203-007544	C-CERAMIC,CHIP
C202,C209,C214,C222	2203-007621	C-CERAMIC,CHIP
C225,C334,C504	2203-007621	C-CERAMIC,CHIP
C102,C119,C206,C207	2203-007796	C-CERAMIC,CHIP
C208,C210,C212,C215	2203-007796	C-CERAMIC,CHIP
C216,C231,C233,C316	2203-007796	C-CERAMIC,CHIP
C402,C405,C407,C612	2203-007796	C-CERAMIC,CHIP
C616,C700,C701,C702	2203-007796	C-CERAMIC,CHIP
C703,C704,C706,C708	2203-007796	C-CERAMIC,CHIP
C710	2203-007796	C-CERAMIC,CHIP
C320	2203-007809	C-CERAMIC,CHIP
C330	2203-008095	C-CERAMIC,CHIP
C301,C305,C323,C712	2203-008097	C-CERAMIC,CHIP
C312,C313,C315,C319	2203-008158	C-CERAMIC,CHIP
C310,C601,C605	2203-008242	C-CERAMIC,CHIP
C110,C3016,C422,C423	2203-008466	C-CERAMIC,CHIP
C425,C609	2203-008466	C-CERAMIC,CHIP
C201,C606,C611,C614	2203-008860	C-CERAMIC,CHIP
C717	2203-008860	C-CERAMIC,CHIP
C144,C317,C600,C604	2203-008876	C-CERAMIC,CHIP
C411,C413	2203-009167	C-CERAMIC,CHIP
C610	2203-009551	C-CERAMIC,CHIP
C408,C409,C410	2203-009733	C-CERAMIC,CHIP
C332	2203-009858	C-CERAMIC,CHIP
C607,C608	2203-010179	C-CERAMIC,CHIP
TA305,TA306	2409-001400	C-CERAMIC,CHIP
TA300,TA301,TA302	2409-001404	C-CERAMIC,CHIP
TA303,TA304	2409-001404	C-CERAMIC,CHIP
L159	2703-002953	INDUCTOR
L112	2703-002955	INDUCTOR
L104	2703-002958	INDUCTOR
L118,L132,L142	2703-004000	INDUCTOR
L102,L124,L131,L143	2703-004012	INDUCTOR
L145,L156,L165	2703-004012	INDUCTOR
L136,L148,L151	2703-004013	INDUCTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.



## 5. MAIN Electrical Parts List

C113,L139,L146,L149	2703-004014	INDUCTOR
L157,L162	2703-004014	INDUCTOR
L147,L150,L164	2703-004033	INDUCTOR
C157,C158,L110,L121	2703-004034	INDUCTOR
L123,L125,L137,L144	2703-004034	INDUCTOR
L155,L161,L167	2703-004034	INDUCTOR
L158	2703-004036	INDUCTOR
L106,L133,L135,L160	2703-004038	INDUCTOR
L168,L169	2703-004038	INDUCTOR
C131,C141,L103,L120	2703-004317	INDUCTOR
L166	2703-004317	INDUCTOR
L105	2703-004763	INDUCTOR
L300,L303	2703-004841	INDUCTOR
L402	2703-005058	INDUCTOR
L130,L154	2703-005085	INDUCTOR
C129,L128	2703-005086	INDUCTOR
L107,L119,L152	2703-005296	INDUCTOR
L400,L401	2703-005435	INDUCTOR
C117	2703-005614	INDUCTOR
U700	2801-005444	CRYSTAL
OSC500	2805-001118	CRYSTAL
U207	2805-001128	CRYSTAL
F105	2904-002296	FILTER
F103	2904-002362	FILTER
F106	2904-002403	FILTER
L700	3301-001659	BEAD
L601	3301-001989	BEAD
L100,L101,L109,L122	3301-002237	BEAD
L600	3301-002238	BEAD
U600	3301-002239	BEAD
L111	3301-002243	BEAD
L113,L153	3301-002244	BEAD
L701	3301-002279	BEAD
L301,L302	3301-002331	BEAD
SOC400	3710-004008	CONNECTOR
SOC401,SOC700	3710-004109	CONNECTOR
SOC500,SOC600	3710-004349	CONNECTOR
SOC300	3710-004424	CONNECTOR
SOC100	3710-004425	CONNECTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

## 5. MAIN Electrical Parts List

HDC700	3711-009356	CONNECTOR
F100	4709-002529	RF-MODULE
F101,F104	4709-002654	RF-MODULE
INP801	GH41-05593A	-
SC500	GH63-17461A	-
SC501	GH98-44503A	-

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.