

5. MAIN Electrical Parts List

[SM-A750FN]

Parts Code	Design LOC	Description
D5000	0404-001972	DIODE-SCHOTTKY
U6009,U6013,U6017	0406-001561	DIODE-TVS
ZD5002,ZD5003,ZD6002	0406-001561	DIODE-TVS
ZD6004,ZD6011,ZD6022	0406-001561	DIODE-TVS
ZD5004,ZD5005,ZD5006	0406-001592	DIODE-TVS
ZD5011,ZD6015	0406-001592	DIODE-TVS
ZD6005,ZD6006,ZD6007	0406-001717	DIODE-TVS
ZD5001	0406-001728	DIODE-TVS
ZD6000,ZD6001,ZD6018	0406-001743	DIODE-TVS
ZD6019,ZD6020,ZD6021	0406-001743	DIODE-TVS
ZD6013,ZD6014	0406-001781	DIODE-TVS
ZD5012,ZD6016,ZD6017	0406-001789	DIODE-TVS
ZD6009,ZD6010	0406-001797	DIODE-TVS
D6000	0406-001808	DIODE-TVS
Q5000	0505-003618	FET-SILICON
LED5000	0601-003629	LED
LED5001	0601-003734	LED
U1007	1001-001970	IC
U1005	1001-001974	IC
U3019	1001-001975	IC
U2006	1001-002042	IC
UCP721UP	1105-002915	IC-FLASH
UME5000	1107-002633	IC-FLASH
U3008	1201-003786	IC
PAM1000	1201-004109	IC
U1008	1201-004135	IC
U6000	1201-004156	IC
U3014	1203-008249	IC
U5019	1203-008251	IC
U7016	1203-008431	IC
U6020	1203-008468	IC
U2001	1203-008693	IC
U5021	1203-008719	IC
U7007	1203-008751	IC
U3013	1203-008771	IC
U7008	1203-008850	IC
U7000,U7011	1203-008859	IC

5. MAIN Electrical Parts List

U3001,U7018	1203-008867	IC
U7009	1203-008870	IC
U7017	1203-008872	IC
U3003	1203-008925	IC
U7019	1203-008926	IC
U7003,U7004,U7005	1203-008989	IC
U7013	1203-008989	IC
U5013	1203-008995	IC
U5000	1203-009087	IC
U7002,U7006	1203-009158	IC
U2010	1205-005767	IC
U3004	1205-005860	IC
UCP721	1205-005870	IC
U3006	1205-005979	IC
U3018	1209-002413	IC
U3017	1209-002450	IC
U3016	1209-002586	IC
TH1000,TH4000	1404-001724	THERMISTOR
V7003	1405-001404	VARISTOR
R6036,R6037	2007-003015	R-CHIP
R6034,R6035	2007-007190	R-CHIP
R7005	2007-007480	R-CHIP
R7006	2007-007592	R-CHIP
R2002,R2003,R3010	2007-007741	R-CHIP
R4013,R4015,R4020	2007-007741	R-CHIP
R4021,R5016,R5017	2007-007741	R-CHIP
R5019,R5020	2007-007741	R-CHIP
R6039	2007-007798	R-CHIP
R5001	2007-007942	R-CHIP
R5002	2007-007946	R-CHIP
R3007	2007-008516	R-CHIP
R5012,R6007,R7000	2007-008531	R-CHIP
R7014	2007-008531	R-CHIP
C2089	2007-008579	R-CHIP
C3002,C3003	2007-008588	R-CHIP
R6008	2007-008648	R-CHIP
R6030	2007-008800	R-CHIP
R6038	2007-008808	R-CHIP
R3006,R5022	2007-009111	R-CHIP

5. MAIN Electrical Parts List

R1009,R4001,R4002	2007-009157	R-CHIP
R5005,R5018,R5023	2007-009157	R-CHIP
R5024,R6042,R7017	2007-009157	R-CHIP
R5006	2007-009158	R-CHIP
R5007,R5021	2007-009171	R-CHIP
R4004,R4035,R5010	2007-009212	R-CHIP
R5011,R5013,R6022	2007-009212	R-CHIP
R6015	2007-009315	R-CHIP
R7007	2007-009352	R-CHIP
R3011,R3012,R4018	2007-009408	R-CHIP
R4022,R4023,R4024	2007-009408	R-CHIP
R4025,R4026,R4027	2007-009408	R-CHIP
R4029,R4030,R4031	2007-009408	R-CHIP
R4032,R4033,R5008	2007-009408	R-CHIP
R6024,R7003,R7004	2007-009408	R-CHIP
R6032	2007-009410	R-CHIP
R3000,R6000	2007-009766	R-CHIP
R6031	2007-009793	R-CHIP
R5004	2007-009801	R-CHIP
R1002,R1003,R1004	2007-009805	R-CHIP
R1005,R2000,R7015	2007-009805	R-CHIP
R6018	2007-009838	R-CHIP
R4005,R4006,R4008	2007-009920	R-CHIP
R4010	2007-009920	R-CHIP
R3001,R3002,R6026	2007-009969	R-CHIP
R5014,R5015	2007-010202	R-CHIP
R3013,R6010	2007-010685	R-CHIP
R4007,R4009,R4011	2007-011043	R-CHIP
R4012,R4028	2007-011043	R-CHIP
R6027	2007-011532	R-CHIP
R5000	2007-012068	R-CHIP
C5107,C5108	2203-000489	C-CERAMIC,CHIP
C3038	2203-000995	C-CERAMIC,CHIP
C3039	2203-001072	C-CERAMIC,CHIP
C3034,C3041	2203-001239	C-CERAMIC,CHIP
C5110,C5113,C5116	2203-005682	C-CERAMIC,CHIP
C7009,C7020	2203-005682	C-CERAMIC,CHIP
C3067,C7011,C7019	2203-005725	C-CERAMIC,CHIP
C7032	2203-005725	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

C5106,C6005,C6009	2203-005729	C-CERAMIC,CHIP
C6017,C6020,C6022	2203-005729	C-CERAMIC,CHIP
C6024,C7010,C7013	2203-005729	C-CERAMIC,CHIP
C7014,C7016,L1061	2203-005729	C-CERAMIC,CHIP
C2040	2203-005731	C-CERAMIC,CHIP
C5047,C6016,C6021	2203-005732	C-CERAMIC,CHIP
C6023,C6026	2203-005732	C-CERAMIC,CHIP
C1000,C1006,C1018	2203-005736	C-CERAMIC,CHIP
C1020,C1031,C1032	2203-005736	C-CERAMIC,CHIP
C1033,C1035,C1040	2203-005736	C-CERAMIC,CHIP
C1048,C1051,C1054	2203-005736	C-CERAMIC,CHIP
C1057,C1063,C1066	2203-005736	C-CERAMIC,CHIP
C1074,C1079,C1081	2203-005736	C-CERAMIC,CHIP
C1092,C1103,C1122	2203-005736	C-CERAMIC,CHIP
C2000,C2005,C2008	2203-005736	C-CERAMIC,CHIP
C2012,C2018,C2020	2203-005736	C-CERAMIC,CHIP
C2026,C2046,C2057	2203-005736	C-CERAMIC,CHIP
C3001,C3004,C3008	2203-005736	C-CERAMIC,CHIP
C3009,C3018,C3021	2203-005736	C-CERAMIC,CHIP
C3024,C3046,C5077	2203-005736	C-CERAMIC,CHIP
C5083,C7154,L1003	2203-005736	C-CERAMIC,CHIP
L1005,L1010,L1013	2203-005736	C-CERAMIC,CHIP
L1020,L2005,L2006	2203-005736	C-CERAMIC,CHIP
L2010,L2018,L3001	2203-005736	C-CERAMIC,CHIP
L3010,L3011,R1006	2203-005736	C-CERAMIC,CHIP
C1049,C1083,C1108	2203-005777	C-CERAMIC,CHIP
L1008,L1040,U1002	2203-005777	C-CERAMIC,CHIP
C1064,C1089,C1107	2203-005789	C-CERAMIC,CHIP
C1127,L1015,L1059	2203-005789	C-CERAMIC,CHIP
L1060	2203-005789	C-CERAMIC,CHIP
C1050,C1055,C1075	2203-005792	C-CERAMIC,CHIP
C1100,C2006,C6002	2203-005792	C-CERAMIC,CHIP
C1013,C1091,C1096	2203-005806	C-CERAMIC,CHIP
C1097,C2002,C2003	2203-005806	C-CERAMIC,CHIP
C6027	2203-006194	C-CERAMIC,CHIP
C6003,L1038,L1065	2203-006318	C-CERAMIC,CHIP
C6030	2203-006379	C-CERAMIC,CHIP
C2001,C2004,C3020	2203-006400	C-CERAMIC,CHIP
C3033,C3035,C3037	2203-006400	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C4013,C6012,C6031	2203-006400	C-CERAMIC,CHIP
C6041	2203-006400	C-CERAMIC,CHIP
C1056,C1099	2203-006410	C-CERAMIC,CHIP
C2069,C3050,C3064	2203-006423	C-CERAMIC,CHIP
C3065,C4005,C4012	2203-006423	C-CERAMIC,CHIP
C5074,C5104,C5105	2203-006423	C-CERAMIC,CHIP
C6001,C6015,C6019	2203-006423	C-CERAMIC,CHIP
C3076,C5043	2203-006556	C-CERAMIC,CHIP
C3049	2203-006604	C-CERAMIC,CHIP
C7156,C7157	2203-006642	C-CERAMIC,CHIP
C6025	2203-006648	C-CERAMIC,CHIP
C3030	2203-006665	C-CERAMIC,CHIP
C4085	2203-006668	C-CERAMIC,CHIP
C1076	2203-006674	C-CERAMIC,CHIP
L1024	2203-006707	C-CERAMIC,CHIP
C1014,C1059,C1061	2203-006839	C-CERAMIC,CHIP
C1062,C1067,C3015	2203-006839	C-CERAMIC,CHIP
C3029,C4036,C5076	2203-006839	C-CERAMIC,CHIP
C4032,C4033,U4003	2203-006846	C-CERAMIC,CHIP
U4004	2203-006846	C-CERAMIC,CHIP
C2053,C2056,C2062	2203-006979	C-CERAMIC,CHIP
C2063,C2067,C2076	2203-006979	C-CERAMIC,CHIP
C2077,C2079,C2091	2203-006979	C-CERAMIC,CHIP
C3044,C3051,C7008	2203-007194	C-CERAMIC,CHIP
C4018,C4023,C4026	2203-007210	C-CERAMIC,CHIP
C4052,C4053,C4069	2203-007210	C-CERAMIC,CHIP
C4086,C5115,C5117	2203-007210	C-CERAMIC,CHIP
C5122,C5127,C5129	2203-007210	C-CERAMIC,CHIP
C3058,C4011,C4024	2203-007317	C-CERAMIC,CHIP
C4025,C4040,C4075	2203-007317	C-CERAMIC,CHIP
C5032,C5034,C5035	2203-007317	C-CERAMIC,CHIP
C5036,C5114,C5118	2203-007317	C-CERAMIC,CHIP
C6000,C7004,C7007	2203-007317	C-CERAMIC,CHIP
C7018	2203-007317	C-CERAMIC,CHIP
C2065,C3022,C6029	2203-007391	C-CERAMIC,CHIP
C2028,C3017,C3028	2203-007393	C-CERAMIC,CHIP
C5065,C5070,C5082	2203-007393	C-CERAMIC,CHIP
C5084,C5085,C5086	2203-007393	C-CERAMIC,CHIP
C5103,C5109,C7025	2203-007393	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C5059,C6034	2203-007456	C-CERAMIC,CHIP
C2055,C2064,C2066	2203-007474	C-CERAMIC,CHIP
C2080,C4049,C4051	2203-007474	C-CERAMIC,CHIP
C4070,C5051	2203-007474	C-CERAMIC,CHIP
C7153	2203-007781	C-CERAMIC,CHIP
C1116,C2027,C2054	2203-007796	C-CERAMIC,CHIP
C2061,C2075,C2078	2203-007796	C-CERAMIC,CHIP
C3011,C3019,C3025	2203-007796	C-CERAMIC,CHIP
C3057,C3060,C3062	2203-007796	C-CERAMIC,CHIP
C3063,C3073,C3081	2203-007796	C-CERAMIC,CHIP
C4002,C4004,C4006	2203-007796	C-CERAMIC,CHIP
C4007,C4008,C4009	2203-007796	C-CERAMIC,CHIP
C4010,C4014,C4015	2203-007796	C-CERAMIC,CHIP
C4019,C4020,C4027	2203-007796	C-CERAMIC,CHIP
C4028,C4029,C4030	2203-007796	C-CERAMIC,CHIP
C4031,C4034,C4035	2203-007796	C-CERAMIC,CHIP
C4037,C4038,C4039	2203-007796	C-CERAMIC,CHIP
C4041,C4042,C4043	2203-007796	C-CERAMIC,CHIP
C4045,C4046,C4055	2203-007796	C-CERAMIC,CHIP
C4056,C4057,C4058	2203-007796	C-CERAMIC,CHIP
C4059,C4060,C4066	2203-007796	C-CERAMIC,CHIP
C4067,C4071,C4072	2203-007796	C-CERAMIC,CHIP
C4073,C4074,C4076	2203-007796	C-CERAMIC,CHIP
C4077,C4078,C4080	2203-007796	C-CERAMIC,CHIP
C4081,C4082,C4087	2203-007796	C-CERAMIC,CHIP
C4088,C4089,C4090	2203-007796	C-CERAMIC,CHIP
C4091,C4092,C4093	2203-007796	C-CERAMIC,CHIP
C4094,C4095,C4096	2203-007796	C-CERAMIC,CHIP
C4097,C4098,C4099	2203-007796	C-CERAMIC,CHIP
C4100,C4101,C4102	2203-007796	C-CERAMIC,CHIP
C4103,C4104,C5001	2203-007796	C-CERAMIC,CHIP
C5005,C5006,C5008	2203-007796	C-CERAMIC,CHIP
C5009,C5013,C5014	2203-007796	C-CERAMIC,CHIP
C5015,C5016,C5017	2203-007796	C-CERAMIC,CHIP
C5018,C5019,C5020	2203-007796	C-CERAMIC,CHIP
C5024,C5025,C5026	2203-007796	C-CERAMIC,CHIP
C5029,C5030,C5061	2203-007796	C-CERAMIC,CHIP
C5067,C5071,C5072	2203-007796	C-CERAMIC,CHIP
C5089,C5090,C5091	2203-007796	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C5092,C5093,C5094	2203-007796	C-CERAMIC,CHIP
C5097,C5098,C5112	2203-007796	C-CERAMIC,CHIP
C5119,C6038,C7002	2203-007796	C-CERAMIC,CHIP
C7003,C7006,C7017	2203-007796	C-CERAMIC,CHIP
C7024,C7026,C7033	2203-007796	C-CERAMIC,CHIP
C7034,C7043,C7045	2203-007796	C-CERAMIC,CHIP
C7057,C7058,C7062	2203-007796	C-CERAMIC,CHIP
C7063,C7067,C7081	2203-007796	C-CERAMIC,CHIP
C7082,C7088,C7089	2203-007796	C-CERAMIC,CHIP
C7144,C7145,C7147	2203-007796	C-CERAMIC,CHIP
C6008	2203-008097	C-CERAMIC,CHIP
C2095,C3000,C3005	2203-008242	C-CERAMIC,CHIP
C3007,C3023,C4001	2203-008242	C-CERAMIC,CHIP
C4003,C4017,C4044	2203-008242	C-CERAMIC,CHIP
C4079,C4105,C5000	2203-008242	C-CERAMIC,CHIP
C5004,C5007,C5010	2203-008242	C-CERAMIC,CHIP
C5011,C5012,C5021	2203-008242	C-CERAMIC,CHIP
C5022,C5023,C5027	2203-008242	C-CERAMIC,CHIP
C5031,C5033,C5126	2203-008242	C-CERAMIC,CHIP
C1041,C1044	2203-008529	C-CERAMIC,CHIP
C5057,C5060	2203-008572	C-CERAMIC,CHIP
C6033	2203-008654	C-CERAMIC,CHIP
C3012,C3055,C3059	2203-008860	C-CERAMIC,CHIP
C3080,C5069,C5087	2203-008860	C-CERAMIC,CHIP
C5088,C5111,C5121	2203-008860	C-CERAMIC,CHIP
C6037,C7012,C7028	2203-008860	C-CERAMIC,CHIP
C7042,C7059,C7060	2203-008860	C-CERAMIC,CHIP
C7061,C7065,C7084	2203-008860	C-CERAMIC,CHIP
C7085,C7086	2203-008860	C-CERAMIC,CHIP
C1060,C1090,C3010	2203-008876	C-CERAMIC,CHIP
C3014,C3016,C3026	2203-008876	C-CERAMIC,CHIP
C3027,C5002,C5063	2203-008876	C-CERAMIC,CHIP
C5073,C5079,C5120	2203-008876	C-CERAMIC,CHIP
C7083	2203-008876	C-CERAMIC,CHIP
C3036,C3040	2203-009167	C-CERAMIC,CHIP
C4047,C4054,C4068	2203-009328	C-CERAMIC,CHIP
C5038,C5039,C5041	2203-009328	C-CERAMIC,CHIP
C5044,C5048,C5053	2203-009328	C-CERAMIC,CHIP
C5054,C5062	2203-009328	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C5003	2203-009537	C-CERAMIC,CHIP
C1093,C2022,C5037	2203-009733	C-CERAMIC,CHIP
C5040,C5042,C5045	2203-009733	C-CERAMIC,CHIP
C5046,C5049,C5050	2203-009733	C-CERAMIC,CHIP
C5052,C5055,C5058	2203-009733	C-CERAMIC,CHIP
C5064,C5066,C5068	2203-009733	C-CERAMIC,CHIP
C5075,C6010,C6011	2203-009733	C-CERAMIC,CHIP
C7001,C7005,C7030	2203-009733	C-CERAMIC,CHIP
C7036,C7037,C7038	2203-009733	C-CERAMIC,CHIP
C7039,C7068,C7069	2203-009733	C-CERAMIC,CHIP
C7075,C7076,C7133	2203-009733	C-CERAMIC,CHIP
C7134,C7151,C7152	2203-009733	C-CERAMIC,CHIP
C7071,C7072,C7073	2203-009858	C-CERAMIC,CHIP
C6006	2203-009917	C-CERAMIC,CHIP
C6007	2203-009969	C-CERAMIC,CHIP
C5056	2203-010085	C-CERAMIC,CHIP
L6000	2703-002900	INDUCTOR-SMD
L6001	2703-002953	INDUCTOR-SMD
L1045,L2030	2703-002955	INDUCTOR-SMD
L3016,R7001	2703-002959	INDUCTOR-SMD
L3000	2703-003476	INDUCTOR-SMD
L3015	2703-003970	INDUCTOR-SMD
L1029,L1037,L3012	2703-004012	INDUCTOR-SMD
C1125,C2050,L1033	2703-004013	INDUCTOR-SMD
L1053,L3013	2703-004013	INDUCTOR-SMD
C3070,C7155,L3020	2703-004014	INDUCTOR-SMD
C1082,L2028	2703-004018	INDUCTOR-SMD
C1073	2703-004030	INDUCTOR-SMD
C3056,L1002,L1027	2703-004032	INDUCTOR-SMD
L2007	2703-004032	INDUCTOR-SMD
C1123,C2051,C3032	2703-004034	INDUCTOR-SMD
L3002	2703-004034	INDUCTOR-SMD
C1028,C2013,C2024	2703-004035	INDUCTOR-SMD
L1028,L1036,L1046	2703-004035	INDUCTOR-SMD
L1057	2703-004035	INDUCTOR-SMD
C1065,L1018,L1043	2703-004036	INDUCTOR-SMD
L2003,L3004	2703-004036	INDUCTOR-SMD
C1015,C2007,C2009	2703-004037	INDUCTOR-SMD
C3045,L1004,L1021	2703-004037	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

L1031,L1039,L1056	2703-004037	INDUCTOR-SMD
L1071,L2004,L2017	2703-004037	INDUCTOR-SMD
C1019,C1120,C2048	2703-004038	INDUCTOR-SMD
C2073,C3013,L1011	2703-004038	INDUCTOR-SMD
L1063,L2013	2703-004038	INDUCTOR-SMD
C1026,L2009,L2025	2703-004171	INDUCTOR-SMD
L7012	2703-004171	INDUCTOR-SMD
C2052	2703-004286	INDUCTOR-SMD
C1016,L1006,L1067	2703-004328	INDUCTOR-SMD
L2001,L2008,L2023	2703-004328	INDUCTOR-SMD
C1109,L1014,L2019	2703-004363	INDUCTOR-SMD
L1025,L1030	2703-004366	INDUCTOR-SMD
L1034,L1048,L3014	2703-004367	INDUCTOR-SMD
L3003	2703-004368	INDUCTOR-SMD
L1017	2703-004408	INDUCTOR-SMD
C1112	2703-004862	INDUCTOR-SMD
L2020	2703-005066	INDUCTOR-SMD
L5000,L5005,L5006	2703-005067	INDUCTOR-SMD
L5007,L5009	2703-005067	INDUCTOR-SMD
L5012	2703-005109	INDUCTOR-SMD
L7006,L7009	2703-005117	INDUCTOR-SMD
L7005	2703-005118	INDUCTOR-SMD
L7011	2703-005200	INDUCTOR-SMD
L5001,L5002,L5003	2703-005201	INDUCTOR-SMD
L5004	2703-005201	INDUCTOR-SMD
L6002	2703-005505	INDUCTOR-SMD
L3006,U3005	2703-005555	INDUCTOR-SMD
OSC5000	2801-005393	CRYSTAL-UNIT
OSC2000	2805-001106	OSCILLATOR
C4061,C4062,C4063	2901-001690	FILTER-EMI
C4064,C4065,C4083	2901-001690	FILTER-EMI
C4084	2901-001690	FILTER-EMI
F2002	2904-002198	FILTER-SAW
F2001	2904-002339	FILTER-SAW
F1007	2904-002350	FILTER-SAW
F3001,F3002	2904-002355	FILTER-SAW
F3000	2904-002381	FILTER-SAW
F1005,F2000	2904-002397	FILTER-SAW
F1008	2910-000390	FILTER

5. MAIN Electrical Parts List

U2000	2911-000430	FILTER
U1003	2911-000452	FILTER
MIC6000	3003-001219	MIC-CONDENSOR
L6012	3301-002078	CORE-FERRITE
L2014,L2015,L6009	3301-002122	CORE-FERRITE
L6010,L6013,L6014	3301-002122	CORE-FERRITE
L7000,L7001,L7002	3301-002223	CORE-FERRITE
L7003,L7010	3301-002223	CORE-FERRITE
L6004,L6005,L6006	3301-002235	CORE-FERRITE
L6007,L6008,L6011	3301-002235	CORE-FERRITE
L2046	3301-002236	CORE-FERRITE
L1000,L2049	3301-002237	CORE-FERRITE
L2016,L2032,L2034	3301-002238	CORE-FERRITE
L2036,L3008	3301-002238	CORE-FERRITE
L5008	3301-002254	CORE-FERRITE
L5010	3301-002287	CORE-FERRITE
L6003,U6008	3301-002305	CORE-FERRITE
L2012,L2031,L2035	3301-002312	CORE-FERRITE
L7004,L7007,L7008	3301-002312	CORE-FERRITE
RFS1000,RFS1001	3705-001937	CONNECTOR-COAXIAL
SIM4UP	3709-001932	CAF00-21134-1537RF
SIM1	3709-001933	CAF11-08136-1522RF
SIM2,SIM3	3709-001934	CAF99-06033-1534RF
HDC7001,HDC7002	3711-007107	CONNECTOR-HEADER
HDC7000	3711-008508	CONNECTOR-HEADER
HDC7003	3711-008511	CONNECTOR-HEADER
HDC6000,HDC7004	3711-008593	CONNECTOR-HEADER
HDC5000	3711-008847	CONNECTOR-HEADER
ANT6000,ANT6001	3712-001604	CONNECTOR
ANT2000,ANT2001	3712-001621	CONNECTOR
ANT2002,ANT3000	3712-001621	CONNECTOR
ANT3001,ANT3002	3712-001626	CONNECTOR
ANT2013,ANT2016	3712-001666	CONNECTOR
ANT3003,ANT5000	3712-001666	CONNECTOR
ANT5001,ANT5002	3712-001666	CONNECTOR
ANT5003,ANT5004	3712-001666	CONNECTOR
ANT5005,ANT5006	3712-001666	CONNECTOR
ANT5007,ANT5008	3712-001666	CONNECTOR
ANT5009,ANT5010	3712-001666	CONNECTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

ANT5011,ANT5012	3712-001666	CONNECTOR
ANT5013	3712-001666	CONNECTOR
F2005	4709-002196	RF-MODULE
F1002	4709-002226	RF-MODULE
F3003	4709-002284	RF-MODULE
F2004	4709-002484	RF-MODULE
F1001,F1003	4709-002589	RF-MODULE
SC6001SP	GH02-16957A	TAPE
GA7001	GH62-00048A	JSM-TSL-2-2.5-1.8BK
SC6000	GH63-12632A	SC-SMJ710F-APT
SC6003	GH63-15420A	SC-SMJ800F-OCTADC
SC6001	GH63-16265A	SC-A750F-AP
SC6002	GH63-16266A	SC-A750F-PMIC
SC6005	GH63-16267A	SC-A750F-WIFI
SC6008	GH63-16268A	SC-A750F-TCXO
SC6004	GH98-43570A	SC-A750F-RF

5. MAIN Electrical Parts List

[SM-A750F]

Parts Code	Design LOC	Description
D5000	0404-001972	DIODE-SCHOTTKY
U6009,U6013,U6017	0406-001561	DIODE-TVS
ZD5002,ZD5003,ZD6002	0406-001561	DIODE-TVS
ZD6004,ZD6011,ZD6022	0406-001561	DIODE-TVS
ZD5004,ZD5005,ZD5006	0406-001592	DIODE-TVS
ZD5011,ZD6015	0406-001592	DIODE-TVS
ZD6005,ZD6006,ZD6007	0406-001717	DIODE-TVS
ZD5001	0406-001728	DIODE-TVS
ZD6000,ZD6001,ZD6018	0406-001743	DIODE-TVS
ZD6019,ZD6020,ZD6021	0406-001743	DIODE-TVS
ZD6013,ZD6014	0406-001781	DIODE-TVS
ZD5012,ZD6016,ZD6017	0406-001789	DIODE-TVS
ZD6009,ZD6010	0406-001797	DIODE-TVS
D6000	0406-001808	DIODE-TVS
Q5000	0505-003618	FET-SILICON
LED5000	0601-003629	LED
LED5001	0601-003734	LED
U1007	1001-001970	IC
U1005	1001-001974	IC
U3019	1001-001975	IC
U2006	1001-002042	IC
UCP721UP	1105-002915	IC-FLASH
UME5000	1107-002633	IC-FLASH
U3008	1201-003786	IC
PAM1000	1201-004109	IC
U1008	1201-004135	IC
U6000	1201-004156	IC
U3014	1203-008249	IC
U5019	1203-008251	IC
U7016	1203-008431	IC
U6020	1203-008468	IC
U2001	1203-008693	IC
U5021	1203-008719	IC
U7007	1203-008751	IC
U3013	1203-008771	IC
U7008	1203-008850	IC
U7000,U7011	1203-008859	IC

5. MAIN Electrical Parts List

U7018	1203-008867	IC
U7009	1203-008870	IC
U7017	1203-008872	IC
U3003	1203-008925	IC
U7019	1203-008926	IC
U7003,U7004,U7005	1203-008989	IC
U7013	1203-008989	IC
U5013	1203-008995	IC
U5000	1203-009087	IC
U7002,U7006	1203-009158	IC
U2010	1205-005767	IC
U3004	1205-005860	IC
UCP721	1205-005870	IC
U3018	1209-002413	IC
U3017	1209-002450	IC
U3016	1209-002586	IC
TH1000,TH4000	1404-001724	THERMISTOR
V7003	1405-001404	VARISTOR
R6036,R6037	2007-003015	R-CHIP
R6034,R6035	2007-007190	R-CHIP
R7005	2007-007480	R-CHIP
R7006	2007-007592	R-CHIP
R2002,R2003,R3010	2007-007741	R-CHIP
R4014,R4015,R4020	2007-007741	R-CHIP
R4021,R5016,R5017	2007-007741	R-CHIP
R5019,R5020	2007-007741	R-CHIP
R6039	2007-007798	R-CHIP
R5001	2007-007942	R-CHIP
R5002	2007-007946	R-CHIP
R3007	2007-008516	R-CHIP
R5012,R6007,R7000	2007-008531	R-CHIP
R7014	2007-008531	R-CHIP
C2089	2007-008579	R-CHIP
R6008	2007-008648	R-CHIP
R6030	2007-008800	R-CHIP
R6038	2007-008808	R-CHIP
R3006,R5022	2007-009111	R-CHIP
R1009,R4001,R4002	2007-009157	R-CHIP
R5005,R5018,R5023	2007-009157	R-CHIP

5. MAIN Electrical Parts List

R5024,R6042,R7017	2007-009157	R-CHIP
R5006	2007-009158	R-CHIP
R5007,R5021	2007-009171	R-CHIP
R4004,R4035,R5010	2007-009212	R-CHIP
R5011,R5013,R6022	2007-009212	R-CHIP
R6015	2007-009315	R-CHIP
R7007	2007-009352	R-CHIP
R3011,R3012,R4018	2007-009408	R-CHIP
R4022,R4023,R4024	2007-009408	R-CHIP
R4025,R4026,R4027	2007-009408	R-CHIP
R4029,R4030,R4031	2007-009408	R-CHIP
R4032,R4033,R5008	2007-009408	R-CHIP
R6024,R7003,R7004	2007-009408	R-CHIP
R6032	2007-009410	R-CHIP
R3000,R6000	2007-009766	R-CHIP
R6031	2007-009793	R-CHIP
R5004	2007-009801	R-CHIP
R1002,R1003,R1004	2007-009805	R-CHIP
R1005,R2000,R7015	2007-009805	R-CHIP
R6018	2007-009838	R-CHIP
R4005,R4006,R4008	2007-009920	R-CHIP
R4010	2007-009920	R-CHIP
R6026	2007-009969	R-CHIP
R5014,R5015	2007-010202	R-CHIP
R6010	2007-010685	R-CHIP
R4007,R4009,R4011	2007-011043	R-CHIP
R4012,R4028	2007-011043	R-CHIP
R6027	2007-011532	R-CHIP
R5000	2007-012068	R-CHIP
C5107,C5108	2203-000489	C-CERAMIC,CHIP
C5110,C5113,C5116	2203-005682	C-CERAMIC,CHIP
C7009,C7020	2203-005682	C-CERAMIC,CHIP
C3067,C7011,C7019	2203-005725	C-CERAMIC,CHIP
C7032	2203-005725	C-CERAMIC,CHIP
C5106,C6005,C6009	2203-005729	C-CERAMIC,CHIP
C6017,C6020,C6022	2203-005729	C-CERAMIC,CHIP
C6024,C7010,C7013	2203-005729	C-CERAMIC,CHIP
C7014,C7016,L1061	2203-005729	C-CERAMIC,CHIP
C2040	2203-005731	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

C5047,C6016,C6021	2203-005732	C-CERAMIC,CHIP
C6023,C6026	2203-005732	C-CERAMIC,CHIP
C1000,C1006,C1018	2203-005736	C-CERAMIC,CHIP
C1020,C1031,C1032	2203-005736	C-CERAMIC,CHIP
C1033,C1035,C1040	2203-005736	C-CERAMIC,CHIP
C1048,C1051,C1054	2203-005736	C-CERAMIC,CHIP
C1057,C1063,C1066	2203-005736	C-CERAMIC,CHIP
C1074,C1079,C1081	2203-005736	C-CERAMIC,CHIP
C1092,C1103,C1122	2203-005736	C-CERAMIC,CHIP
C2000,C2005,C2008	2203-005736	C-CERAMIC,CHIP
C2012,C2018,C2020	2203-005736	C-CERAMIC,CHIP
C2026,C2046,C2057	2203-005736	C-CERAMIC,CHIP
C3001,C3004,C3008	2203-005736	C-CERAMIC,CHIP
C3009,C3018,C3021	2203-005736	C-CERAMIC,CHIP
C3024,C3046,C5077	2203-005736	C-CERAMIC,CHIP
C5083,C7154,L1003	2203-005736	C-CERAMIC,CHIP
L1005,L1010,L1013	2203-005736	C-CERAMIC,CHIP
L1020,L2005,L2006	2203-005736	C-CERAMIC,CHIP
L2010,L2018,L3001	2203-005736	C-CERAMIC,CHIP
L3010,L3011,R1006	2203-005736	C-CERAMIC,CHIP
C1049,C1083,C1108	2203-005777	C-CERAMIC,CHIP
L1008,L1040,U1002	2203-005777	C-CERAMIC,CHIP
C1064,C1089,C1107	2203-005789	C-CERAMIC,CHIP
C1127,L1015,L1059	2203-005789	C-CERAMIC,CHIP
L1060	2203-005789	C-CERAMIC,CHIP
C1050,C1055,C1075	2203-005792	C-CERAMIC,CHIP
C1100,C2006,C6002	2203-005792	C-CERAMIC,CHIP
C1013,C1091,C1096	2203-005806	C-CERAMIC,CHIP
C1097,C2002,C2003	2203-005806	C-CERAMIC,CHIP
C6027	2203-006194	C-CERAMIC,CHIP
C6003,L1038,L1065	2203-006318	C-CERAMIC,CHIP
C6030	2203-006379	C-CERAMIC,CHIP
C2001,C2004,C3020	2203-006400	C-CERAMIC,CHIP
C3033,C4013,C6012	2203-006400	C-CERAMIC,CHIP
C6031,C6041	2203-006400	C-CERAMIC,CHIP
C1056,C1099	2203-006410	C-CERAMIC,CHIP
C2069,C3050,C3064	2203-006423	C-CERAMIC,CHIP
C3065,C4005,C4012	2203-006423	C-CERAMIC,CHIP
C5074,C5104,C5105	2203-006423	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C6001,C6015,C6019	2203-006423	C-CERAMIC,CHIP
C3076,C5043	2203-006556	C-CERAMIC,CHIP
C3049	2203-006604	C-CERAMIC,CHIP
C7156,C7157	2203-006642	C-CERAMIC,CHIP
C6025	2203-006648	C-CERAMIC,CHIP
C3030	2203-006665	C-CERAMIC,CHIP
C4085	2203-006668	C-CERAMIC,CHIP
C1076	2203-006674	C-CERAMIC,CHIP
L1024	2203-006707	C-CERAMIC,CHIP
C1014,C1059,C1061	2203-006839	C-CERAMIC,CHIP
C1062,C1067,C4036	2203-006839	C-CERAMIC,CHIP
C5076	2203-006839	C-CERAMIC,CHIP
C4032,C4033,U4003	2203-006846	C-CERAMIC,CHIP
U4004	2203-006846	C-CERAMIC,CHIP
C2053,C2056,C2062	2203-006979	C-CERAMIC,CHIP
C2063,C2067,C2076	2203-006979	C-CERAMIC,CHIP
C2077,C2079,C2091	2203-006979	C-CERAMIC,CHIP
C3044,C3051,C7008	2203-007194	C-CERAMIC,CHIP
C4018,C4023,C4026	2203-007210	C-CERAMIC,CHIP
C4052,C4053,C4069	2203-007210	C-CERAMIC,CHIP
C4086,C5115,C5117	2203-007210	C-CERAMIC,CHIP
C5122,C5127,C5129	2203-007210	C-CERAMIC,CHIP
C3058,C4011,C4024	2203-007317	C-CERAMIC,CHIP
C4025,C4040,C4075	2203-007317	C-CERAMIC,CHIP
C5032,C5034,C5035	2203-007317	C-CERAMIC,CHIP
C5036,C5114,C5118	2203-007317	C-CERAMIC,CHIP
C6000,C7004,C7007	2203-007317	C-CERAMIC,CHIP
C7018	2203-007317	C-CERAMIC,CHIP
C2065,C6029	2203-007391	C-CERAMIC,CHIP
C2028,C5065,C5070	2203-007393	C-CERAMIC,CHIP
C5082,C5084,C5085	2203-007393	C-CERAMIC,CHIP
C5086,C5103,C5109	2203-007393	C-CERAMIC,CHIP
C7025	2203-007393	C-CERAMIC,CHIP
C5059,C6034	2203-007456	C-CERAMIC,CHIP
C2055,C2064,C2066	2203-007474	C-CERAMIC,CHIP
C2080,C4049,C4051	2203-007474	C-CERAMIC,CHIP
C4070,C5051	2203-007474	C-CERAMIC,CHIP
C7153	2203-007781	C-CERAMIC,CHIP
C1116,C2027,C2054	2203-007796	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C2061,C2075,C2078	2203-007796	C-CERAMIC,CHIP
C3019,C3025,C3057	2203-007796	C-CERAMIC,CHIP
C3060,C3062,C3063	2203-007796	C-CERAMIC,CHIP
C3073,C3081,C4002	2203-007796	C-CERAMIC,CHIP
C4004,C4006,C4007	2203-007796	C-CERAMIC,CHIP
C4008,C4009,C4010	2203-007796	C-CERAMIC,CHIP
C4014,C4015,C4019	2203-007796	C-CERAMIC,CHIP
C4020,C4027,C4028	2203-007796	C-CERAMIC,CHIP
C4029,C4030,C4031	2203-007796	C-CERAMIC,CHIP
C4034,C4035,C4037	2203-007796	C-CERAMIC,CHIP
C4038,C4039,C4041	2203-007796	C-CERAMIC,CHIP
C4042,C4043,C4045	2203-007796	C-CERAMIC,CHIP
C4046,C4055,C4056	2203-007796	C-CERAMIC,CHIP
C4057,C4058,C4059	2203-007796	C-CERAMIC,CHIP
C4060,C4066,C4067	2203-007796	C-CERAMIC,CHIP
C4071,C4072,C4073	2203-007796	C-CERAMIC,CHIP
C4074,C4076,C4077	2203-007796	C-CERAMIC,CHIP
C4078,C4080,C4081	2203-007796	C-CERAMIC,CHIP
C4082,C4087,C4088	2203-007796	C-CERAMIC,CHIP
C4089,C4090,C4091	2203-007796	C-CERAMIC,CHIP
C4092,C4093,C4094	2203-007796	C-CERAMIC,CHIP
C4095,C4096,C4097	2203-007796	C-CERAMIC,CHIP
C4098,C4099,C4100	2203-007796	C-CERAMIC,CHIP
C4101,C4102,C4103	2203-007796	C-CERAMIC,CHIP
C4104,C5001,C5005	2203-007796	C-CERAMIC,CHIP
C5006,C5008,C5009	2203-007796	C-CERAMIC,CHIP
C5013,C5014,C5015	2203-007796	C-CERAMIC,CHIP
C5016,C5017,C5018	2203-007796	C-CERAMIC,CHIP
C5019,C5020,C5024	2203-007796	C-CERAMIC,CHIP
C5025,C5026,C5029	2203-007796	C-CERAMIC,CHIP
C5030,C5061,C5067	2203-007796	C-CERAMIC,CHIP
C5071,C5072,C5089	2203-007796	C-CERAMIC,CHIP
C5090,C5091,C5092	2203-007796	C-CERAMIC,CHIP
C5093,C5094,C5097	2203-007796	C-CERAMIC,CHIP
C5098,C5112,C5119	2203-007796	C-CERAMIC,CHIP
C6038,C7002,C7003	2203-007796	C-CERAMIC,CHIP
C7006,C7017,C7024	2203-007796	C-CERAMIC,CHIP
C7026,C7033,C7034	2203-007796	C-CERAMIC,CHIP
C7043,C7045,C7057	2203-007796	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C7058,C7062,C7063	2203-007796	C-CERAMIC,CHIP
C7067,C7081,C7082	2203-007796	C-CERAMIC,CHIP
C7088,C7089,C7144	2203-007796	C-CERAMIC,CHIP
C7145,C7147	2203-007796	C-CERAMIC,CHIP
C6008	2203-008097	C-CERAMIC,CHIP
C2095,C3000,C3005	2203-008242	C-CERAMIC,CHIP
C3007,C3023,C4001	2203-008242	C-CERAMIC,CHIP
C4003,C4017,C4044	2203-008242	C-CERAMIC,CHIP
C4079,C4105,C5000	2203-008242	C-CERAMIC,CHIP
C5004,C5007,C5010	2203-008242	C-CERAMIC,CHIP
C5011,C5012,C5021	2203-008242	C-CERAMIC,CHIP
C5022,C5023,C5027	2203-008242	C-CERAMIC,CHIP
C5031,C5033,C5126	2203-008242	C-CERAMIC,CHIP
C1041,C1044	2203-008529	C-CERAMIC,CHIP
C5057,C5060	2203-008572	C-CERAMIC,CHIP
C6033	2203-008654	C-CERAMIC,CHIP
C3055,C3059,C3080	2203-008860	C-CERAMIC,CHIP
C5069,C5087,C5088	2203-008860	C-CERAMIC,CHIP
C5111,C5121,C6037	2203-008860	C-CERAMIC,CHIP
C7012,C7028,C7042	2203-008860	C-CERAMIC,CHIP
C7059,C7060,C7061	2203-008860	C-CERAMIC,CHIP
C7065,C7084,C7085	2203-008860	C-CERAMIC,CHIP
C7086	2203-008860	C-CERAMIC,CHIP
C1060,C1090,C3010	2203-008876	C-CERAMIC,CHIP
C5002,C5063,C5073	2203-008876	C-CERAMIC,CHIP
C5079,C5120,C7083	2203-008876	C-CERAMIC,CHIP
C4047,C4054,C4068	2203-009328	C-CERAMIC,CHIP
C5038,C5039,C5041	2203-009328	C-CERAMIC,CHIP
C5044,C5048,C5053	2203-009328	C-CERAMIC,CHIP
C5054,C5062	2203-009328	C-CERAMIC,CHIP
C5003	2203-009537	C-CERAMIC,CHIP
C1093,C2022,C5037	2203-009733	C-CERAMIC,CHIP
C5040,C5042,C5045	2203-009733	C-CERAMIC,CHIP
C5046,C5049,C5050	2203-009733	C-CERAMIC,CHIP
C5052,C5055,C5058	2203-009733	C-CERAMIC,CHIP
C5064,C5066,C5068	2203-009733	C-CERAMIC,CHIP
C5075,C6010,C6011	2203-009733	C-CERAMIC,CHIP
C7001,C7005,C7030	2203-009733	C-CERAMIC,CHIP
C7036,C7037,C7038	2203-009733	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C7039,C7068,C7069	2203-009733	C-CERAMIC,CHIP
C7075,C7076,C7133	2203-009733	C-CERAMIC,CHIP
C7134,C7151,C7152	2203-009733	C-CERAMIC,CHIP
C7071,C7072,C7073	2203-009858	C-CERAMIC,CHIP
C6006	2203-009917	C-CERAMIC,CHIP
C6007	2203-009969	C-CERAMIC,CHIP
C5056	2203-010085	C-CERAMIC,CHIP
L6000	2703-002900	INDUCTOR-SMD
L6001	2703-002953	INDUCTOR-SMD
L1045,L2030	2703-002955	INDUCTOR-SMD
L3016,R7001	2703-002959	INDUCTOR-SMD
L3000	2703-003476	INDUCTOR-SMD
L3015	2703-003970	INDUCTOR-SMD
L1029,L1037,L3012	2703-004012	INDUCTOR-SMD
C1125,C2050,L1033	2703-004013	INDUCTOR-SMD
L1053,L3013	2703-004013	INDUCTOR-SMD
C3070,C7155,L3020	2703-004014	INDUCTOR-SMD
C1082,L2028	2703-004018	INDUCTOR-SMD
C1073	2703-004030	INDUCTOR-SMD
C3056,L1002,L1027	2703-004032	INDUCTOR-SMD
L2007	2703-004032	INDUCTOR-SMD
C1123,C2051,C3032	2703-004034	INDUCTOR-SMD
L3002	2703-004034	INDUCTOR-SMD
C1028,C2013,C2024	2703-004035	INDUCTOR-SMD
L1028,L1036,L1046	2703-004035	INDUCTOR-SMD
L1057	2703-004035	INDUCTOR-SMD
C1065,L1018,L1043	2703-004036	INDUCTOR-SMD
L2003,L3004	2703-004036	INDUCTOR-SMD
C1015,C2007,C2009	2703-004037	INDUCTOR-SMD
C3045,L1004,L1021	2703-004037	INDUCTOR-SMD
L1031,L1039,L1056	2703-004037	INDUCTOR-SMD
L1071,L2004,L2017	2703-004037	INDUCTOR-SMD
C1019,C1120,C2048	2703-004038	INDUCTOR-SMD
C2073,C3013,L1011	2703-004038	INDUCTOR-SMD
L1063,L2013	2703-004038	INDUCTOR-SMD
C1026,L2009,L2025	2703-004171	INDUCTOR-SMD
L7012	2703-004171	INDUCTOR-SMD
C2052	2703-004286	INDUCTOR-SMD
C1016,L1006,L1067	2703-004328	INDUCTOR-SMD

5. MAIN Electrical Parts List

L2001,L2008,L2023	2703-004328	INDUCTOR-SMD
C1109,L1014,L2019	2703-004363	INDUCTOR-SMD
L1025,L1030	2703-004366	INDUCTOR-SMD
L1034,L1048,L3014	2703-004367	INDUCTOR-SMD
L3003	2703-004368	INDUCTOR-SMD
L1017	2703-004408	INDUCTOR-SMD
C1112	2703-004862	INDUCTOR-SMD
L2020	2703-005066	INDUCTOR-SMD
L5000,L5005,L5006	2703-005067	INDUCTOR-SMD
L5007,L5009	2703-005067	INDUCTOR-SMD
L5012	2703-005109	INDUCTOR-SMD
L7006,L7009	2703-005117	INDUCTOR-SMD
L7005	2703-005118	INDUCTOR-SMD
L7011	2703-005200	INDUCTOR-SMD
L5001,L5002,L5003	2703-005201	INDUCTOR-SMD
L5004	2703-005201	INDUCTOR-SMD
L6002	2703-005505	INDUCTOR-SMD
OSC5000	2801-005393	CRYSTAL-UNIT
OSC2000	2805-001106	OSCILLATOR
C4061,C4062,C4063	2901-001690	FILTER-EMI
C4064,C4065,C4083	2901-001690	FILTER-EMI
C4084	2901-001690	FILTER-EMI
F2002	2904-002198	FILTER-SAW
F2001	2904-002339	FILTER-SAW
F1007	2904-002350	FILTER-SAW
F3001,F3002	2904-002355	FILTER-SAW
F3000	2904-002381	FILTER-SAW
F1005,F2000	2904-002397	FILTER-SAW
F1008	2910-000390	FILTER
U2000	2911-000430	FILTER
U1003	2911-000452	FILTER
MIC6000	3003-001219	MIC-CONDENSOR
L6012	3301-002078	CORE-FERRITE
L2014,L2015,L6009	3301-002122	CORE-FERRITE
L6010,L6013,L6014	3301-002122	CORE-FERRITE
L7000,L7001,L7002	3301-002223	CORE-FERRITE
L7003,L7010	3301-002223	CORE-FERRITE
L6004,L6005,L6006	3301-002235	CORE-FERRITE
L6007,L6008,L6011	3301-002235	CORE-FERRITE

5. MAIN Electrical Parts List

L2046	3301-002236	CORE-FERRITE
L1000,L2049	3301-002237	CORE-FERRITE
L2016,L2032,L2034	3301-002238	CORE-FERRITE
L2036,L3008	3301-002238	CORE-FERRITE
L5008	3301-002254	CORE-FERRITE
L5010	3301-002287	CORE-FERRITE
L6003,U6008	3301-002305	CORE-FERRITE
L2012,L2031,L2035	3301-002312	CORE-FERRITE
L7004,L7007,L7008	3301-002312	CORE-FERRITE
RFS1000,RFS1001	3705-001937	CONNECTOR-COAXIAL
SIM4UP	3709-001932	CAF00-21134-1537RF
SIM1	3709-001933	CAF11-08136-1522RF
SIM2,SIM3	3709-001934	CAF99-06033-1534RF
HDC7001,HDC7002	3711-007107	CONNECTOR-HEADER
HDC7000	3711-008508	CONNECTOR-HEADER
HDC7003	3711-008511	CONNECTOR-HEADER
HDC6000,HDC7004	3711-008593	CONNECTOR-HEADER
HDC5000	3711-008847	CONNECTOR-HEADER
ANT6000,ANT6001	3712-001604	CONNECTOR
ANT2000,ANT2001	3712-001621	CONNECTOR
ANT2002,ANT3000	3712-001621	CONNECTOR
ANT2013,ANT2016	3712-001666	CONNECTOR
ANT3003,ANT5000	3712-001666	CONNECTOR
ANT5001,ANT5002	3712-001666	CONNECTOR
ANT5003,ANT5004	3712-001666	CONNECTOR
ANT5005,ANT5006	3712-001666	CONNECTOR
ANT5007,ANT5008	3712-001666	CONNECTOR
ANT5009,ANT5010	3712-001666	CONNECTOR
ANT5011,ANT5012	3712-001666	CONNECTOR
ANT5013	3712-001666	CONNECTOR
F2005	4709-002196	RF-MODULE
F1002	4709-002226	RF-MODULE
F3003	4709-002284	RF-MODULE
F2004	4709-002484	RF-MODULE
F1001,F1003	4709-002589	RF-MODULE
SC6001SP	GH02-16957A	TAPE
GA7001	GH62-00048A	JSM-TSL-2-2.5-1.8BK
SC6000	GH63-12632A	SC-SMJ710F-APT
SC6003	GH63-15420A	SC-SMJ800F-OCTADC

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

SC6001	GH63-16265A	SC-A750F-AP
SC6002	GH63-16266A	SC-A750F-PMIC
SC6005	GH63-16267A	SC-A750F-WIFI
SC6008	GH63-16268A	SC-A750F-TCXO
SC6004	GH98-43570A	SC-A750F-RF

5. MAIN Electrical Parts List

[SM-A750GN]

Parts Code	Design LOC	Description
D5000	0404-001972	DIODE-SCHOTTKY
U6009,U6013,U6017	0406-001561	DIODE-TVS
ZD5002,ZD5003,ZD6002	0406-001561	DIODE-TVS
ZD6004,ZD6011,ZD6022	0406-001561	DIODE-TVS
ZD5004,ZD5005,ZD5006	0406-001592	DIODE-TVS
ZD5011,ZD6015	0406-001592	DIODE-TVS
ZD6005,ZD6006,ZD6007	0406-001717	DIODE-TVS
ZD5001	0406-001728	DIODE-TVS
ZD6000,ZD6001,ZD6018	0406-001743	DIODE-TVS
ZD6019,ZD6020,ZD6021	0406-001743	DIODE-TVS
ZD6013,ZD6014	0406-001781	DIODE-TVS
ZD5012,ZD6016,ZD6017	0406-001789	DIODE-TVS
ZD6009,ZD6010	0406-001797	DIODE-TVS
D6000	0406-001808	DIODE-TVS
Q5000	0505-003618	FET-SILICON
LED5000	0601-003629	LED
LED5001	0601-003734	LED
U1009	1001-001844	IC
U1007	1001-001970	IC
U1005	1001-001974	IC
U3019	1001-001975	IC
U2006	1001-002042	IC
UCP721UP	1105-002915	IC-FLASH
UME5000	1107-002633	IC-FLASH
U3008	1201-003786	IC
PAM1000	1201-004109	IC
U1008	1201-004135	IC
U6000	1201-004156	IC
U3014	1203-008249	IC
U5019	1203-008251	IC
U7016	1203-008431	IC
U6020	1203-008468	IC
U2001	1203-008693	IC
U5021	1203-008719	IC
U7007	1203-008751	IC
U3013	1203-008771	IC
U7008	1203-008850	IC

5. MAIN Electrical Parts List

U7000,U7011	1203-008859	IC
U3001,U7018	1203-008867	IC
U7009	1203-008870	IC
U7017	1203-008872	IC
U3003	1203-008925	IC
U7019	1203-008926	IC
U7003,U7004,U7005	1203-008989	IC
U7013	1203-008989	IC
U5013	1203-008995	IC
U5000	1203-009087	IC
U7002,U7006	1203-009158	IC
U2010	1205-005767	IC
U3004	1205-005860	IC
UCP721	1205-005870	IC
U3006	1205-005979	IC
U3018	1209-002413	IC
U3017	1209-002450	IC
U3016	1209-002586	IC
TH1000,TH4000	1404-001724	THERMISTOR
V7003	1405-001404	VARISTOR
R6036,R6037	2007-003015	R-CHIP
R6034,R6035	2007-007190	R-CHIP
R7005	2007-007480	R-CHIP
R7006	2007-007592	R-CHIP
R2002,R2003,R3010	2007-007741	R-CHIP
R4013,R4015,R4020	2007-007741	R-CHIP
R4021,R5016,R5017	2007-007741	R-CHIP
R5019,R5020	2007-007741	R-CHIP
R6039	2007-007798	R-CHIP
R5001	2007-007942	R-CHIP
R5002	2007-007946	R-CHIP
R3007	2007-008516	R-CHIP
R5012,R6007,R7000	2007-008531	R-CHIP
R7014	2007-008531	R-CHIP
C2089	2007-008579	R-CHIP
C3002,C3003	2007-008588	R-CHIP
R6008	2007-008648	R-CHIP
R6030	2007-008800	R-CHIP
R6038	2007-008808	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

R3006,R5022	2007-009111	R-CHIP
R1009,R4001,R4002	2007-009157	R-CHIP
R5005,R5018,R5023	2007-009157	R-CHIP
R5024,R6042,R7017	2007-009157	R-CHIP
R5006	2007-009158	R-CHIP
R5007,R5021	2007-009171	R-CHIP
R4004,R4035,R5010	2007-009212	R-CHIP
R5011,R5013,R6022	2007-009212	R-CHIP
R6015	2007-009315	R-CHIP
R7007	2007-009352	R-CHIP
R3011,R3012,R4018	2007-009408	R-CHIP
R4022,R4023,R4024	2007-009408	R-CHIP
R4025,R4026,R4027	2007-009408	R-CHIP
R4029,R4030,R4031	2007-009408	R-CHIP
R4032,R4033,R5008	2007-009408	R-CHIP
R6024,R7003,R7004	2007-009408	R-CHIP
R6032	2007-009410	R-CHIP
R3000,R6000	2007-009766	R-CHIP
R6031	2007-009793	R-CHIP
R5004	2007-009801	R-CHIP
R1002,R1003,R1004	2007-009805	R-CHIP
R1005,R2000,R7015	2007-009805	R-CHIP
R6018	2007-009838	R-CHIP
R4005,R4006,R4008	2007-009920	R-CHIP
R4010	2007-009920	R-CHIP
R3001,R3002,R6026	2007-009969	R-CHIP
R5014,R5015	2007-010202	R-CHIP
R3013,R6010	2007-010685	R-CHIP
R4007,R4009,R4011	2007-011043	R-CHIP
R4012,R4028	2007-011043	R-CHIP
R6027	2007-011532	R-CHIP
R5000	2007-012068	R-CHIP
C5107,C5108	2203-000489	C-CERAMIC,CHIP
C3038	2203-000995	C-CERAMIC,CHIP
C3039	2203-001072	C-CERAMIC,CHIP
C3034,C3041	2203-001239	C-CERAMIC,CHIP
C5110,C5113,C5116	2203-005682	C-CERAMIC,CHIP
C7009,C7020	2203-005682	C-CERAMIC,CHIP
C1042,C3067,C7011	2203-005725	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

C7019,C7032	2203-005725	C-CERAMIC,CHIP
C5106,C6005,C6009	2203-005729	C-CERAMIC,CHIP
C6017,C6020,C6022	2203-005729	C-CERAMIC,CHIP
C6024,C7010,C7013	2203-005729	C-CERAMIC,CHIP
C7014,C7016,L1061	2203-005729	C-CERAMIC,CHIP
C2040	2203-005731	C-CERAMIC,CHIP
C5047,C6016,C6021	2203-005732	C-CERAMIC,CHIP
C6023,C6026	2203-005732	C-CERAMIC,CHIP
C1000,C1006,C1018	2203-005736	C-CERAMIC,CHIP
C1020,C1029,C1031	2203-005736	C-CERAMIC,CHIP
C1032,C1033,C1035	2203-005736	C-CERAMIC,CHIP
C1038,C1040,C1048	2203-005736	C-CERAMIC,CHIP
C1051,C1054,C1057	2203-005736	C-CERAMIC,CHIP
C1063,C1066,C1069	2203-005736	C-CERAMIC,CHIP
C1074,C1079,C1081	2203-005736	C-CERAMIC,CHIP
C1092,C1103,C1122	2203-005736	C-CERAMIC,CHIP
C2000,C2005,C2008	2203-005736	C-CERAMIC,CHIP
C2012,C2018,C2020	2203-005736	C-CERAMIC,CHIP
C2026,C2046,C2057	2203-005736	C-CERAMIC,CHIP
C3001,C3004,C3008	2203-005736	C-CERAMIC,CHIP
C3009,C3018,C3021	2203-005736	C-CERAMIC,CHIP
C3024,C3046,C5077	2203-005736	C-CERAMIC,CHIP
C5083,C7154,L1003	2203-005736	C-CERAMIC,CHIP
L1005,L1010,L1013	2203-005736	C-CERAMIC,CHIP
L1020,L1062,L2005	2203-005736	C-CERAMIC,CHIP
L2006,L2010,L2018	2203-005736	C-CERAMIC,CHIP
L3001,L3010,L3011	2203-005736	C-CERAMIC,CHIP
R1006	2203-005736	C-CERAMIC,CHIP
C1049,C1083,C1094	2203-005777	C-CERAMIC,CHIP
C1108,L1008,L1040	2203-005777	C-CERAMIC,CHIP
U1002	2203-005777	C-CERAMIC,CHIP
C1064,C1089,C1107	2203-005789	C-CERAMIC,CHIP
C1127,L1015,L1059	2203-005789	C-CERAMIC,CHIP
L1060	2203-005789	C-CERAMIC,CHIP
C1050,C1055,C1075	2203-005792	C-CERAMIC,CHIP
C1077,C1100,C1101	2203-005792	C-CERAMIC,CHIP
C1102,C2006,C6002	2203-005792	C-CERAMIC,CHIP
C1013,C1091,C1096	2203-005806	C-CERAMIC,CHIP
C1097,C2002,C2003	2203-005806	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C1104	2203-006187	C-CERAMIC,CHIP
C6027	2203-006194	C-CERAMIC,CHIP
C1098	2203-006305	C-CERAMIC,CHIP
C1078,C6003,L1038	2203-006318	C-CERAMIC,CHIP
L1065	2203-006318	C-CERAMIC,CHIP
C6030	2203-006379	C-CERAMIC,CHIP
C2001,C2004,C3020	2203-006400	C-CERAMIC,CHIP
C3033,C3035,C3037	2203-006400	C-CERAMIC,CHIP
C4013,C6012,C6031	2203-006400	C-CERAMIC,CHIP
C6041	2203-006400	C-CERAMIC,CHIP
C1056,C1099	2203-006410	C-CERAMIC,CHIP
C2069,C3050,C3064	2203-006423	C-CERAMIC,CHIP
C3065,C4005,C4012	2203-006423	C-CERAMIC,CHIP
C5074,C5104,C5105	2203-006423	C-CERAMIC,CHIP
C6001,C6015,C6019	2203-006423	C-CERAMIC,CHIP
C3076,C5043	2203-006556	C-CERAMIC,CHIP
C3049	2203-006604	C-CERAMIC,CHIP
C1095,C1105	2203-006611	C-CERAMIC,CHIP
C7156,C7157	2203-006642	C-CERAMIC,CHIP
C6025	2203-006648	C-CERAMIC,CHIP
C3030	2203-006665	C-CERAMIC,CHIP
C4085	2203-006668	C-CERAMIC,CHIP
C1076	2203-006674	C-CERAMIC,CHIP
L1024	2203-006707	C-CERAMIC,CHIP
C1014,C1059,C1061	2203-006839	C-CERAMIC,CHIP
C1062,C1067,C1119	2203-006839	C-CERAMIC,CHIP
C3015,C3029,C4036	2203-006839	C-CERAMIC,CHIP
C5076	2203-006839	C-CERAMIC,CHIP
C4032,C4033,U4003	2203-006846	C-CERAMIC,CHIP
U4004	2203-006846	C-CERAMIC,CHIP
C2053,C2056,C2062	2203-006979	C-CERAMIC,CHIP
C2063,C2067,C2076	2203-006979	C-CERAMIC,CHIP
C2077,C2079,C2091	2203-006979	C-CERAMIC,CHIP
C3044,C3051,C7008	2203-007194	C-CERAMIC,CHIP
C4018,C4023,C4026	2203-007210	C-CERAMIC,CHIP
C4052,C4053,C4069	2203-007210	C-CERAMIC,CHIP
C4086,C5115,C5117	2203-007210	C-CERAMIC,CHIP
C5122,C5127,C5129	2203-007210	C-CERAMIC,CHIP
C3058,C4011,C4024	2203-007317	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C4025,C4040,C4075	2203-007317	C-CERAMIC,CHIP
C5032,C5034,C5035	2203-007317	C-CERAMIC,CHIP
C5036,C5114,C5118	2203-007317	C-CERAMIC,CHIP
C6000,C7004,C7007	2203-007317	C-CERAMIC,CHIP
C7018	2203-007317	C-CERAMIC,CHIP
C2065,C3022,C6029	2203-007391	C-CERAMIC,CHIP
C2028,C3017,C3028	2203-007393	C-CERAMIC,CHIP
C5065,C5070,C5082	2203-007393	C-CERAMIC,CHIP
C5084,C5085,C5086	2203-007393	C-CERAMIC,CHIP
C5103,C5109,C7025	2203-007393	C-CERAMIC,CHIP
C5059,C6034	2203-007456	C-CERAMIC,CHIP
C2055,C2064,C2066	2203-007474	C-CERAMIC,CHIP
C2080,C4049,C4051	2203-007474	C-CERAMIC,CHIP
C4070,C5051	2203-007474	C-CERAMIC,CHIP
C7153	2203-007781	C-CERAMIC,CHIP
C1116,C2027,C2054	2203-007796	C-CERAMIC,CHIP
C2061,C2075,C2078	2203-007796	C-CERAMIC,CHIP
C3011,C3019,C3025	2203-007796	C-CERAMIC,CHIP
C3057,C3060,C3062	2203-007796	C-CERAMIC,CHIP
C3063,C3073,C3081	2203-007796	C-CERAMIC,CHIP
C4002,C4004,C4006	2203-007796	C-CERAMIC,CHIP
C4007,C4008,C4009	2203-007796	C-CERAMIC,CHIP
C4010,C4014,C4015	2203-007796	C-CERAMIC,CHIP
C4019,C4020,C4027	2203-007796	C-CERAMIC,CHIP
C4028,C4029,C4030	2203-007796	C-CERAMIC,CHIP
C4031,C4034,C4035	2203-007796	C-CERAMIC,CHIP
C4037,C4038,C4039	2203-007796	C-CERAMIC,CHIP
C4041,C4042,C4043	2203-007796	C-CERAMIC,CHIP
C4045,C4046,C4055	2203-007796	C-CERAMIC,CHIP
C4056,C4057,C4058	2203-007796	C-CERAMIC,CHIP
C4059,C4060,C4066	2203-007796	C-CERAMIC,CHIP
C4067,C4071,C4072	2203-007796	C-CERAMIC,CHIP
C4073,C4074,C4076	2203-007796	C-CERAMIC,CHIP
C4077,C4078,C4080	2203-007796	C-CERAMIC,CHIP
C4081,C4082,C4087	2203-007796	C-CERAMIC,CHIP
C4088,C4089,C4090	2203-007796	C-CERAMIC,CHIP
C4091,C4092,C4093	2203-007796	C-CERAMIC,CHIP
C4094,C4095,C4096	2203-007796	C-CERAMIC,CHIP
C4097,C4098,C4099	2203-007796	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C4100,C4101,C4102	2203-007796	C-CERAMIC,CHIP
C4103,C4104,C5001	2203-007796	C-CERAMIC,CHIP
C5005,C5006,C5008	2203-007796	C-CERAMIC,CHIP
C5009,C5013,C5014	2203-007796	C-CERAMIC,CHIP
C5015,C5016,C5017	2203-007796	C-CERAMIC,CHIP
C5018,C5019,C5020	2203-007796	C-CERAMIC,CHIP
C5024,C5025,C5026	2203-007796	C-CERAMIC,CHIP
C5029,C5030,C5061	2203-007796	C-CERAMIC,CHIP
C5067,C5071,C5072	2203-007796	C-CERAMIC,CHIP
C5089,C5090,C5091	2203-007796	C-CERAMIC,CHIP
C5092,C5093,C5094	2203-007796	C-CERAMIC,CHIP
C5097,C5098,C5112	2203-007796	C-CERAMIC,CHIP
C5119,C6038,C7002	2203-007796	C-CERAMIC,CHIP
C7003,C7006,C7017	2203-007796	C-CERAMIC,CHIP
C7024,C7026,C7033	2203-007796	C-CERAMIC,CHIP
C7034,C7043,C7045	2203-007796	C-CERAMIC,CHIP
C7057,C7058,C7062	2203-007796	C-CERAMIC,CHIP
C7063,C7067,C7081	2203-007796	C-CERAMIC,CHIP
C7082,C7088,C7089	2203-007796	C-CERAMIC,CHIP
C7144,C7145,C7147	2203-007796	C-CERAMIC,CHIP
C6008	2203-008097	C-CERAMIC,CHIP
C2095,C3000,C3005	2203-008242	C-CERAMIC,CHIP
C3007,C3023,C4001	2203-008242	C-CERAMIC,CHIP
C4003,C4017,C4044	2203-008242	C-CERAMIC,CHIP
C4079,C4105,C5000	2203-008242	C-CERAMIC,CHIP
C5004,C5007,C5010	2203-008242	C-CERAMIC,CHIP
C5011,C5012,C5021	2203-008242	C-CERAMIC,CHIP
C5022,C5023,C5027	2203-008242	C-CERAMIC,CHIP
C5031,C5033,C5126	2203-008242	C-CERAMIC,CHIP
C1041,C1044	2203-008529	C-CERAMIC,CHIP
C5057,C5060	2203-008572	C-CERAMIC,CHIP
C6033	2203-008654	C-CERAMIC,CHIP
C3012,C3055,C3059	2203-008860	C-CERAMIC,CHIP
C3080,C5069,C5087	2203-008860	C-CERAMIC,CHIP
C5088,C5111,C5121	2203-008860	C-CERAMIC,CHIP
C6037,C7012,C7028	2203-008860	C-CERAMIC,CHIP
C7042,C7059,C7060	2203-008860	C-CERAMIC,CHIP
C7061,C7065,C7084	2203-008860	C-CERAMIC,CHIP
C7085,C7086	2203-008860	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C1060,C1090,C3010	2203-008876	C-CERAMIC,CHIP
C3014,C3016,C3026	2203-008876	C-CERAMIC,CHIP
C3027,C5002,C5063	2203-008876	C-CERAMIC,CHIP
C5073,C5079,C5120	2203-008876	C-CERAMIC,CHIP
C7083	2203-008876	C-CERAMIC,CHIP
C3036,C3040	2203-009167	C-CERAMIC,CHIP
C4047,C4054,C4068	2203-009328	C-CERAMIC,CHIP
C5038,C5039,C5041	2203-009328	C-CERAMIC,CHIP
C5044,C5048,C5053	2203-009328	C-CERAMIC,CHIP
C5054,C5062	2203-009328	C-CERAMIC,CHIP
C5003	2203-009537	C-CERAMIC,CHIP
C1093,C2022,C5037	2203-009733	C-CERAMIC,CHIP
C5040,C5042,C5045	2203-009733	C-CERAMIC,CHIP
C5046,C5049,C5050	2203-009733	C-CERAMIC,CHIP
C5052,C5055,C5058	2203-009733	C-CERAMIC,CHIP
C5064,C5066,C5068	2203-009733	C-CERAMIC,CHIP
C5075,C6010,C6011	2203-009733	C-CERAMIC,CHIP
C7001,C7005,C7030	2203-009733	C-CERAMIC,CHIP
C7036,C7037,C7038	2203-009733	C-CERAMIC,CHIP
C7039,C7068,C7069	2203-009733	C-CERAMIC,CHIP
C7075,C7076,C7133	2203-009733	C-CERAMIC,CHIP
C7134,C7151,C7152	2203-009733	C-CERAMIC,CHIP
C7071,C7072,C7073	2203-009858	C-CERAMIC,CHIP
C6006	2203-009917	C-CERAMIC,CHIP
C6007	2203-009969	C-CERAMIC,CHIP
C5056	2203-010085	C-CERAMIC,CHIP
C1071,L6000	2703-002900	INDUCTOR-SMD
L6001	2703-002953	INDUCTOR-SMD
C1087,L1045,L2030	2703-002955	INDUCTOR-SMD
L3016,R7001	2703-002959	INDUCTOR-SMD
L3000	2703-003476	INDUCTOR-SMD
L1054,L3015	2703-003970	INDUCTOR-SMD
L1029,L1037,L1044	2703-004012	INDUCTOR-SMD
L3012	2703-004012	INDUCTOR-SMD
C1125,C2050,L1033	2703-004013	INDUCTOR-SMD
L1053,L3013	2703-004013	INDUCTOR-SMD
C3070,C7155,L3020	2703-004014	INDUCTOR-SMD
C1070,C1082,L1055	2703-004018	INDUCTOR-SMD
L1073,L2028	2703-004018	INDUCTOR-SMD

5. MAIN Electrical Parts List

C1073	2703-004030	INDUCTOR-SMD
C1037,C3056,L1002	2703-004032	INDUCTOR-SMD
L1027,L1050,L2007	2703-004032	INDUCTOR-SMD
C1123,C1124,C2051	2703-004034	INDUCTOR-SMD
C3032,L1041,L3002	2703-004034	INDUCTOR-SMD
C1028,C2013,C2024	2703-004035	INDUCTOR-SMD
L1028,L1036,L1046	2703-004035	INDUCTOR-SMD
L1051,L1057,L1070	2703-004035	INDUCTOR-SMD
C1065,L1018,L1043	2703-004036	INDUCTOR-SMD
L1052,L2003,L3004	2703-004036	INDUCTOR-SMD
C1015,C2007,C2009	2703-004037	INDUCTOR-SMD
C3045,L1004,L1021	2703-004037	INDUCTOR-SMD
L1031,L1039,L1056	2703-004037	INDUCTOR-SMD
L1071,L2004,L2017	2703-004037	INDUCTOR-SMD
C1019,C1120,C2048	2703-004038	INDUCTOR-SMD
C2073,C3013,L1011	2703-004038	INDUCTOR-SMD
L1063,L2013	2703-004038	INDUCTOR-SMD
C1026,L2009,L2025	2703-004171	INDUCTOR-SMD
L7012	2703-004171	INDUCTOR-SMD
C2052	2703-004286	INDUCTOR-SMD
C1016,L1006,L1032	2703-004328	INDUCTOR-SMD
L1067,L2001,L2008	2703-004328	INDUCTOR-SMD
L2023	2703-004328	INDUCTOR-SMD
C1109,L1014,L2019	2703-004363	INDUCTOR-SMD
C1118,L1025,L1030	2703-004366	INDUCTOR-SMD
L1019,L1034,L1048	2703-004367	INDUCTOR-SMD
L3014	2703-004367	INDUCTOR-SMD
L3003	2703-004368	INDUCTOR-SMD
C1110,L1016,L1017	2703-004408	INDUCTOR-SMD
C1115	2703-004763	INDUCTOR-SMD
C1117,C2032,C2035	2703-004764	INDUCTOR-SMD
L1047	2703-004764	INDUCTOR-SMD
C1112,L1035	2703-004862	INDUCTOR-SMD
L2020	2703-005066	INDUCTOR-SMD
L5000,L5005,L5006	2703-005067	INDUCTOR-SMD
L5007,L5009	2703-005067	INDUCTOR-SMD
L5012	2703-005109	INDUCTOR-SMD
L7006,L7009	2703-005117	INDUCTOR-SMD
L7005	2703-005118	INDUCTOR-SMD

5. MAIN Electrical Parts List

L7011	2703-005200	INDUCTOR-SMD
L5001,L5002,L5003	2703-005201	INDUCTOR-SMD
L5004	2703-005201	INDUCTOR-SMD
L6002	2703-005505	INDUCTOR-SMD
L3006,U3005	2703-005555	INDUCTOR-SMD
OSC5000	2801-005393	CRYSTAL-UNIT
OSC2000	2805-001106	OSCILLATOR
C4061,C4062,C4063	2901-001690	FILTER-EMI
C4064,C4065,C4083	2901-001690	FILTER-EMI
C4084	2901-001690	FILTER-EMI
F2002	2904-002198	FILTER-SAW
F1004	2904-002210	FILTER-SAW
F2003	2904-002326	FILTER-SAW
F2001	2904-002339	FILTER-SAW
F1007	2904-002350	FILTER-SAW
F3001,F3002	2904-002355	FILTER-SAW
F3000	2904-002381	FILTER-SAW
F1005,F2000	2904-002397	FILTER-SAW
F1006	2910-000364	FILTER
F1008	2910-000390	FILTER
F1011	2910-000402	FILTER
F1010	2910-000404	FILTER
U2000	2911-000430	FILTER
U1003	2911-000452	FILTER
MIC6000	3003-001219	MIC-CONDENSOR
L6012	3301-002078	CORE-FERRITE
L2014,L2015,L6009	3301-002122	CORE-FERRITE
L6010,L6013,L6014	3301-002122	CORE-FERRITE
L7000,L7001,L7002	3301-002223	CORE-FERRITE
L7003,L7010	3301-002223	CORE-FERRITE
L6004,L6005,L6006	3301-002235	CORE-FERRITE
L6007,L6008,L6011	3301-002235	CORE-FERRITE
L2046	3301-002236	CORE-FERRITE
L1000,L2049	3301-002237	CORE-FERRITE
L2016,L2032,L2034	3301-002238	CORE-FERRITE
L2036,L3008	3301-002238	CORE-FERRITE
L5008	3301-002254	CORE-FERRITE
L5010	3301-002287	CORE-FERRITE
L6003,U6008	3301-002305	CORE-FERRITE

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

L2012,L2031,L2035	3301-002312	CORE-FERRITE
L7004,L7007,L7008	3301-002312	CORE-FERRITE
RFS1000,RFS1001	3705-001937	CONNECTOR-COAXIAL
SIM4UP	3709-001932	CAF00-21134-1537RF
SIM1	3709-001933	CAF11-08136-1522RF
SIM2,SIM3	3709-001934	CAF99-06033-1534RF
HDC7001,HDC7002	3711-007107	CONNECTOR-HEADER
HDC7000	3711-008508	CONNECTOR-HEADER
HDC7003	3711-008511	CONNECTOR-HEADER
HDC6000,HDC7004	3711-008593	CONNECTOR-HEADER
HDC5000	3711-008847	CONNECTOR-HEADER
ANT6000,ANT6001	3712-001604	CONNECTOR
ANT2000,ANT2001	3712-001621	CONNECTOR
ANT2002,ANT3000	3712-001621	CONNECTOR
ANT3001,ANT3002	3712-001626	CONNECTOR
ANT2013,ANT2016	3712-001666	CONNECTOR
ANT3003,ANT5000	3712-001666	CONNECTOR
ANT5001,ANT5002	3712-001666	CONNECTOR
ANT5003,ANT5004	3712-001666	CONNECTOR
ANT5005,ANT5006	3712-001666	CONNECTOR
ANT5007,ANT5008	3712-001666	CONNECTOR
ANT5009,ANT5010	3712-001666	CONNECTOR
ANT5011,ANT5012	3712-001666	CONNECTOR
ANT5013	3712-001666	CONNECTOR
F2005	4709-002196	RF-MODULE
F1002	4709-002226	RF-MODULE
F3003	4709-002284	RF-MODULE
F2004	4709-002484	RF-MODULE
F1001,F1003	4709-002589	RF-MODULE
SC6001SP	GH02-16957A	TAPE
GA7001	GH62-00048A	JSM-TSL-2-2.5-1.8BK
SC6000	GH63-12632A	SC-SMJ710F-APT
SC6003	GH63-15420A	SC-SMJ800F-OCTADC
SC6001	GH63-16265A	SC-A750F-AP
SC6002	GH63-16266A	SC-A750F-PMIC
SC6005	GH63-16267A	SC-A750F-WIFI
SC6008	GH63-16268A	SC-A750F-TCXO
SC6004	GH98-43570A	SC-A750F-RF

5. MAIN Electrical Parts List

[SM-A750G]

Parts Code	Design LOC	Description
D5000	0404-001972	DIODE-SCHOTTKY
U6009,U6013,U6017	0406-001561	DIODE-TVS
ZD5002,ZD5003,ZD6002	0406-001561	DIODE-TVS
ZD6004,ZD6011,ZD6022	0406-001561	DIODE-TVS
ZD5004,ZD5005,ZD5006	0406-001592	DIODE-TVS
ZD5011,ZD6015	0406-001592	DIODE-TVS
ZD6005,ZD6006,ZD6007	0406-001717	DIODE-TVS
ZD5001	0406-001728	DIODE-TVS
ZD6000,ZD6001,ZD6018	0406-001743	DIODE-TVS
ZD6019,ZD6020,ZD6021	0406-001743	DIODE-TVS
ZD6013,ZD6014	0406-001781	DIODE-TVS
ZD5012,ZD6016,ZD6017	0406-001789	DIODE-TVS
ZD6009,ZD6010	0406-001797	DIODE-TVS
D6000	0406-001808	DIODE-TVS
Q5000	0505-003618	FET-SILICON
LED5000	0601-003629	LED
LED5001	0601-003734	LED
U1009	1001-001844	IC
U1007	1001-001970	IC
U1005	1001-001974	IC
U3019	1001-001975	IC
U2006	1001-002042	IC
UCP721UP	1105-002915	IC-FLASH
UME5000	1107-002633	IC-FLASH
U3008	1201-003786	IC
PAM1000	1201-004109	IC
U1008	1201-004135	IC
U6000	1201-004156	IC
U3014	1203-008249	IC
U5019	1203-008251	IC
U7016	1203-008431	IC
U6020	1203-008468	IC
U2001	1203-008693	IC
U5021	1203-008719	IC
U7007	1203-008751	IC
U3013	1203-008771	IC
U7008	1203-008850	IC

5. MAIN Electrical Parts List

U7000,U7011	1203-008859	IC
U7018	1203-008867	IC
U7009	1203-008870	IC
U7017	1203-008872	IC
U3003	1203-008925	IC
U7019	1203-008926	IC
U7003,U7004,U7005	1203-008989	IC
U7013	1203-008989	IC
U5013	1203-008995	IC
U5000	1203-009087	IC
U7002,U7006	1203-009158	IC
U2010	1205-005767	IC
U3004	1205-005860	IC
UCP721	1205-005870	IC
U3018	1209-002413	IC
U3017	1209-002450	IC
U3016	1209-002586	IC
TH1000,TH4000	1404-001724	THERMISTOR
V7003	1405-001404	VARISTOR
R6036,R6037	2007-003015	R-CHIP
R6034,R6035	2007-007190	R-CHIP
R7005	2007-007480	R-CHIP
R7006	2007-007592	R-CHIP
R2002,R2003,R3010	2007-007741	R-CHIP
R4014,R4015,R4020	2007-007741	R-CHIP
R4021,R5016,R5017	2007-007741	R-CHIP
R5019,R5020	2007-007741	R-CHIP
R6039	2007-007798	R-CHIP
R5001	2007-007942	R-CHIP
R5002	2007-007946	R-CHIP
R3007	2007-008516	R-CHIP
R5012,R6007,R7000	2007-008531	R-CHIP
R7014	2007-008531	R-CHIP
C2089	2007-008579	R-CHIP
R6008	2007-008648	R-CHIP
R6030	2007-008800	R-CHIP
R6038	2007-008808	R-CHIP
R3006,R5022	2007-009111	R-CHIP
R1009,R4001,R4002	2007-009157	R-CHIP

5. MAIN Electrical Parts List

R5005,R5018,R5023	2007-009157	R-CHIP
R5024,R6042,R7017	2007-009157	R-CHIP
R5006	2007-009158	R-CHIP
R5007,R5021	2007-009171	R-CHIP
R4004,R4035,R5010	2007-009212	R-CHIP
R5011,R5013,R6022	2007-009212	R-CHIP
R6015	2007-009315	R-CHIP
R7007	2007-009352	R-CHIP
R3011,R3012,R4018	2007-009408	R-CHIP
R4022,R4023,R4024	2007-009408	R-CHIP
R4025,R4026,R4027	2007-009408	R-CHIP
R4029,R4030,R4031	2007-009408	R-CHIP
R4032,R4033,R5008	2007-009408	R-CHIP
R6024,R7003,R7004	2007-009408	R-CHIP
R6032	2007-009410	R-CHIP
R3000,R6000	2007-009766	R-CHIP
R6031	2007-009793	R-CHIP
R5004	2007-009801	R-CHIP
R1002,R1003,R1004	2007-009805	R-CHIP
R1005,R2000,R7015	2007-009805	R-CHIP
R6018	2007-009838	R-CHIP
R4005,R4006,R4008	2007-009920	R-CHIP
R4010	2007-009920	R-CHIP
R6026	2007-009969	R-CHIP
R5014,R5015	2007-010202	R-CHIP
R6010	2007-010685	R-CHIP
R4007,R4009,R4011	2007-011043	R-CHIP
R4012,R4028	2007-011043	R-CHIP
R6027	2007-011532	R-CHIP
R5000	2007-012068	R-CHIP
C5107,C5108	2203-000489	C-CERAMIC,CHIP
C5110,C5113,C5116	2203-005682	C-CERAMIC,CHIP
C7009,C7020	2203-005682	C-CERAMIC,CHIP
C1042,C3067,C7011	2203-005725	C-CERAMIC,CHIP
C7019,C7032	2203-005725	C-CERAMIC,CHIP
C5106,C6005,C6009	2203-005729	C-CERAMIC,CHIP
C6017,C6020,C6022	2203-005729	C-CERAMIC,CHIP
C6024,C7010,C7013	2203-005729	C-CERAMIC,CHIP
C7014,C7016,L1061	2203-005729	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

C2040	2203-005731	C-CERAMIC,CHIP
C5047,C6016,C6021	2203-005732	C-CERAMIC,CHIP
C6023,C6026	2203-005732	C-CERAMIC,CHIP
C1000,C1006,C1018	2203-005736	C-CERAMIC,CHIP
C1020,C1029,C1031	2203-005736	C-CERAMIC,CHIP
C1032,C1033,C1035	2203-005736	C-CERAMIC,CHIP
C1038,C1040,C1048	2203-005736	C-CERAMIC,CHIP
C1051,C1054,C1057	2203-005736	C-CERAMIC,CHIP
C1063,C1066,C1069	2203-005736	C-CERAMIC,CHIP
C1074,C1079,C1081	2203-005736	C-CERAMIC,CHIP
C1092,C1103,C1122	2203-005736	C-CERAMIC,CHIP
C2000,C2005,C2008	2203-005736	C-CERAMIC,CHIP
C2012,C2018,C2020	2203-005736	C-CERAMIC,CHIP
C2026,C2046,C2057	2203-005736	C-CERAMIC,CHIP
C3001,C3004,C3008	2203-005736	C-CERAMIC,CHIP
C3009,C3018,C3021	2203-005736	C-CERAMIC,CHIP
C3024,C3046,C5077	2203-005736	C-CERAMIC,CHIP
C5083,C7154,L1003	2203-005736	C-CERAMIC,CHIP
L1005,L1010,L1013	2203-005736	C-CERAMIC,CHIP
L1020,L1062,L2005	2203-005736	C-CERAMIC,CHIP
L2006,L2010,L2018	2203-005736	C-CERAMIC,CHIP
L3001,L3010,L3011	2203-005736	C-CERAMIC,CHIP
R1006	2203-005736	C-CERAMIC,CHIP
C1049,C1083,C1094	2203-005777	C-CERAMIC,CHIP
C1108,L1008,L1040	2203-005777	C-CERAMIC,CHIP
U1002	2203-005777	C-CERAMIC,CHIP
C1064,C1089,C1107	2203-005789	C-CERAMIC,CHIP
C1127,L1015,L1059	2203-005789	C-CERAMIC,CHIP
L1060	2203-005789	C-CERAMIC,CHIP
C1050,C1055,C1075	2203-005792	C-CERAMIC,CHIP
C1077,C1100,C1101	2203-005792	C-CERAMIC,CHIP
C1102,C2006,C6002	2203-005792	C-CERAMIC,CHIP
C1013,C1091,C1096	2203-005806	C-CERAMIC,CHIP
C1097,C2002,C2003	2203-005806	C-CERAMIC,CHIP
C1104	2203-006187	C-CERAMIC,CHIP
C6027	2203-006194	C-CERAMIC,CHIP
C1098	2203-006305	C-CERAMIC,CHIP
C1078,C6003,L1038	2203-006318	C-CERAMIC,CHIP
L1065	2203-006318	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C6030	2203-006379	C-CERAMIC,CHIP
C2001,C2004,C3020	2203-006400	C-CERAMIC,CHIP
C3033,C4013,C6012	2203-006400	C-CERAMIC,CHIP
C6031,C6041	2203-006400	C-CERAMIC,CHIP
C1056,C1099	2203-006410	C-CERAMIC,CHIP
C2069,C3050,C3064	2203-006423	C-CERAMIC,CHIP
C3065,C4005,C4012	2203-006423	C-CERAMIC,CHIP
C5074,C5104,C5105	2203-006423	C-CERAMIC,CHIP
C6001,C6015,C6019	2203-006423	C-CERAMIC,CHIP
C3076,C5043	2203-006556	C-CERAMIC,CHIP
C3049	2203-006604	C-CERAMIC,CHIP
C1095,C1105	2203-006611	C-CERAMIC,CHIP
C7156,C7157	2203-006642	C-CERAMIC,CHIP
C6025	2203-006648	C-CERAMIC,CHIP
C3030	2203-006665	C-CERAMIC,CHIP
C4085	2203-006668	C-CERAMIC,CHIP
C1076	2203-006674	C-CERAMIC,CHIP
L1024	2203-006707	C-CERAMIC,CHIP
C1014,C1059,C1061	2203-006839	C-CERAMIC,CHIP
C1062,C1067,C1119	2203-006839	C-CERAMIC,CHIP
C4036,C5076	2203-006839	C-CERAMIC,CHIP
C4032,C4033,U4003	2203-006846	C-CERAMIC,CHIP
U4004	2203-006846	C-CERAMIC,CHIP
C2053,C2056,C2062	2203-006979	C-CERAMIC,CHIP
C2063,C2067,C2076	2203-006979	C-CERAMIC,CHIP
C2077,C2079,C2091	2203-006979	C-CERAMIC,CHIP
C3044,C3051,C7008	2203-007194	C-CERAMIC,CHIP
C4018,C4023,C4026	2203-007210	C-CERAMIC,CHIP
C4052,C4053,C4069	2203-007210	C-CERAMIC,CHIP
C4086,C5115,C5117	2203-007210	C-CERAMIC,CHIP
C5122,C5127,C5129	2203-007210	C-CERAMIC,CHIP
C3058,C4011,C4024	2203-007317	C-CERAMIC,CHIP
C4025,C4040,C4075	2203-007317	C-CERAMIC,CHIP
C5032,C5034,C5035	2203-007317	C-CERAMIC,CHIP
C5036,C5114,C5118	2203-007317	C-CERAMIC,CHIP
C6000,C7004,C7007	2203-007317	C-CERAMIC,CHIP
C7018	2203-007317	C-CERAMIC,CHIP
C2065,C6029	2203-007391	C-CERAMIC,CHIP
C2028,C5065,C5070	2203-007393	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C5082,C5084,C5085	2203-007393	C-CERAMIC,CHIP
C5086,C5103,C5109	2203-007393	C-CERAMIC,CHIP
C7025	2203-007393	C-CERAMIC,CHIP
C5059,C6034	2203-007456	C-CERAMIC,CHIP
C2055,C2064,C2066	2203-007474	C-CERAMIC,CHIP
C2080,C4049,C4051	2203-007474	C-CERAMIC,CHIP
C4070,C5051	2203-007474	C-CERAMIC,CHIP
C7153	2203-007781	C-CERAMIC,CHIP
C1116,C2027,C2054	2203-007796	C-CERAMIC,CHIP
C2061,C2075,C2078	2203-007796	C-CERAMIC,CHIP
C3019,C3025,C3057	2203-007796	C-CERAMIC,CHIP
C3060,C3062,C3063	2203-007796	C-CERAMIC,CHIP
C3073,C3081,C4002	2203-007796	C-CERAMIC,CHIP
C4004,C4006,C4007	2203-007796	C-CERAMIC,CHIP
C4008,C4009,C4010	2203-007796	C-CERAMIC,CHIP
C4014,C4015,C4019	2203-007796	C-CERAMIC,CHIP
C4020,C4027,C4028	2203-007796	C-CERAMIC,CHIP
C4029,C4030,C4031	2203-007796	C-CERAMIC,CHIP
C4034,C4035,C4037	2203-007796	C-CERAMIC,CHIP
C4038,C4039,C4041	2203-007796	C-CERAMIC,CHIP
C4042,C4043,C4045	2203-007796	C-CERAMIC,CHIP
C4046,C4055,C4056	2203-007796	C-CERAMIC,CHIP
C4057,C4058,C4059	2203-007796	C-CERAMIC,CHIP
C4060,C4066,C4067	2203-007796	C-CERAMIC,CHIP
C4071,C4072,C4073	2203-007796	C-CERAMIC,CHIP
C4074,C4076,C4077	2203-007796	C-CERAMIC,CHIP
C4078,C4080,C4081	2203-007796	C-CERAMIC,CHIP
C4082,C4087,C4088	2203-007796	C-CERAMIC,CHIP
C4089,C4090,C4091	2203-007796	C-CERAMIC,CHIP
C4092,C4093,C4094	2203-007796	C-CERAMIC,CHIP
C4095,C4096,C4097	2203-007796	C-CERAMIC,CHIP
C4098,C4099,C4100	2203-007796	C-CERAMIC,CHIP
C4101,C4102,C4103	2203-007796	C-CERAMIC,CHIP
C4104,C5001,C5005	2203-007796	C-CERAMIC,CHIP
C5006,C5008,C5009	2203-007796	C-CERAMIC,CHIP
C5013,C5014,C5015	2203-007796	C-CERAMIC,CHIP
C5016,C5017,C5018	2203-007796	C-CERAMIC,CHIP
C5019,C5020,C5024	2203-007796	C-CERAMIC,CHIP
C5025,C5026,C5029	2203-007796	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C5030,C5061,C5067	2203-007796	C-CERAMIC,CHIP
C5071,C5072,C5089	2203-007796	C-CERAMIC,CHIP
C5090,C5091,C5092	2203-007796	C-CERAMIC,CHIP
C5093,C5094,C5097	2203-007796	C-CERAMIC,CHIP
C5098,C5112,C5119	2203-007796	C-CERAMIC,CHIP
C6038,C7002,C7003	2203-007796	C-CERAMIC,CHIP
C7006,C7017,C7024	2203-007796	C-CERAMIC,CHIP
C7026,C7033,C7034	2203-007796	C-CERAMIC,CHIP
C7043,C7045,C7057	2203-007796	C-CERAMIC,CHIP
C7058,C7062,C7063	2203-007796	C-CERAMIC,CHIP
C7067,C7081,C7082	2203-007796	C-CERAMIC,CHIP
C7088,C7089,C7144	2203-007796	C-CERAMIC,CHIP
C7145,C7147	2203-007796	C-CERAMIC,CHIP
C6008	2203-008097	C-CERAMIC,CHIP
C2095,C3000,C3005	2203-008242	C-CERAMIC,CHIP
C3007,C3023,C4001	2203-008242	C-CERAMIC,CHIP
C4003,C4017,C4044	2203-008242	C-CERAMIC,CHIP
C4079,C4105,C5000	2203-008242	C-CERAMIC,CHIP
C5004,C5007,C5010	2203-008242	C-CERAMIC,CHIP
C5011,C5012,C5021	2203-008242	C-CERAMIC,CHIP
C5022,C5023,C5027	2203-008242	C-CERAMIC,CHIP
C5031,C5033,C5126	2203-008242	C-CERAMIC,CHIP
C1041,C1044	2203-008529	C-CERAMIC,CHIP
C5057,C5060	2203-008572	C-CERAMIC,CHIP
C6033	2203-008654	C-CERAMIC,CHIP
C3055,C3059,C3080	2203-008860	C-CERAMIC,CHIP
C5069,C5087,C5088	2203-008860	C-CERAMIC,CHIP
C5111,C5121,C6037	2203-008860	C-CERAMIC,CHIP
C7012,C7028,C7042	2203-008860	C-CERAMIC,CHIP
C7059,C7060,C7061	2203-008860	C-CERAMIC,CHIP
C7065,C7084,C7085	2203-008860	C-CERAMIC,CHIP
C7086	2203-008860	C-CERAMIC,CHIP
C1060,C1090,C3010	2203-008876	C-CERAMIC,CHIP
C5002,C5063,C5073	2203-008876	C-CERAMIC,CHIP
C5079,C5120,C7083	2203-008876	C-CERAMIC,CHIP
C4047,C4054,C4068	2203-009328	C-CERAMIC,CHIP
C5038,C5039,C5041	2203-009328	C-CERAMIC,CHIP
C5044,C5048,C5053	2203-009328	C-CERAMIC,CHIP
C5054,C5062	2203-009328	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

C5003	2203-009537	C-CERAMIC,CHIP
C1093,C2022,C5037	2203-009733	C-CERAMIC,CHIP
C5040,C5042,C5045	2203-009733	C-CERAMIC,CHIP
C5046,C5049,C5050	2203-009733	C-CERAMIC,CHIP
C5052,C5055,C5058	2203-009733	C-CERAMIC,CHIP
C5064,C5066,C5068	2203-009733	C-CERAMIC,CHIP
C5075,C6010,C6011	2203-009733	C-CERAMIC,CHIP
C7001,C7005,C7030	2203-009733	C-CERAMIC,CHIP
C7036,C7037,C7038	2203-009733	C-CERAMIC,CHIP
C7039,C7068,C7069	2203-009733	C-CERAMIC,CHIP
C7075,C7076,C7133	2203-009733	C-CERAMIC,CHIP
C7134,C7151,C7152	2203-009733	C-CERAMIC,CHIP
C7071,C7072,C7073	2203-009858	C-CERAMIC,CHIP
C6006	2203-009917	C-CERAMIC,CHIP
C6007	2203-009969	C-CERAMIC,CHIP
C5056	2203-010085	C-CERAMIC,CHIP
C1071,L6000	2703-002900	INDUCTOR-SMD
L6001	2703-002953	INDUCTOR-SMD
C1087,L1045,L2030	2703-002955	INDUCTOR-SMD
L3016,R7001	2703-002959	INDUCTOR-SMD
L3000	2703-003476	INDUCTOR-SMD
L1054,L3015	2703-003970	INDUCTOR-SMD
L1029,L1037,L1044	2703-004012	INDUCTOR-SMD
L3012	2703-004012	INDUCTOR-SMD
C1125,C2050,L1033	2703-004013	INDUCTOR-SMD
L1053,L3013	2703-004013	INDUCTOR-SMD
C3070,C7155,L3020	2703-004014	INDUCTOR-SMD
C1070,C1082,L1055	2703-004018	INDUCTOR-SMD
L1073,L2028	2703-004018	INDUCTOR-SMD
C1073	2703-004030	INDUCTOR-SMD
C1037,C3056,L1002	2703-004032	INDUCTOR-SMD
L1027,L1050,L2007	2703-004032	INDUCTOR-SMD
C1123,C1124,C2051	2703-004034	INDUCTOR-SMD
C3032,L1041,L3002	2703-004034	INDUCTOR-SMD
C1028,C2013,C2024	2703-004035	INDUCTOR-SMD
L1028,L1036,L1046	2703-004035	INDUCTOR-SMD
L1051,L1057,L1070	2703-004035	INDUCTOR-SMD
C1065,L1018,L1043	2703-004036	INDUCTOR-SMD
L1052,L2003,L3004	2703-004036	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

C1015,C2007,C2009	2703-004037	INDUCTOR-SMD
C3045,L1004,L1021	2703-004037	INDUCTOR-SMD
L1031,L1039,L1056	2703-004037	INDUCTOR-SMD
L1071,L2004,L2017	2703-004037	INDUCTOR-SMD
C1019,C1120,C2048	2703-004038	INDUCTOR-SMD
C2073,C3013,L1011	2703-004038	INDUCTOR-SMD
L1063,L2013	2703-004038	INDUCTOR-SMD
C1026,L2009,L2025	2703-004171	INDUCTOR-SMD
L7012	2703-004171	INDUCTOR-SMD
C2052	2703-004286	INDUCTOR-SMD
C1016,L1006,L1032	2703-004328	INDUCTOR-SMD
L1067,L2001,L2008	2703-004328	INDUCTOR-SMD
L2023	2703-004328	INDUCTOR-SMD
C1109,L1014,L2019	2703-004363	INDUCTOR-SMD
C1118,L1025,L1030	2703-004366	INDUCTOR-SMD
L1019,L1034,L1048	2703-004367	INDUCTOR-SMD
L3014	2703-004367	INDUCTOR-SMD
L3003	2703-004368	INDUCTOR-SMD
C1110,L1016,L1017	2703-004408	INDUCTOR-SMD
C1115	2703-004763	INDUCTOR-SMD
C1117,C2032,C2035	2703-004764	INDUCTOR-SMD
L1047	2703-004764	INDUCTOR-SMD
C1112,L1035	2703-004862	INDUCTOR-SMD
L2020	2703-005066	INDUCTOR-SMD
L5000,L5005,L5006	2703-005067	INDUCTOR-SMD
L5007,L5009	2703-005067	INDUCTOR-SMD
L5012	2703-005109	INDUCTOR-SMD
L7006,L7009	2703-005117	INDUCTOR-SMD
L7005	2703-005118	INDUCTOR-SMD
L7011	2703-005200	INDUCTOR-SMD
L5001,L5002,L5003	2703-005201	INDUCTOR-SMD
L5004	2703-005201	INDUCTOR-SMD
L6002	2703-005505	INDUCTOR-SMD
OSC5000	2801-005393	CRYSTAL-UNIT
OSC2000	2805-001106	OSCILLATOR
C4061,C4062,C4063	2901-001690	FILTER-EMI
C4064,C4065,C4083	2901-001690	FILTER-EMI
C4084	2901-001690	FILTER-EMI
F2002	2904-002198	FILTER-SAW

5. MAIN Electrical Parts List

F1004	2904-002210	FILTER-SAW
F2003	2904-002326	FILTER-SAW
F2001	2904-002339	FILTER-SAW
F1007	2904-002350	FILTER-SAW
F3001,F3002	2904-002355	FILTER-SAW
F3000	2904-002381	FILTER-SAW
F1005,F2000	2904-002397	FILTER-SAW
F1006	2910-000364	FILTER
F1008	2910-000390	FILTER
F1011	2910-000402	FILTER
F1010	2910-000404	FILTER
U2000	2911-000430	FILTER
U1003	2911-000452	FILTER
MIC6000	3003-001219	MIC-CONDENSOR
L6012	3301-002078	CORE-FERRITE
L2014,L2015,L6009	3301-002122	CORE-FERRITE
L6010,L6013,L6014	3301-002122	CORE-FERRITE
L7000,L7001,L7002	3301-002223	CORE-FERRITE
L7003,L7010	3301-002223	CORE-FERRITE
L6004,L6005,L6006	3301-002235	CORE-FERRITE
L6007,L6008,L6011	3301-002235	CORE-FERRITE
L2046	3301-002236	CORE-FERRITE
L1000,L2049	3301-002237	CORE-FERRITE
L2016,L2032,L2034	3301-002238	CORE-FERRITE
L2036,L3008	3301-002238	CORE-FERRITE
L5008	3301-002254	CORE-FERRITE
L5010	3301-002287	CORE-FERRITE
L6003,U6008	3301-002305	CORE-FERRITE
L2012,L2031,L2035	3301-002312	CORE-FERRITE
L7004,L7007,L7008	3301-002312	CORE-FERRITE
RFS1000,RFS1001	3705-001937	CONNECTOR-COAXIAL
SIM4UP	3709-001932	CAF00-21134-1537RF
SIM1	3709-001933	CAF11-08136-1522RF
SIM2,SIM3	3709-001934	CAF99-06033-1534RF
HDC7001,HDC7002	3711-007107	CONNECTOR-HEADER
HDC7000	3711-008508	CONNECTOR-HEADER
HDC7003	3711-008511	CONNECTOR-HEADER
HDC6000,HDC7004	3711-008593	CONNECTOR-HEADER
HDC5000	3711-008847	CONNECTOR-HEADER

5. MAIN Electrical Parts List

ANT6000,ANT6001	3712-001604	CONNECTOR
ANT2000,ANT2001	3712-001621	CONNECTOR
ANT2002,ANT3000	3712-001621	CONNECTOR
ANT2013,ANT2016	3712-001666	CONNECTOR
ANT3003,ANT5000	3712-001666	CONNECTOR
ANT5001,ANT5002	3712-001666	CONNECTOR
ANT5003,ANT5004	3712-001666	CONNECTOR
ANT5005,ANT5006	3712-001666	CONNECTOR
ANT5007,ANT5008	3712-001666	CONNECTOR
ANT5009,ANT5010	3712-001666	CONNECTOR
ANT5011,ANT5012	3712-001666	CONNECTOR
ANT5013	3712-001666	CONNECTOR
F2005	4709-002196	RF-MODULE
F1002	4709-002226	RF-MODULE
F3003	4709-002284	RF-MODULE
F2004	4709-002484	RF-MODULE
F1001,F1003	4709-002589	RF-MODULE
SC6001SP	GH02-16957A	TAPE
GA7001	GH62-00048A	JSM-TSL-2-2.5-1.8BK
SC6000	GH63-12632A	SC-SMJ710F-APT
SC6003	GH63-15420A	SC-SMJ800F-OCTADC
SC6001	GH63-16265A	SC-A750F-AP
SC6002	GH63-16266A	SC-A750F-PMIC
SC6005	GH63-16267A	SC-A750F-WIFI
SC6008	GH63-16268A	SC-A750F-TCXO
SC6004	GH98-43570A	SC-A750F-RF

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.